

SC400



Service Manual

Advance SC400 17 B 9087310020 - SC400 17 E - 9087312020

Nilfisk SC400 43 B 9087311020

Nilfisk SC400 43 B 9087318020 - SC400 43 E - 9087313020

Table of Contents

Table of Contents	2
General Information	5
Machine General Description	5
Service Manual Purpose and Field of Application	5
Other Reference Manuals	5
Conventions.	6
Service and Spare Parts	6
Serial Number Label	6
Safety	7
Symbols	7
General Instructions	7
120 VAC Grounding Instructions (for Advance machine)	10
Machine Lifting.	11
Machine Transportation	11
Machine Nomenclature - Battery Version (know your machine).	12
Handlebar with Control Panel - Battery Version	14
Machine Nomenclature - Cable Version (know your machine).	15
Handlebar with Control Panel - Cable Version	17
Service and Diagnostic Equipment	18
Technical Data - Battery Version	19
Technical Data - Cable Version	20
Dimensions	21
Maintenance	22
Scheduled Maintenance Table	22
Control System - Battery Version	23
Functional Description	23
Wiring Diagram	24
Component Locations	25
Removal and Installation	26
Specifications	30
Controls and Functions	35
Control System - Cable Version.	38
Functional Description	38
Fuses	38
Wiring Diagram	39
Component Locations	40
Troubleshooting	41
Removal and Installation	42
Specifications	46
Controls and Functions	49
Controls and Functions (continues)	50
Electrical System - Battery Version	51
Functional Description	51
Fuses	51
Wiring Diagram	51
Component Locations	52
Maintenance and Adjustments	53
Troubleshooting	58
Machine Wiring Diagram	59
Specifications	60

Electrical System - Cable Version	61
Main Wiring Diagram	.61
Specifications	.62
Recovery System - Battery Version	63
Functional Description	.63
Wiring Diagram	.63
Component Locations	.64
Maintenance and Adjustments	.65
Troubleshooting	.66
Removal and Installation	.67
Specifications	.70
Recovery System - Cable Version.	71
Functional Description	.71
Wiring Diagram	.71
Component Locations	.72
Maintenance and Adjustments	.73
Troubleshooting	.74
Removal and Installation	.75
Specifications	.78
Scrub System, Disc - Battery Version	79
Functional Description	.79
Wiring Diagram	.79
Component Locations	.80
Maintenance and Adjustments	.81
Troubleshooting	.83
Removal and Installation	.84
Specifications	.90
Scrub System, Disc - Cable Version	91
Functional Description	.91
Wiring Diagram	.91
Component Locations	.92
Maintenance and Adjustments	.93
Troubleshooting	.95
Removal and Installation	.96
Specifications	103
Solution System - Battery Version	104
Functional Description	104
Wiring Diagram	104
Component Locations	105
Maintenance and Adjustments	106
Troubleshooting	107
Specifications	107
Solution System - Cable Version	108
Functional Description	108
Wiring Diagram	108
Component Locations	109
Maintenance and Adjustments	110
Troubleshooting	111
Specifications	111

Squeegee System 112
Functional Description 112
Component Locations 113
Maintenance and Adjustments 114
Troubleshooting 116
Removal and Installation 117
Specifications 118

Wheel System, Non-Traction 119
Component Locations 119
Specifications 120

General Information

Machine General Description

The SC400 is a “walk behind” industrial machine designed to wash and dry floors, in civil or industrial environments, in one pass. The machine is powered by on-board batteries (Battery version) and with electric mains via power supply cable (cable version). The machine is equipped with a single disc brush, a controlled solution flow dosing system and a rear squeegee with blades, which dries the floor by vacuuming the dirty water.

Service Manual Purpose and Field of Application

The Service Manual is a technical resource intended to help service technicians when carrying out maintenance and repairs on the SC400, to guarantee the best cleaning performance and a long working life for the machine.

Please read this manual carefully before performing any maintenance and repair procedure on the machine.

Other Reference Manuals

Model	Product Code	User Manual	Spare Parts List
Advance SC400 - BATTERY	9087310020	9099626000	9099627000
Advance SC400 - CABLE	9087312020	9099630000	9099631000
Nilfisk SC400 - BATTERY	9087311020 - 9087318020	9099612000	9099613000
Nilfisk SC400 - CABLE	9087313020	9099626000	9099627000

These manuals are available at:

- Local Nilfisk-Advance Retailer
- Nilfisk-Advance website: www.nilfisk.com - www.advance-us.com

Conventions

Forward, backward, front, rear, left or right are intended with reference to the operator’s position, that is to say in driving position with the hands on the handlebar.


Service and Spare Parts

Service and repairs must be performed only by authorised personnel or Nilfisk Service Centers. The authorised personnel is trained directly at the manufacturer’s premises and has original spare parts and accessories. Contact Nilfisk Retailer indicated below for service or to order spare parts and accessories, specifying the machine model and serial number.

(Apply Retailer label here)

Serial Number Label

The machine model name and serial number are marked on the plate (see the example to the side). Product number and year of production are marked on the same plate. This information is useful when requiring machine spare parts. Use the following table to write down the machine identification data.

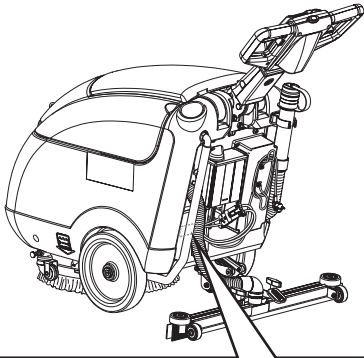

Model: Scrubber-Dryer SC400 17 B

Prod. Nr: 9087310020

GVW: 136 kg/300 lb IPX4

29 A Charg. 110-240Vac 50-60 Hz

Type E Scrubber Dryer

Conform to:
UL STD 583

Certified to:
CSA STD C22.2 N.68-92



Intertek
3084826

Serial No:

Date code:

LpA = 65 dB(A)

Battery 24 Vdc





Advance
A Nilfisk-Advance Brand

"Made in Hungary"
Nilfisk-Advance, Inc.
Plymouth, MN, USA
www.advance-us.com

Model
Product Nr.
Serial No.

Safety

The following symbols indicate potentially dangerous situations. Always read this information carefully and take all necessary precautions to safeguard people and property.

Symbols



Danger! *It indicates a dangerous situation with risk of death for the operator.*



Warning! *It indicates a potential risk of injury for people or damage to objects.*



Caution! *It indicates a caution related to important or useful functions.*



Note: *It indicates a remark related to important or useful functions.*

General Instructions

Specific warnings and cautions to inform about potential damages to people and machine are shown below.



Warning! *Make sure to follow the safety precautions to avoid situations that may lead to serious injuries.*

- This machine must be used by properly trained operators only.
- Do not wear jewels when working near electrical components.
- Do not work under the lifted machine, if it is not securely fixed.
- Do not operate the machine near toxic, dangerous, flammable and/or explosive powders, liquids or vapors. This machine is not suitable for collecting dangerous powders.
- **BATTERY version** - Before performing any cleaning, maintenance, repair or replacement procedure, turn the program selection knob to “0” and disconnect the battery connector.
- (For WET batteries only). Keep the battery away from sparks, flames and incandescent material. During the normal operation explosive gases are released.
- (For WET batteries only). Battery charging produces highly explosive hydrogen gas. Keep the battery cover open during battery charging and perform this procedure in well-ventilated areas and away from naked flames.
- **CABLE version** - Before performing any cleaning, maintenance, repair or replacement procedure, turn the main switch to “0” and disconnect the plug from the mains socket.



Caution! *Make sure to follow the safety precautions to avoid situations that may lead to serious injuries, damages to materials or equipments.*

- Carefully read all the instructions before performing any maintenance/repair procedure.
- Always protect the machine against the sun, rain and bad weather, both under operation and inactivity condition. Store the machine indoors, in a dry place.
- Before using the machine, close all doors and/or covers.
- This machine is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the machine by a person responsible for their safety. Children should be supervised to ensure that they do not play with the machine.
- Close attention is necessary when used near children.
- Use only as shown in this Manual. Use only Nilfisk's recommended accessories.
- Check the machine carefully before each use, always check that all the components have been assembled before use. If the machine is not perfectly assembled it can cause damages to people and properties.
- Take all necessary precautions to prevent hair, jewels and loose clothes from being caught by the machine moving parts.
- Do not use the machine on slopes with a gradient exceeding the specifications.
- Do not use the machine on incline.
- Do not tilt the machine more than the angle indicated on the machine itself, in order to prevent instability.
- Do not use the machine in particularly dusty areas.
- Use the machine only where a proper lighting is provided.
- While using this machine, take care not to cause damage to people or objects.
- Do not bump into shelves or scaffoldings, especially where there is a risk of falling objects.
- Do not lean liquid containers on the machine, use the relevant can holder.
- The machine working temperature must be between 0°C and +40°C.
- The storage temperature must be between 0°C and +40°C.
- The humidity must be between 30% and 95%.
- When using floor cleaning detergents, follow the instructions on the labels of the detergent bottles.
- To handle floor cleaning detergents, wear suitable gloves and protections.
- Do not use the machine as a means of transport; do not push/tow it.
- Do not allow the brush to operate while the machine is stationary to avoid damaging the floor.
- In case of fire, use a powder fire extinguisher, not a water one.
- Do not tamper with the machine safety guards and follow the ordinary maintenance instructions scrupulously.
- Do not allow any object to enter into the openings. Do not use the machine if the openings are clogged. Always keep the openings free from dust, hairs and any other foreign material which could reduce the air flow.
- Do not remove or modify the plates affixed to the machine.
- This machine cannot be used on roads or public streets.
- Pay attention during machine transportation when temperature is below freezing point. The water in the recovery tank or in the hoses could freeze and seriously damage the machine.

- Use only brushes supplied with the machine or those specified in the User Manual. Using other brushes could reduce safety.
- If parts must be replaced, require ORIGINAL spare parts from an Authorised Dealer or Retailer.
- Do not wash the machine with direct or pressurised water jets, or with corrosive substances.
- The machine must be disposed of properly, because of the presence of toxic-harmful materials (batteries, oils, etc.), which are subject to standards that require disposal in special centres (see the User Manual).
- **BATTERY version** - Before using the battery charger, ensure that frequency and voltage values, indicated on the machine serial number plate, match the mains voltage.
- Do not pull or carry the machine by the battery charger cable and never use the battery charger cable as a handle. Do not close a door on the battery charger cable, or pull the battery charger cable around sharp edges or corners. Do not run the machine on the battery charger cable.
- To reduce the risk of fire, electric shock, or injury, do not leave the machine unattended when it is plugged in.
- Keep the battery charger cable away from heated surfaces.
- Before performing any maintenance procedure, disconnect the battery charger cable from the electrical mains to avoid any risk of fire, electric shock or injuries.
- Do not smoke while charging the batteries.
- (For WET batteries only). When lead (WET) batteries are installed on the machine, do not tilt the machine for more than 30° from the horizontal plane to prevent the highly corrosive acid from leaking out of the batteries. If the machine must be tilted to perform any maintenance procedure, remove the batteries.
- **CABLE version** - The machine power supply cable is grounded and the relevant plug is grounded too. In case of machine malfunction or breakdown, grounding connection reduces the risk of electric shock.
- The power supply cable plug must be connected to an appropriate outlet, which is grounded according to law in force.
- Improper connection can cause electric shock. Consult a qualified technician to make sure that the outlet is properly grounded.
- Do not tamper with the power supply cable plug. If the power supply cable plug cannot be connected to the outlet, have new grounded outlet installed by a qualified technician, according to the law in force.
- Before connecting the power supply plug to the electrical mains, check that frequency and voltage, shown on the machine serial number plate, match the electrical mains voltage.
- Do not unplug the machine by pulling the supply cable. To unplug, grasp the plug, not the cable.
- Do not handle the plug or the machine with wet hands.
- Turn off all controls before unplugging.
- Regularly check the power supply cable for damages, cracks, cuts and wear. If necessary, replace it.
- If the power supply cable is damaged, it must be replaced by the Manufacturer or by an authorised Service Centre.
- To avoid any risk, if the power supply cable is damaged, contact the Advance Service Center or a qualified technician.
- Do not pull or carry the machine by the power supply cable and never use the power supply cable as a handle. Do not close a door on the power supply cable, or pull the power supply cable around sharp edges or corners. Do not run the machine on the power supply cable.
- The rotating brush must not come into contact with the power supply cable.
- Keep the supply cable away from heated surfaces.
- To reduce the risk of fire, electric shock, or injury, do not leave the machine unattended when it is plugged in. Disconnect the machine from the electrical mains when not in use and before performing maintenance procedures.
- In case of machine malfunctions, ensure that these are not due to lack of maintenance. If necessary, request assistance from the authorised personnel or from an authorised Service Center.

- If the machine
 - does not work properly
 - is damaged
 - has water or foam leaks
 - has been left outdoors exposed to bad weather conditions
 - is wet or has been dropped into water
- turn it off immediately and contact the Advance Service Center or a qualified technician.

 
 

120 VAC Grounding Instructions (for Advance machine)

This appliance must be grounded. If it should electrically malfunction, grounding provides a path of least resistance for electric current to reduce the risk of electric shock. This appliance is equipped with a cord having an equipment-grounding conductor and grounding plug. The plug must be plugged into an appropriate outlet that is properly installed and grounded in accordance with all local codes and ordinances.



Warning! *Make sure to follow the safety precautions to avoid situations that may lead to serious injuries.*

- The machine must be used with an extension power cord as follows:
 - minimum length 15 feet
 - type S, or ST, or SO, or STO, or STW
 - minimum rate 300V 140/167°F (60/75°C)
- Improper connection of the equipment-grounding conductor can result in a risk of electric shock. Check with a qualified electrician or service person if you are in doubt as to whether the outlet is properly grounded. Do not modify the plug provided with the appliance. If it will not fit the outlet, have a proper outlet installed by a qualified electrician.
- This appliance is for use on a nominal 120V circuit, and has a grounding plug that looks like the plug (B). A temporary adapter (B and C) may be used to connect this plug to a 2-pole receptacle (B), if a properly grounded outlet is not available. The temporary adapter should be used only until a properly grounded outlet (A) can be installed by a qualified electrician. The green-colored rigid ear, tab, or the like extending from the adapter must be connected to a permanent ground such as a properly grounded outlet box cover. Whenever the adapter is used, it must be held in place by a metal screw. Grounding adapters are not approved for use in Canada.
- Replace the plug if the grounding pin is damaged or broken.
- The Green (or Green/Yellow) wire in the cord is the grounding wire. When replacing a plug, this wire must be attached to the grounding pin only.
- Extension cords connected to this machine should be 12 gauge, three-wire cords with three-prong plugs and outlets. DO NOT use extension cords more than 50 feet (15 m) long.

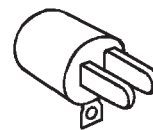**A****B****C**

Machine Lifting



Warning! Do not work under the lifted machine, if it is not securely fixed.

Machine Transportation



Warning! Before transporting the machine, make sure that:


All covers are closed.

The recovery tank and the detergent tank are empty.


The batteries are disconnected.

The machine is securely fastened to the means of transport.

Machine Nomenclature - Battery Version (know your machine)

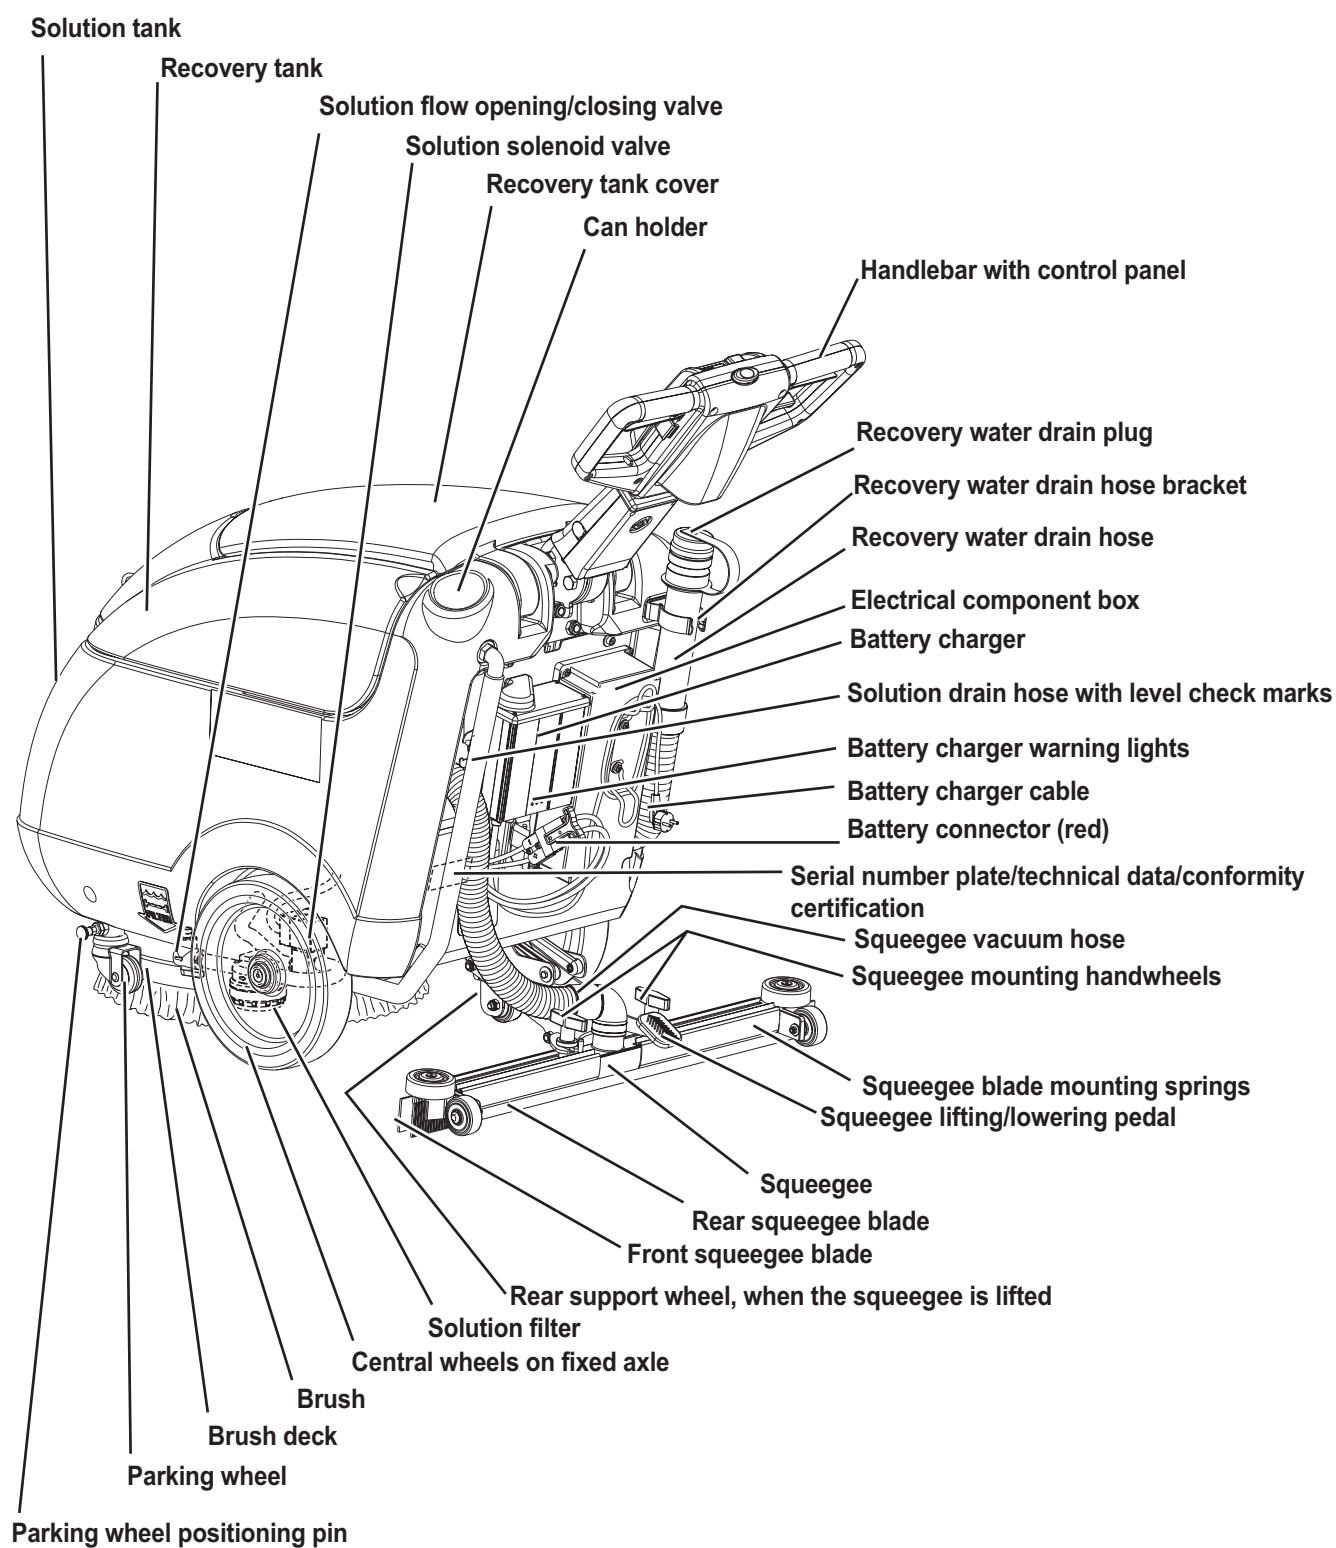


Machine Nomenclature - Battery Version (Continues)

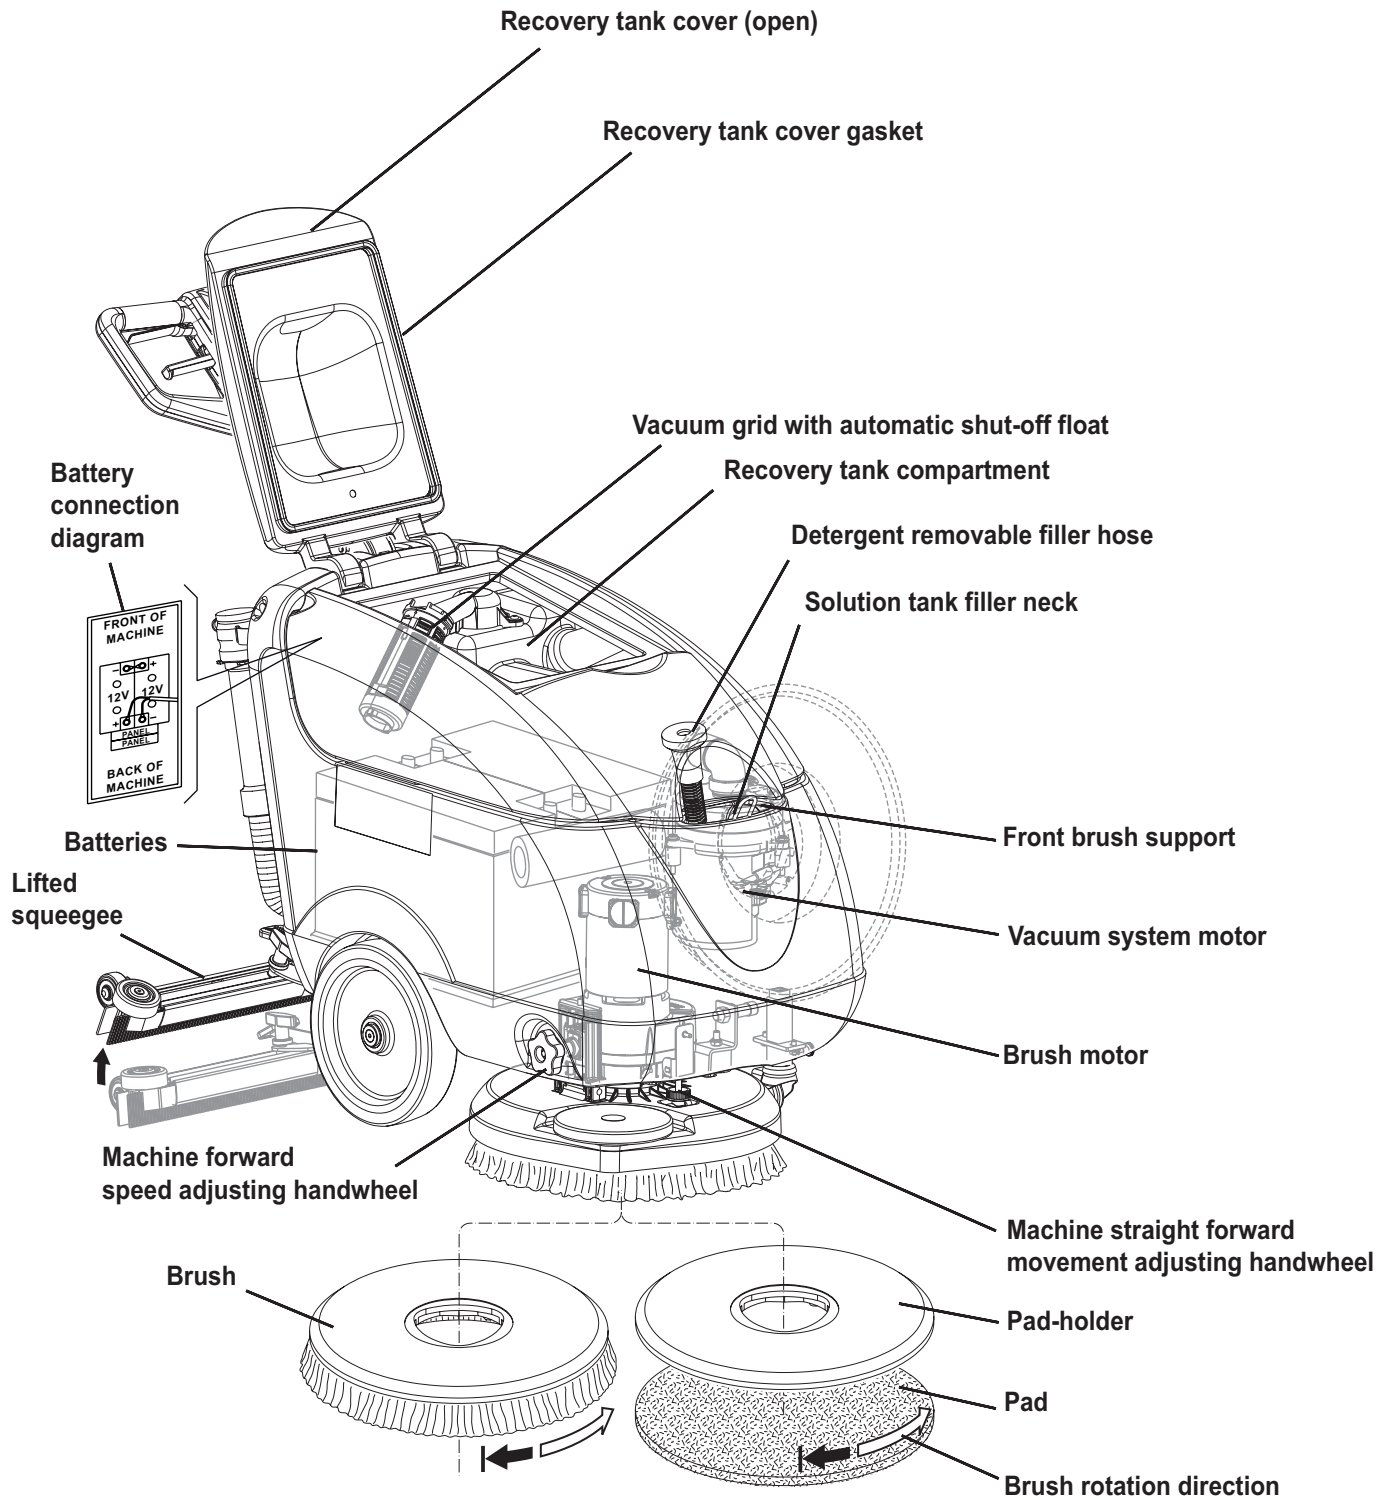


P200003

Handlebar with Control Panel - Battery Version

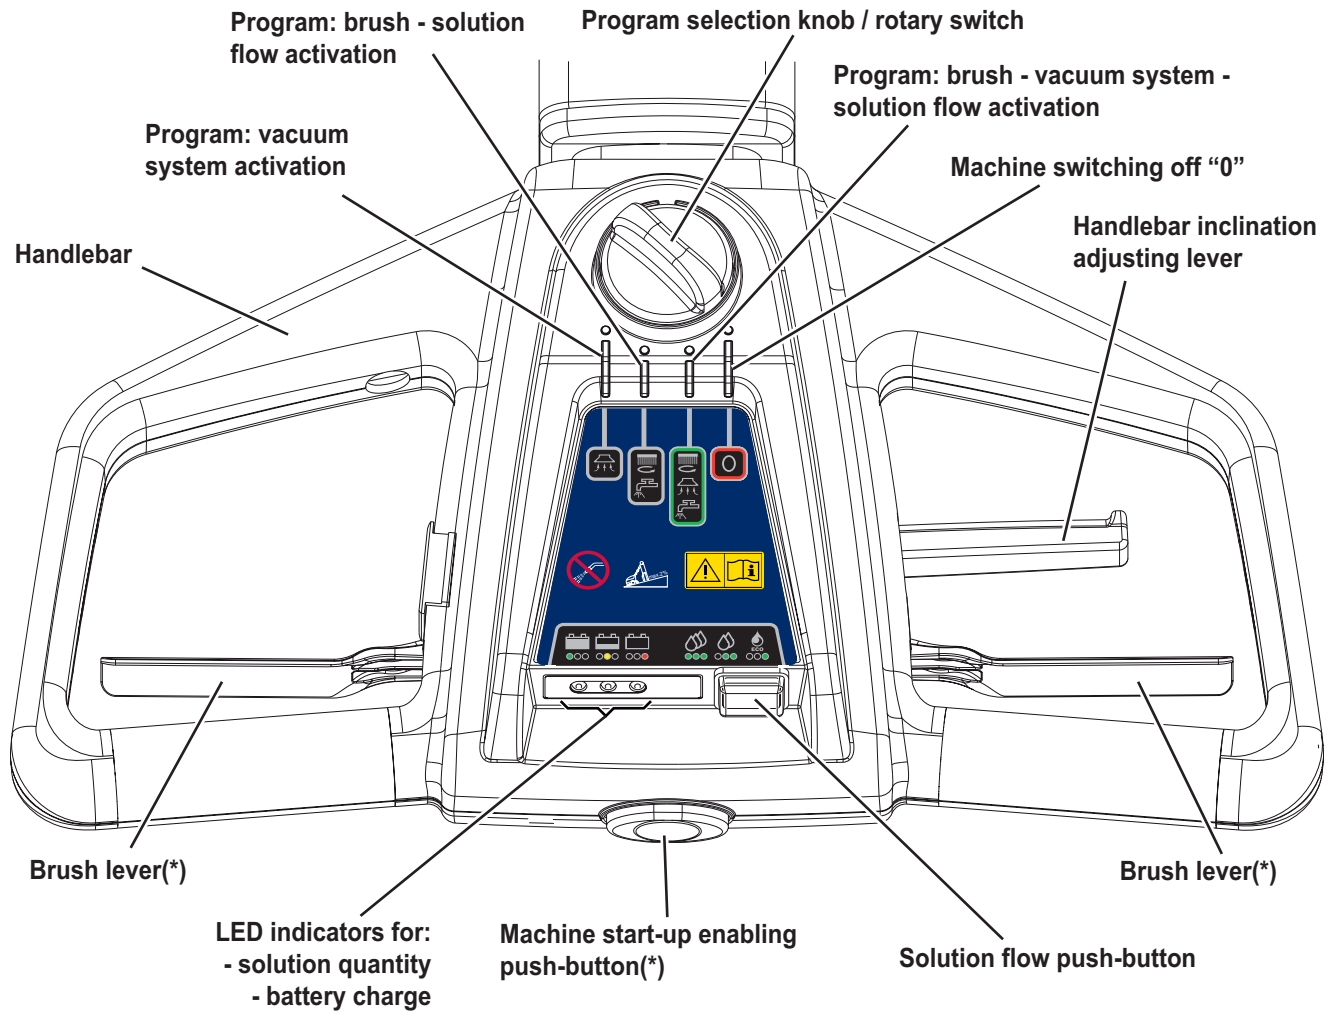


(*) The brush levers operate only after pushing the machine start-up enabling push-button

Machine Nomenclature - Cable Version (know your machine)

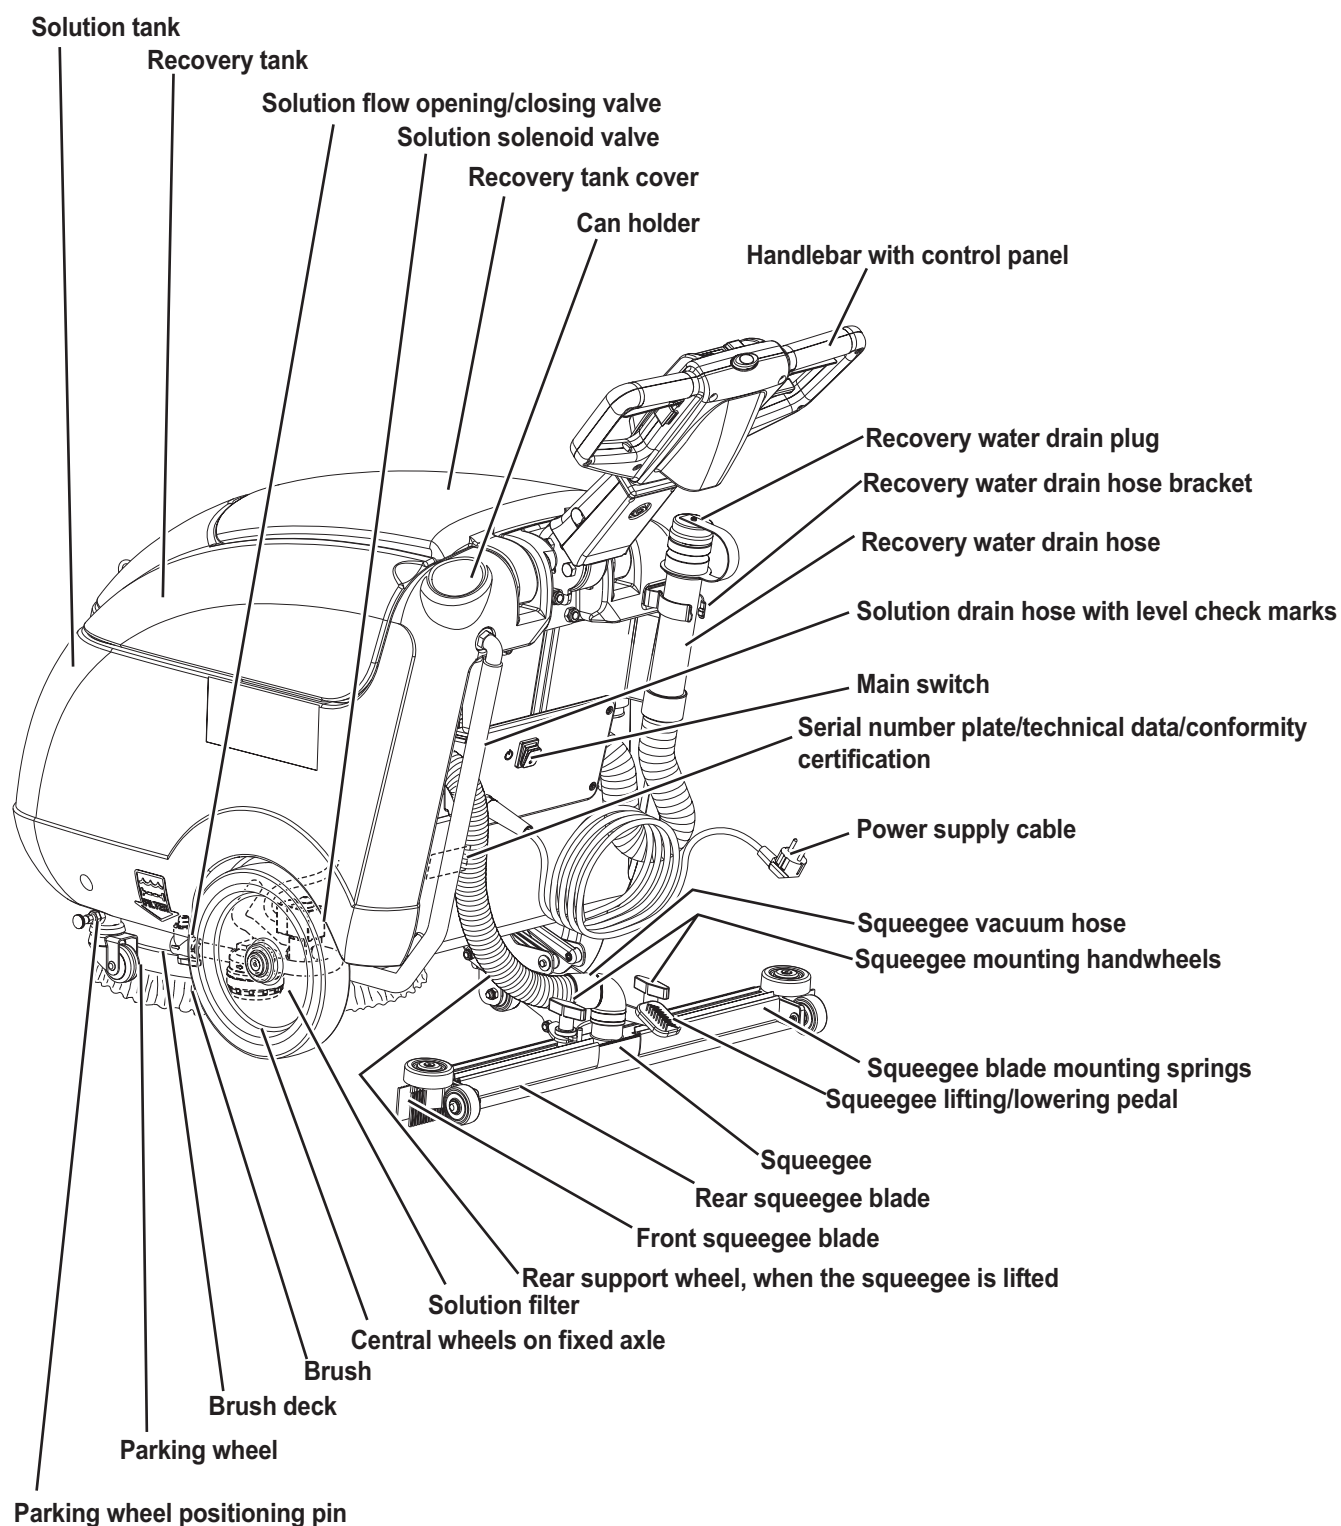


Machine Nomenclature - Cable Version (Continues)

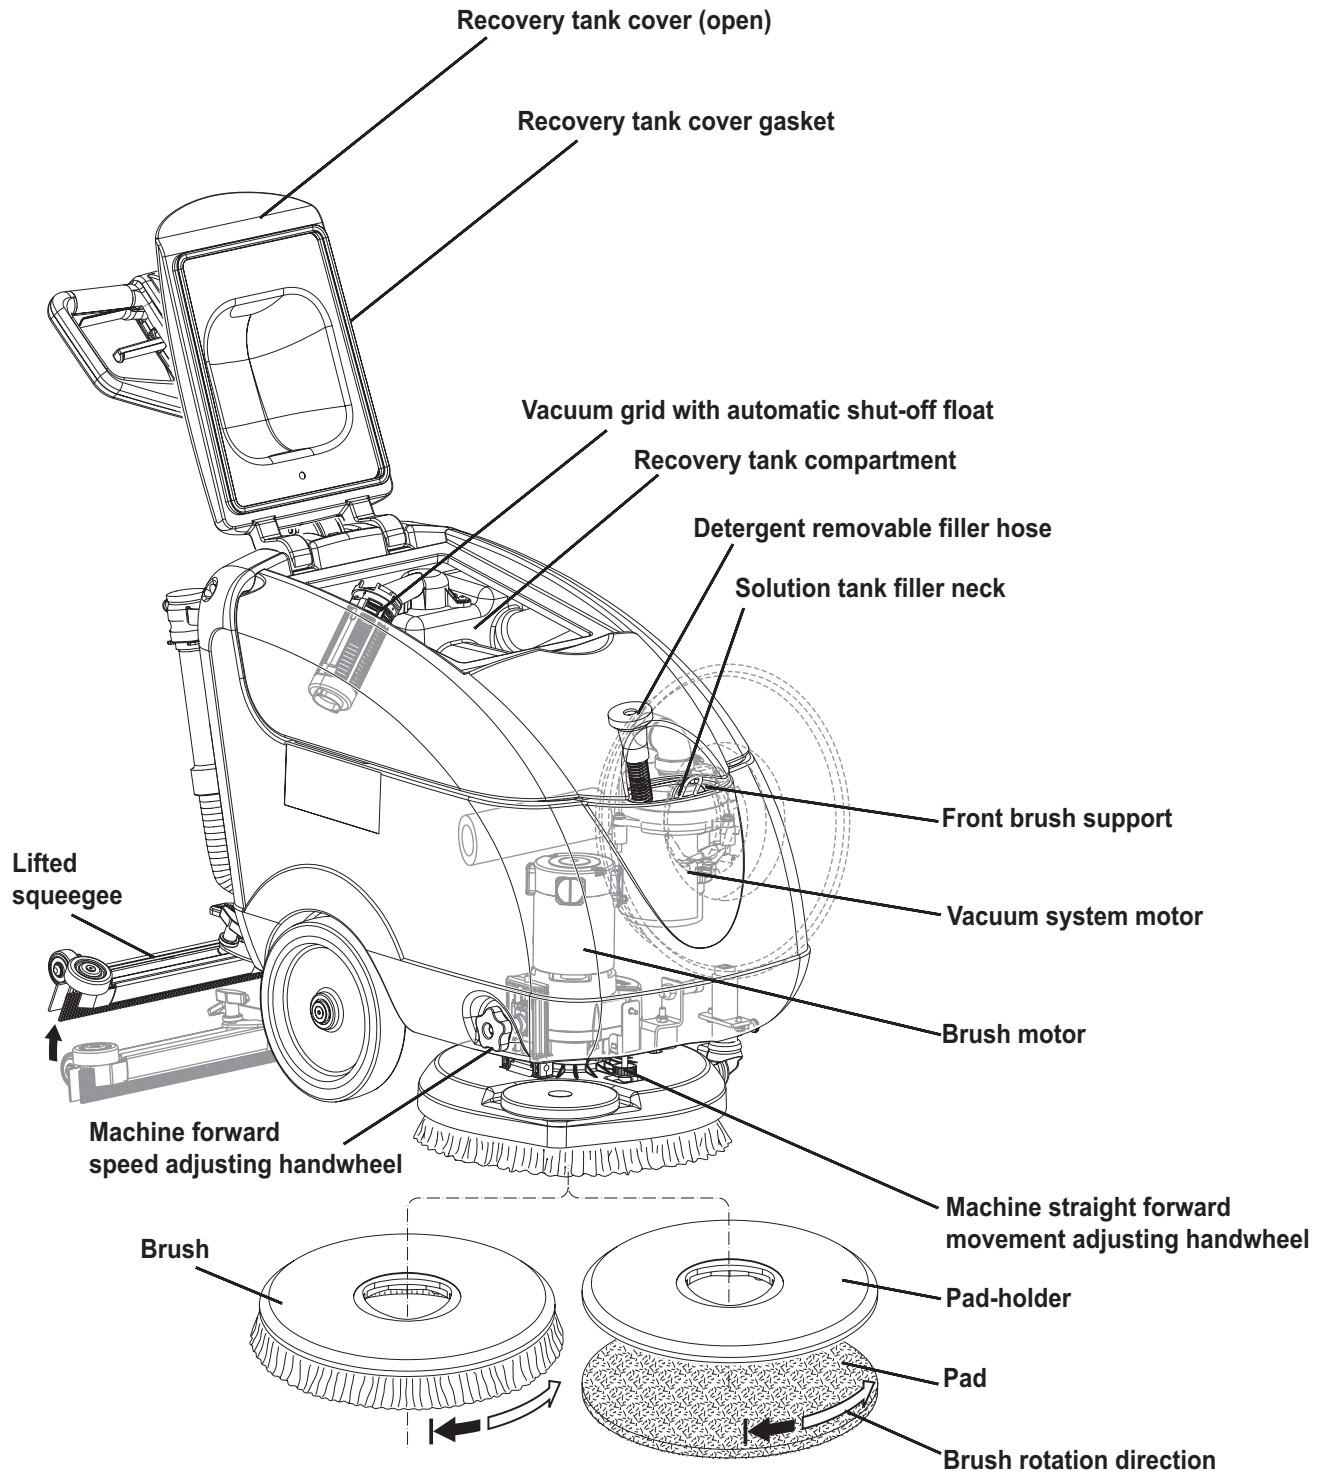

P200043E

Handlebar with Control Panel - Cable Version

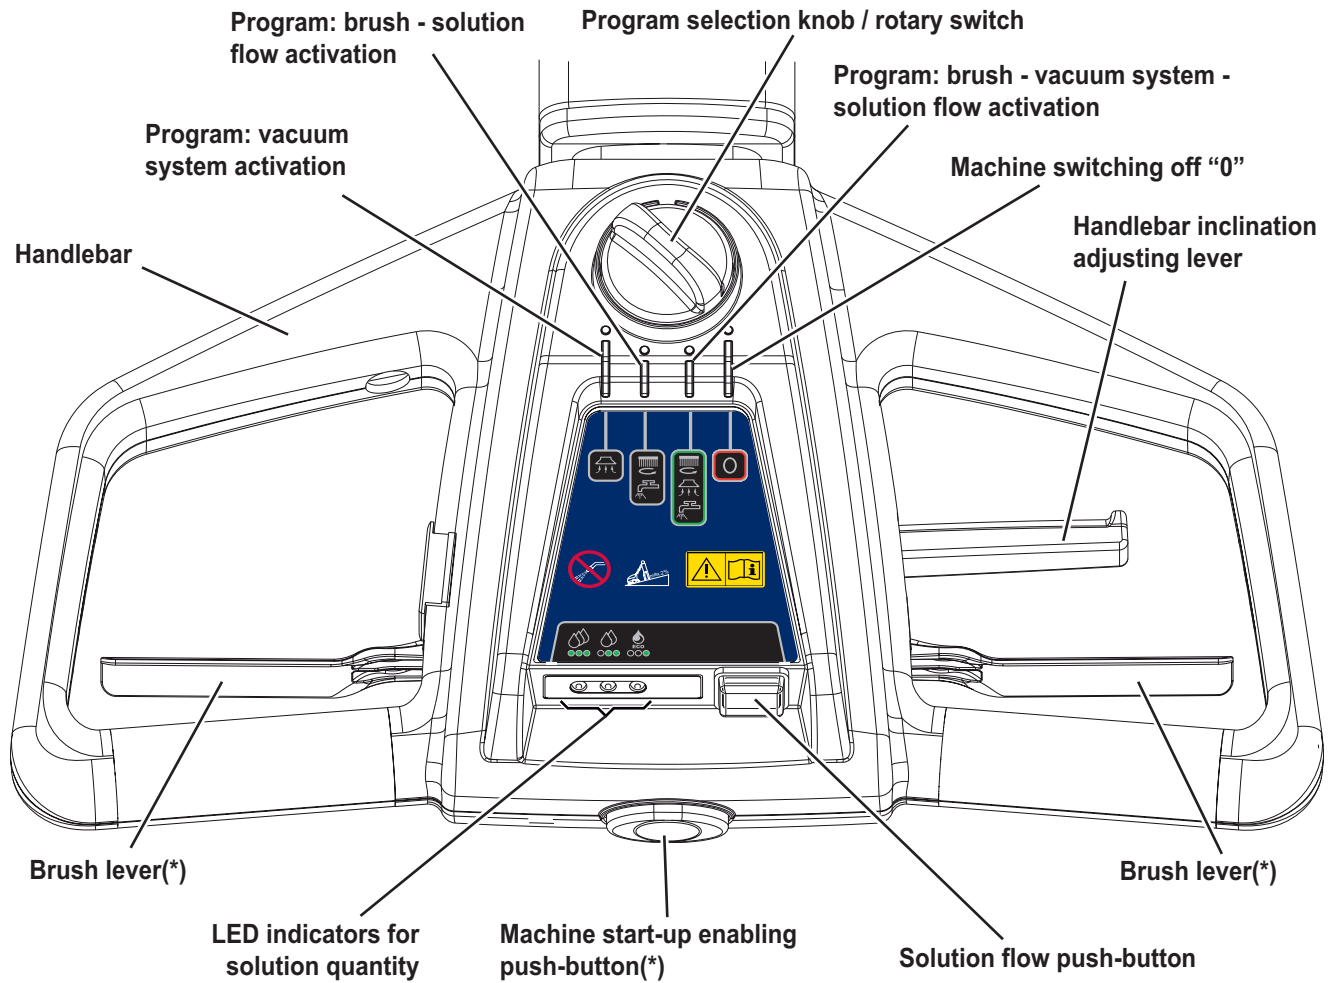

(*) The brush levers operate only after pushing the machine start-up enabling push-button

Service and Diagnostic Equipment


Besides a complete set of standard meters, the following instruments are necessary to perform fast checks, maintenance and repairs on Nilfisk-Advance machines:

Besides a complete set of standard meters, the following instruments are necessary to perform fast checks and repairs on Nilfisk-Advance machines:

- Laptop computer charged with the current version of EzParts, Adobe Reader and (if possible) Internet connection
- Digital Volt Meter (DVM)
- Amp clamp with possibility of making DC measurements
- Hydrometer
- Battery charge tester to check 12V batteries
- Static control wrist strap
- Dynamometric wrench set
- A copy of the User Manual and Spare Parts List of the machine to be serviced (provided with the machine or available at www.advance-us.com or other Nilfisk-Advance websites).

The following equipment is also available at Nilfisk-Advance Centers:

- Vacuum water lift gauge, P/N 56205281

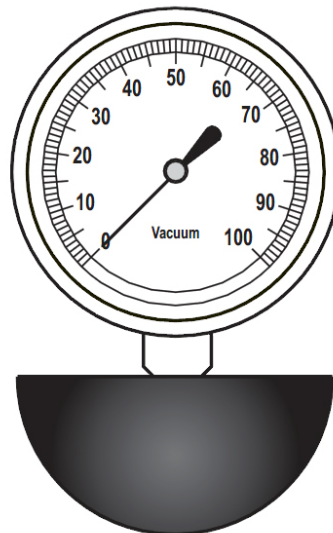


Technical Data - Battery Version

Descriptions / Model		Advance SC400 17 B	Nilfisk SC400 43 B FULL PKG	Nilfisk SC400 43 B	
Solution tank capacity		6.0 US gal (23 liters)			
Recovery tank capacity		5.5 US gal (21 liters)			
Machine length		48.4 in (1,230 mm)			
Machine width with squeegee		28.3 in (720 mm)			
Machine width without squeegee		22.4 in (570 mm)			
Min/max machine height with adjustable handlebar		28.5 - 43.9 in (725 - 1,115 mm)			
Minimum turning radius		29.5 in (750 mm)			
Cleaning width		17 in (430 mm)			
Diameter of wheels on fixed axle		9.8 in (250 mm)			
Wheel pressure on the floor		290 psi (2 N/mm²)			
Brush/pad diameter		17 in (430 - 432 mm)			
Brush pressure with full tank and lowered squeegee		77 lb (35 kg)			
Solution flow	LEDs on	0	1	2	3
	Value	0	0.1 gpm (0.4 lit/min)	0.26 gpm (1.0 lit/min)	0.42 gpm (1.6 lit/min)
Sound pressure level at workstation (ISO 11201, ISO 4871, EN 60335-2-72) (LpA)		65 dB(A) ± 3 dB(A)			
Machine sound pressure level (ISO 3744, ISO 4871, EN 60335-2-72) (LwA)		89 dB(A)			
Vibration level at the operator's arms (ISO 5349-1, EN 60335-2-72)		< 98.4 in/s² (< 2.5 m/s²)			
Maximum gradient when working		2%			
IP protection class		X4			
Protection class (electric)		III			
Vacuum system motor power		0.4 hp (300 W)			
Vacuum water lift (blocked)		47.2 inH₂O (1,200 mmH₂O)			
Brush motor power		0.6 hp (450 W)			
Brush motor speed		155 rpm			
Total absorbed power		29 A (0.75 kW)			
Battery compartment size		13.7x17.7x10.2 in (350x350x260 mm)			
Battery voltage		24V			
Standard batteries (2)		-	12V - 50 Ah C5 (AGM) Spiracell	-	
Battery charger		100-240 VAC			
Work autonomy (standard batteries)		1.5 hour			
Weight without batteries and with empty tanks		130 lb (59 kg)			
Gross vehicle weight (GVW)		300 lb (136 kg)			
Shipping weight		179 lb (81 kg)	267 lb (121 kg)	179 lb (81 kg)	

Technical Data - Cable Version

Descriptions / Model		Advance SC400 17 E		Nilfisk SC400 43 E	
Solution tank capacity		6,0 US gal (23 Liters)			
Recovery tank capacity		5,5 US gal (21 Liters)			
Machine length		48,4 in (1.230 mm)			
Machine width with squeegee		28,3 in (720 mm)			
Machine width without squeegee		22,4 in (570 mm)			
Min/max machine height with adjustable handlebar		28,5 - 43,9 in (725 - 1.115 mm)			
Minimum turning radius		29,5 in (750 mm)			
Cleaning width		17 in (430 mm)			
Diameter of wheels on fixed axle		9,8 in (250 mm)			
Wheel pressure on the floor		188 psi (1.3 N/mm²)			
Brush/pad diameter		17 in (430 - 432 mm)			
Brush pressure with full tank and lowered squeegee		83.7 lb (38 kg)			
Solution flow	LEDs on	0	1	2	3
	Value	0	0.1 gpm (0.4 lit/min)	0.26 gpm (1.0 lit/min)	0.42 gpm (1.6 lit/min)
Sound pressure level at workstation (ISO 11201, ISO 4871, EN 60335-2-72) (LpA)		70 dB(A) ± 3 dB(A)			
Machine sound pressure level (ISO 3744, ISO 4871, EN 60335-2-72) (LwA)		87 dB(A)			
Vibration level at the operator's arms (ISO 5349-1, EN 60335-2-72)		< 98,4 in/s² (< 2,5 m/s²)			
Maximum gradient when working		2%			
IP protection class		X4			
Protection class (electric)		I			
Vacuum system motor power		0.73 hp (550 W)			
Vacuum water lift (blocked)		0.0127 MPa (1.300 mmH₂O)			
Brush motor power		0.73 hp (550 W)		1.100 W	
Brush motor speed		180 rpm		150 rpm	
Electrical system voltage		115 V - 60 Hz		230 V - 50/60 Hz	
Total absorbed power		10 A (1.1 kW)		1,6 kW	
Weight with empty tanks		145.5 lb (66 kg)			
Gross vehicle weight (GVW)		271.2 lb (123 kg)			
Shipping weight		194 lb (88 kg)			
Counterweight (optional Nilfisk only)		72 lb (33 kg)			

Dimensions

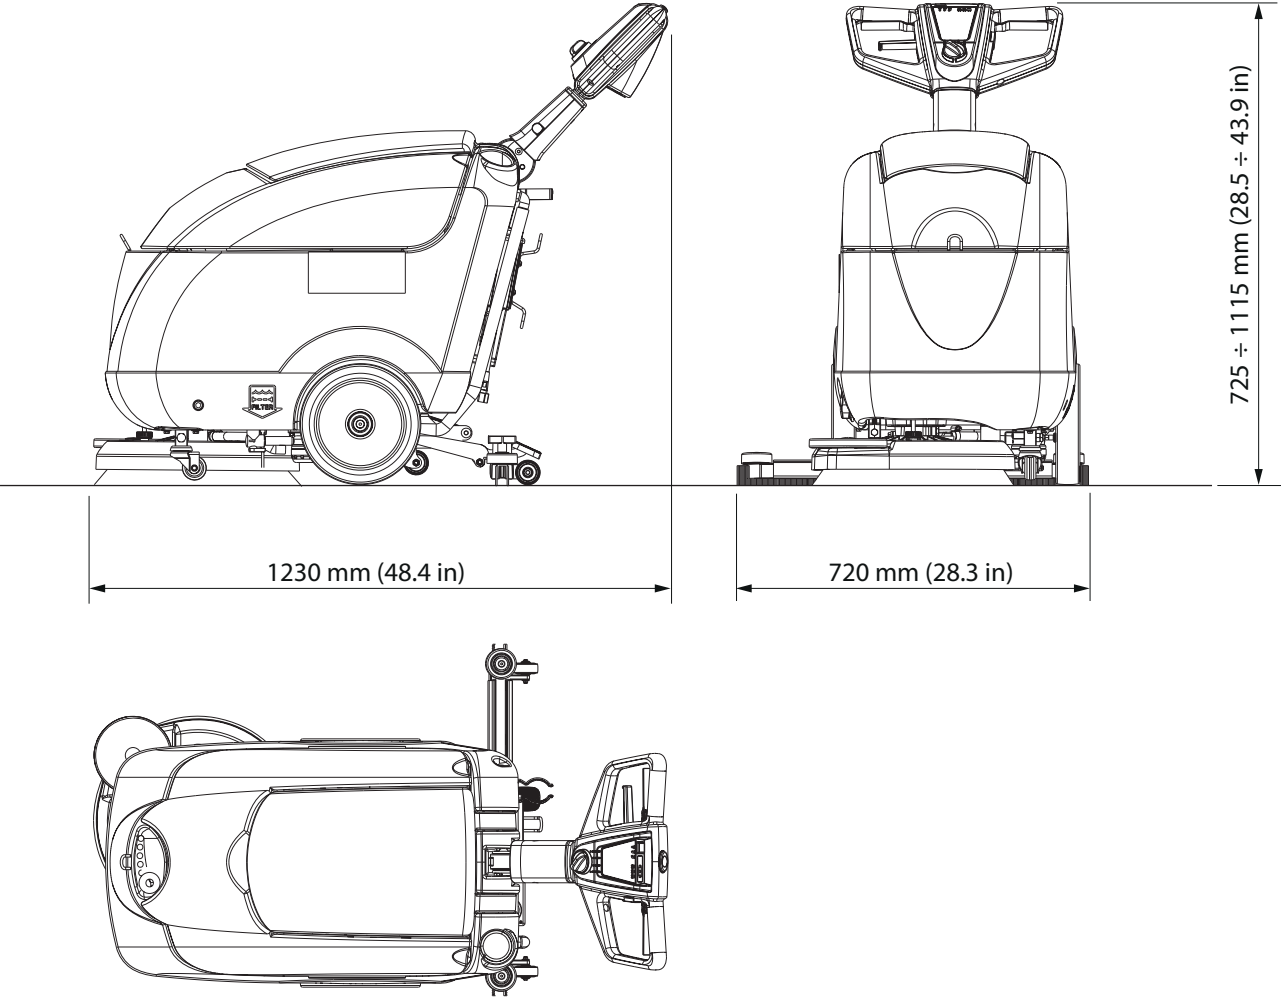

P200074

Maintenance

The lifespan of the machine and its maximum operating safety are ensured by correct and regular maintenance.



Warning! *Read carefully the instructions in the Safety chapter before performing any maintenance procedure.*

The following table provides the scheduled maintenance. The intervals shown may vary according to particular working conditions, which are to be defined by the person in charge of the maintenance. For instructions on maintenance procedures, see the following paragraphs.

Scheduled Maintenance Table

Procedure	Daily, after using the machine	Weekly	Every six months	Yearly
Battery Charging (Battery version)				
Squeegee Cleaning				
Brush Cleaning				
Tank and Vacuum Grid Cleaning				
Check power supply cable (Cable version)				
Squeegee Blade Check and Replacement				
Solution Filter Cleaning				
WET battery fluid level check (Battery version)				
Brush motor carbon brush check and replacement (Battery version)				
Vacuum system motor carbon brush check and replacement				

Control System - Battery Version

Functional Description

The function control is performed with the program selection knob/rotary switch (SW1), the machine start-up enabling push button (SW2) (which can be used simultaneously with the brush levers) and the solution flow push-button (SW3).

The switch outputs are read by the function electronic board (EB1) which consequently controls the relevant outputs: electromagnetic switch (K1) for brush motor, relay (K2) for vacuum system motor, while the solenoid valve (EV1) is activated directly from the electronic board.

The control circuits are protected by the fuse (F3) on the function electronic board (EB1).

The LED electronic board (EBLED) has a set of 3 two-color LEDs. The set of 3 LEDs is used to indicate either battery charge level or water flow level depending on the current mode of operation:

LEDs to display the battery charge level		
LEDs to set water flow level		


The LED electronic board (EBLED) is driven by the function electronic board (EB1).

Diagram of Output Activation according to the Position of the Switches (SW1), (SW2) and (SW3)

Program selection knob /rotary switch (SW1) settings	Machine start-up enabling push button (SW2) settings (with brush levers)	Function electronic board (EB1) + LED electronic board (EBLED)	Brush motor (M1) + solenoid valve (EV1)	Vacuum system motor (M2)
0	Pressed/released	Off	Off	Off
	Released	On	Off	On
	Pressed	On	On	On
	Released	On	Off	Off
	Pressed	On	On	Off
	Pressed/released	On	Off	On

Solution flow push-button setting (SW3)	LED display	Symbols	Solenoid valve ON time (EV1)	Solenoid valve OFF time (EV1)
0			-	Always OFF
1			1 sec	5 sec
2			3 sec	3 sec
3			Always ON	-





Wiring Diagram

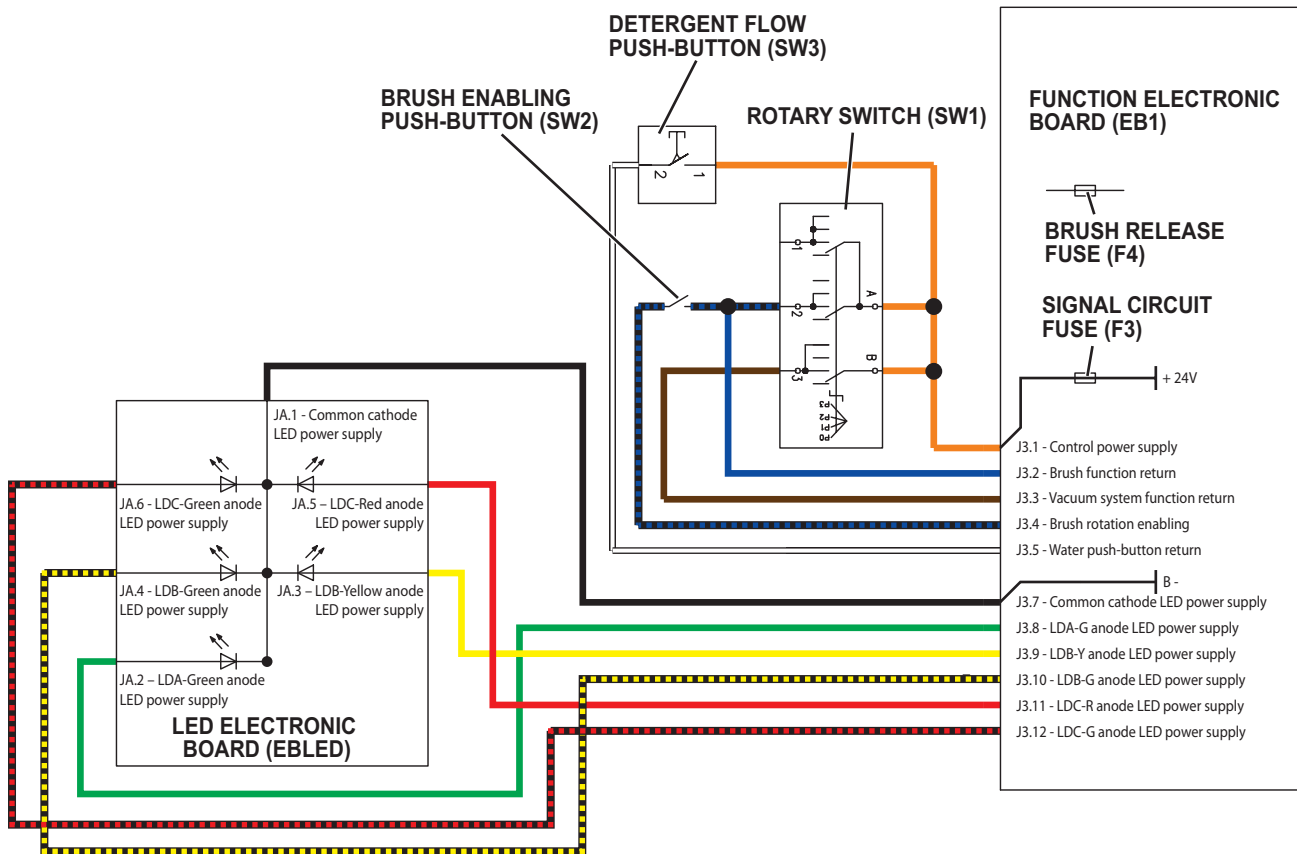

P200075

Component Locations

- Handlebar with control panel
- Program selection knob / rotary switch (SW1)
- LED indicators for:
 - solution quantity
 - battery charge
- Rotary switch (SW1)
- Brush levers
- Machine start-up enabling push button (SW2)
- Solution flow push-button (SW3)
- Function electronic board (EB1)
- LED electronic board (EBLED)
- Low consumption circuit fuse (F3)
- Wiring harness
- Handlebar inclination adjusting lever

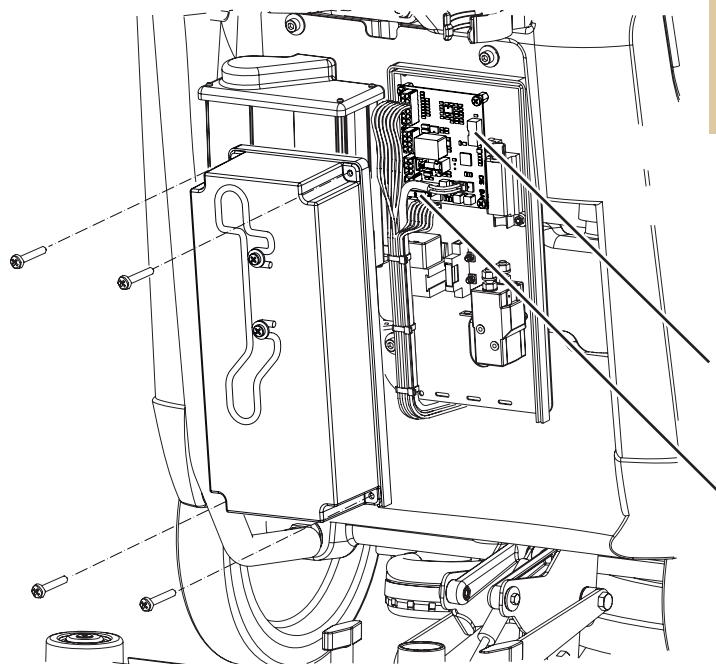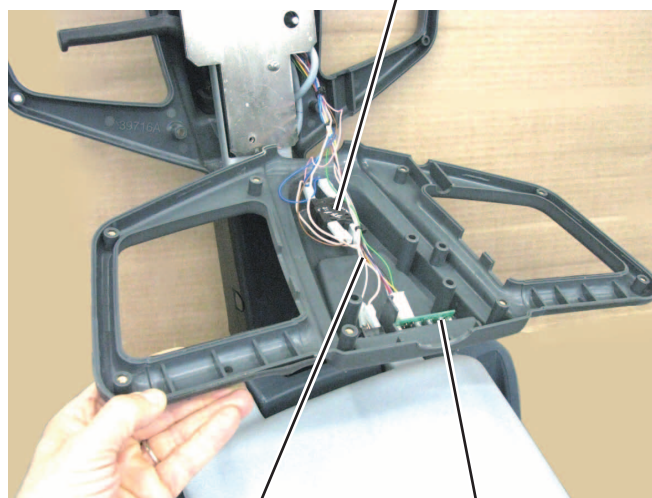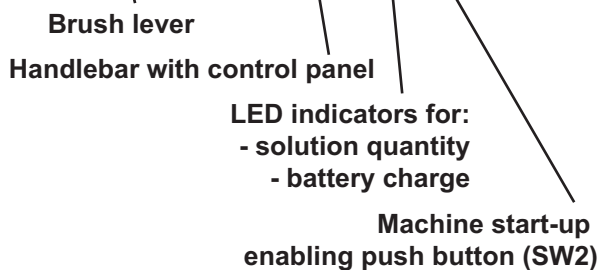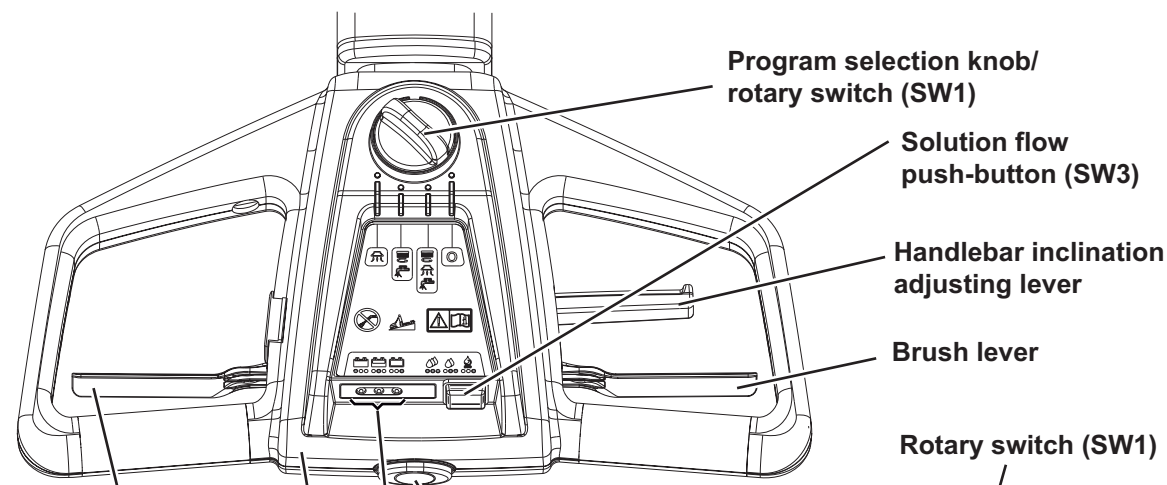

- Function electronic board (EB1)
- Low consumption circuit fuse (F3)

Removal and Installation

Function Electronic Board (EB1) Disassembly/Assembly

Disassembly

1. Drive the machine on a level floor. Make sure that the machine cannot move independently.
2. Turn the machine program selection knob to "0".
3. Disconnect the battery connector (red).
4. Disconnect the battery charger cable from the holder (A).
5. Remove the screws (B) and remove the cover (C).
6. Disconnect the connectors (D) of the function electronic board (E).
7. Remove the screws (F) and remove the function electronic board (E).



Assembly

8. Assemble the components in the reverse order of disassembly, and note the following:
 - Set the DIP-switches (G) according to the machine fitting as shown below.

Fitting	DIP-switch	DIP-switch position
WET batteries	DIP 1	WET (ON)
GEL-AGM batteries		GEL (OFF)
Battery charger installed (standard)	DIP 2	CH (OFF)
Battery charger not installed		NO CH (ON)






Note: The battery charger is installed on the machine as a standard component; the dip-switch must be turned to OFF (CH position)

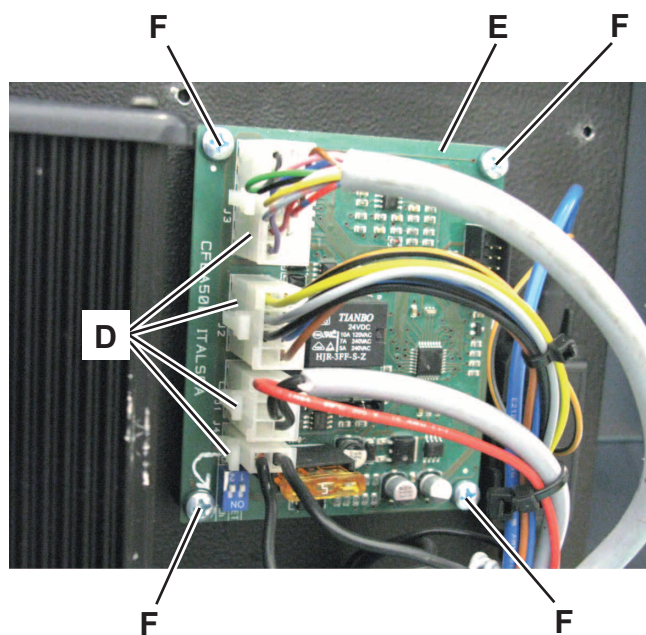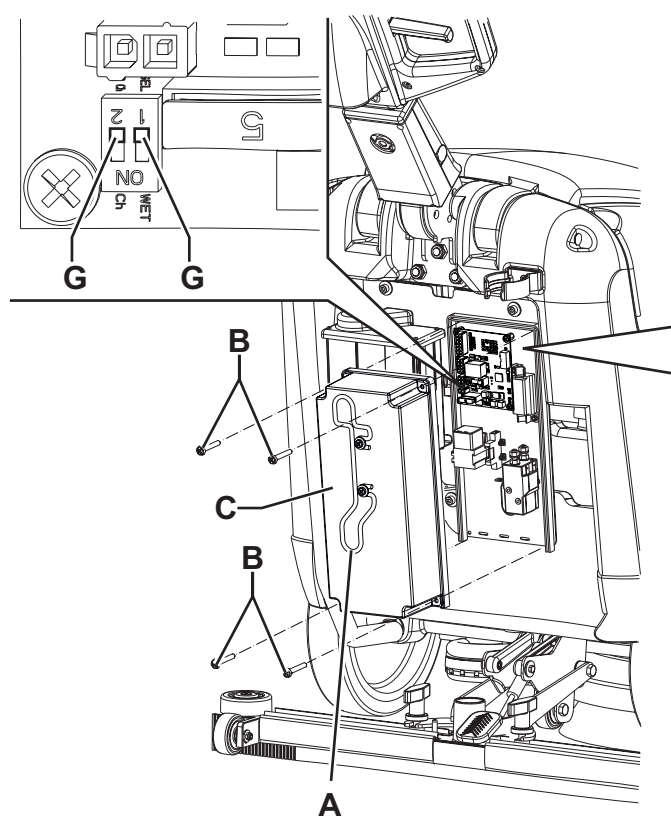

LED Electronic Board (EBLED) Disassembly/Assembly

Disassembly

1. Drive the machine on a level floor. Make sure that the machine cannot move independently.
2. Turn the machine program selection knob to “0”.
3. Disconnect the battery connector (red).
4. On the lower side of the handlebar with the control panel, unscrew the screws (A).
5. Lower the upper side (B) of the handlebar with the control panel.
6. Disconnect the connector (C) of the LED electronic board (D). Remove the screws (E) and remove the LED electronic board (D).
7. If necessary, disconnect the connector (F) and remove the solution flow push-button (G) by disengaging the inner tabs (H).


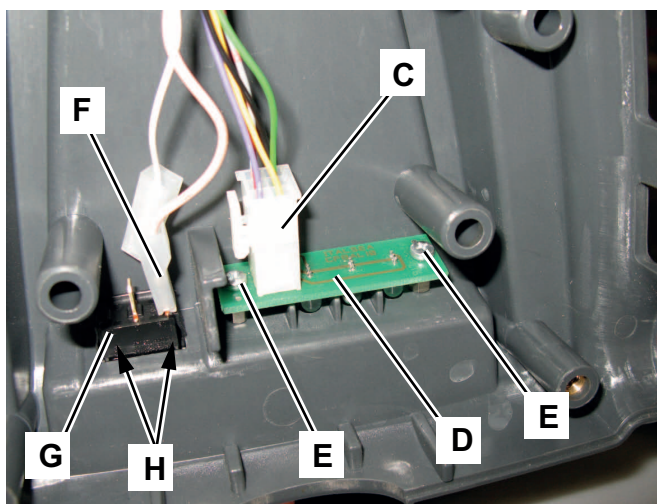
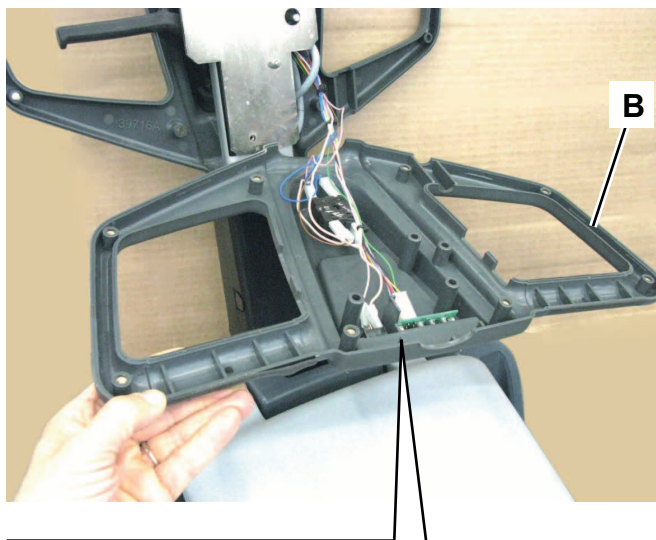
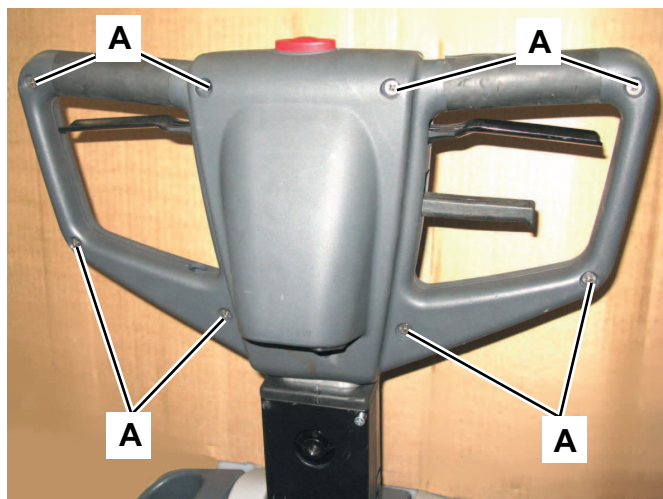


LED Electronic Board (EBLED) Disassembly/Assembly (Continues)

8. If necessary, remove the selector assembly (N) of the machine program selection knob (I), as shown below:
- Disconnect the connectors (J)
 - On the outer side, turn the knob (I) on the position (K) (vacuum system activation).
 - Loosen the set screw inside the housing (L), then remove the knob (I) from the housing.
 - Remove the screws (M) and, from the inside, remove the selector assembly (N) of the knob (I).

Assembly

9. Assemble the components in the reverse order of disassembly.

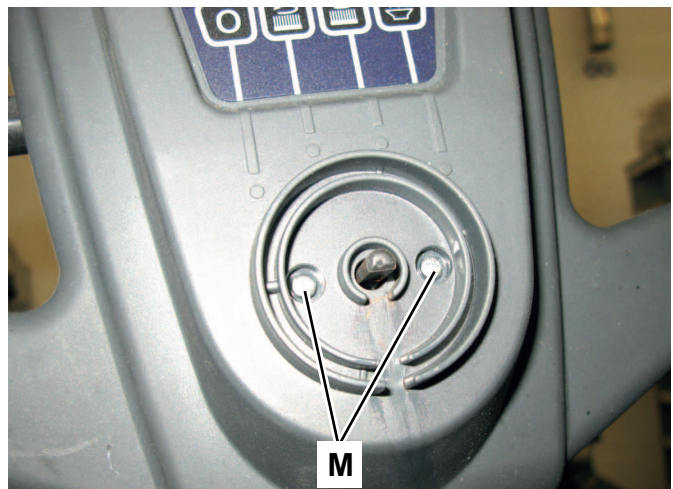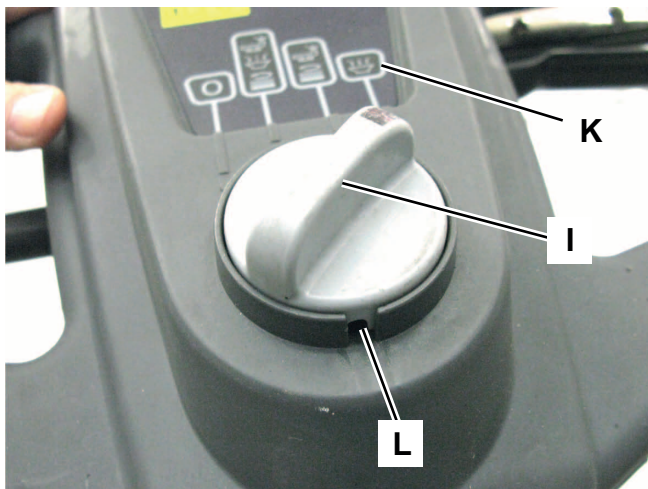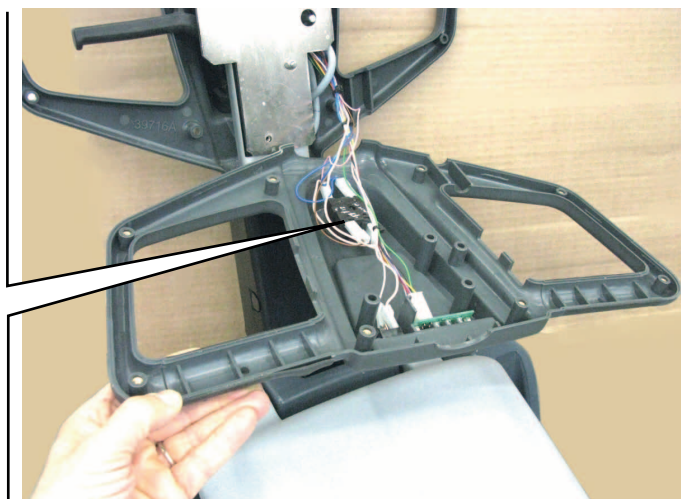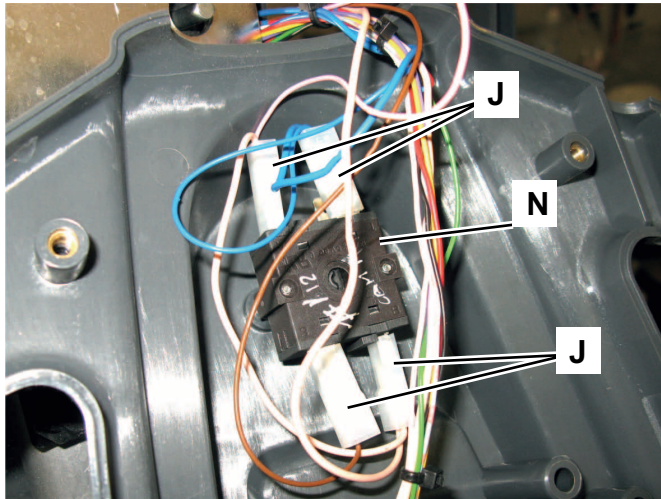





Machine Start-up Enabling Push-Button Disassembly/Assembly (SW2)

Disassembly

1. Drive the machine on a level floor. Make sure that the machine cannot move independently.
2. Turn the machine program selection knob to "0".
3. Disconnect the battery connector (red).
4. On the lower side of the handlebar with the control panel, unscrew the screws (A).
5. Move the upper side (B) of the handlebar with the control panel.
6. Remove the screws (C) and move the lower side (D) of the handlebar from the frame (E).
7. Disconnect the connectors (F) of the brush enabling push-button (G).
8. Remove the screws (H) and remove the switch (G).
9. If necessary, remove from the housing the enabling push-button (I) of the switch (G).
10. If necessary, remove the brush levers (J) from the housing.

Assembly


11. Assemble the components in the reverse order of disassembly.

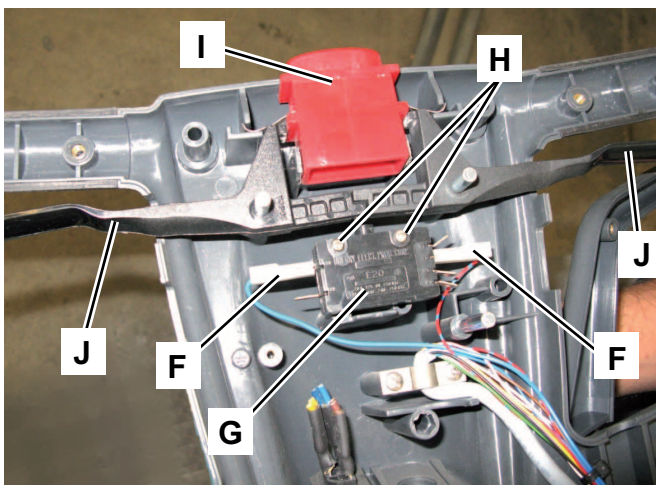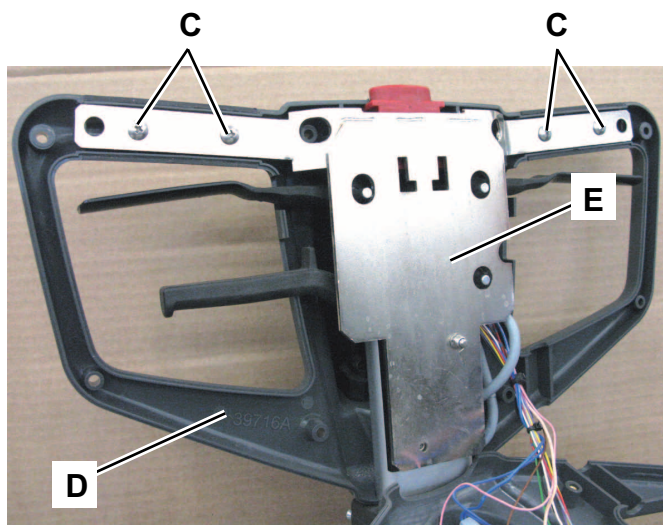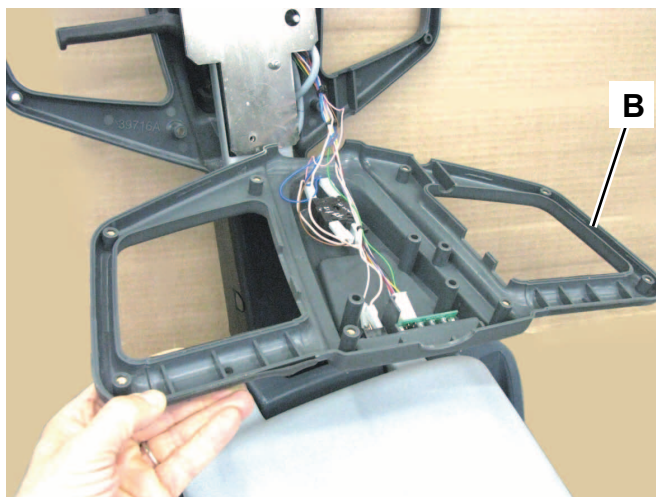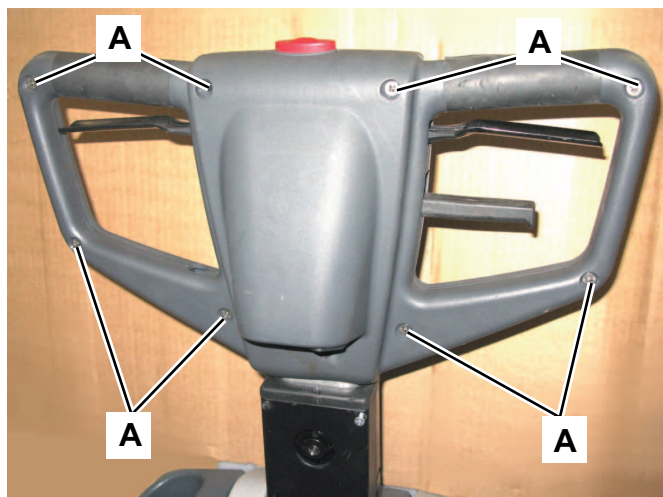

Specifications


Function Electronic Board (EB1) Specifications

FUSES

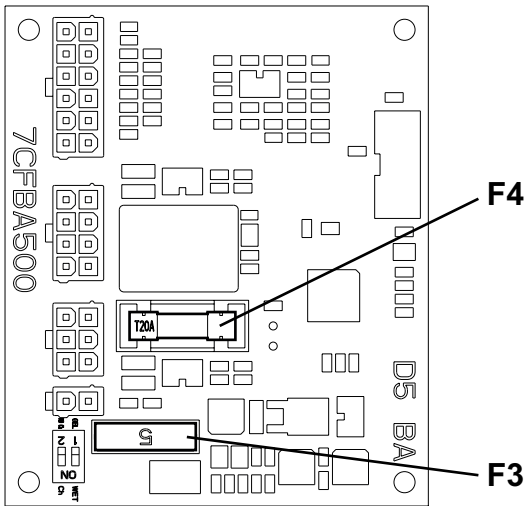

Code	Description	Type	Size
F3	Low consumption circuit fuse	LITTELFUSE ATOFUSE	5A
F4	Brush release circuit fuse	OMEGA CT520320	20A


DIP-SWITCHES

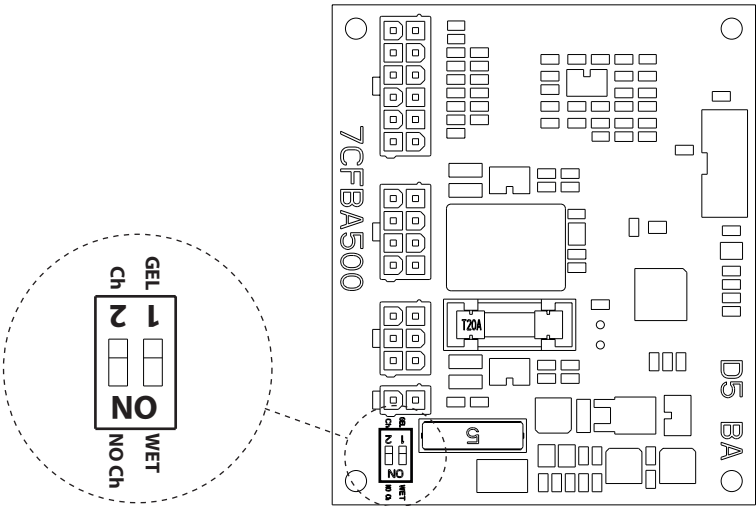

Code	Description
DIP1	WET/GEL selector
DIP2	Battery charger enabling

Function Electronic Board (EB1) Connectors


J1: MOLEX MINIFIT type, 6-ways vertical

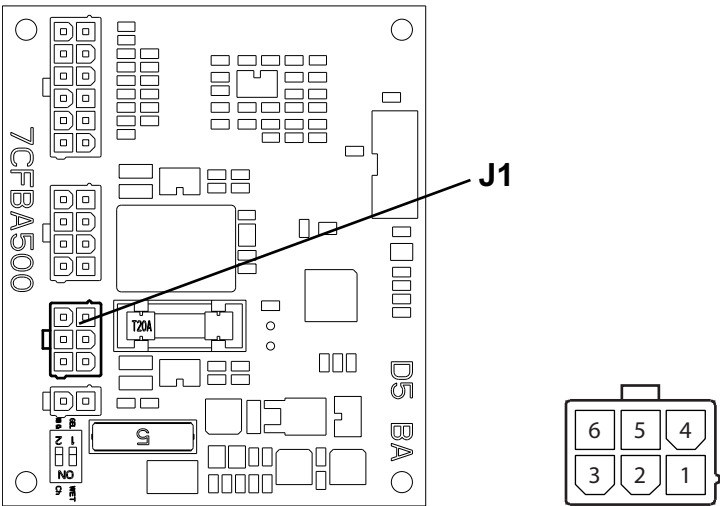

PIN	Description	Electronic board in/out	V ref.	I max.	Connected to
1	Electronic board power supply +	in	24V	5A	BAT
2	Solenoid valve power supply +	out	24V	1A	EV1
3	Solenoid valve power supply -	out	0V	1A	EV1
4	Not used				
5	Not used				
6	Not used				

Function Electronic Board (EB1) Connectors (Continues)


J2: MOLEX MINIFIT type, 8-ways vertical

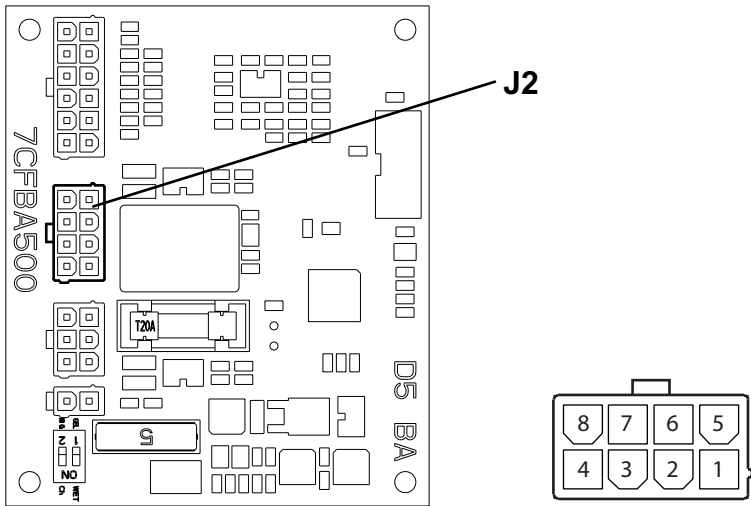

PIN	Description	Electronic board in/out	V ref.	I max.	Connected to
1	Brush fuse voltage drop reading +	in	0V	<1A	F1
2	Brush fuse voltage drop reading -	in	0V	<1A	F1
3	Brush electromagnetic switch power supply -	out	0V	1A	ES1
4	Vacuum system relay power supply -	out	0V	1A	ES2
5	Electromagnetic switch/relay power supply +	out	24V	2A	ES1-ES2
6	Brush motor braking circuit	in	24V	100A imp. 0A cont.	ES1.NC
7	Electronic board power supply -	in	0V	5A	BAT
8	Not used				

Function Electronic Board (EB1) Connectors (Continues)


J3: MOLEX MINIFIT type, 12-ways vertical

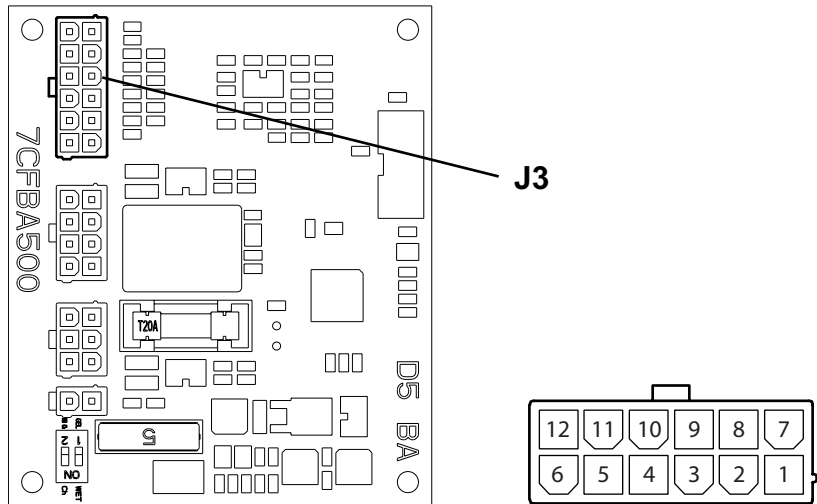

PIN	Description	Electronic board in/out	V ref.	I max.	Connected to
1	Control power supply	out	24V	<1A	SW1 - 2 - 3
2	Brush function return	in	24V	<1A	SW1
3	Vacuum system function return	in	24V	<1A	SW1
4	Brush rotation enabling	in	24V	<1A	SW2
5	Water push-button return	in	24V	<1A	SW3
6	Not used				
7	Common cathode LED power supply	out	0V	<1A	JA.1
8	LDA-G anode LED power supply	out	0.7V	<1A	JA.2
9	LDB-Y anode LED power supply	out	0.7V	<1A	JA.3
10	LDB-G anode LED power supply	out	0.7V	<1A	JA.4
11	LDC-R anode LED power supply	out	0.7V	<1A	JA.5
12	LDC-G anode LED power supply	out	0.7V	<1A	JA.6

Function Electronic Board (EB1) Connectors (Continues)


J4: MOLEX MINIFIT type, 2-ways vertical

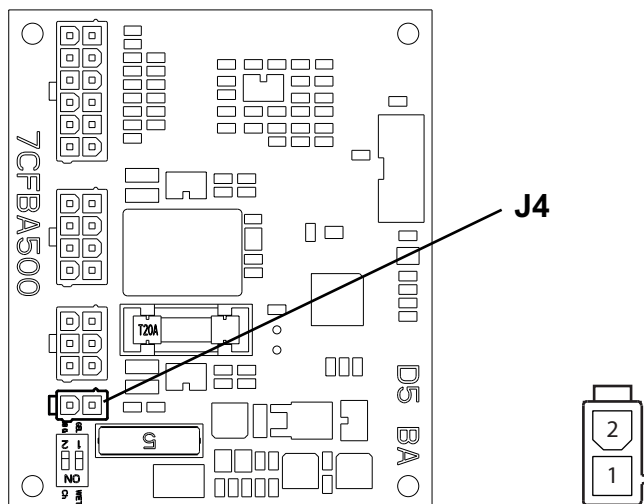

PIN	Description	Electronic board in/out	V ref.	I max.	Connected to
1	Battery charger enabling power supply	out	24V	5A	CH.1
2	Battery charger enabling return	in	24V	5A	CH.2

LED ELECTRONIC BOARD CONNECTOR (EBLED B side)

JA: MOLEX MINIFIT type, 6-ways vertical

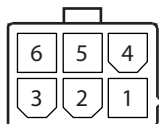

PIN	Description	Electronic board in/out	V ref.	I max.	Connected to
1	Common cathode LED power supply	in	0V	<1A	J3.7
2	LDA-Green anode LED power supply	in	0.7V	<1A	J3.8
3	LDB-Yellow anode LED power supply	in	0.7V	<1A	J3.9
4	LDB-Green anode LED power supply	in	0.7V	<1A	J3.10
5	LDC-Red anode LED power supply	in	0.7V	<1A	J3.11
6	LDC-Green anode LED power supply	in	0.7V	<1A	J3.12

LED Electronic Board (EBLED) Specifications

Code	Description
LDA	GREEN / RED two-color Ø5mm LED
LDB	GREEN / YELLOW two-color Ø5mm LED
LDC	GREEN / RED two-color Ø5mm LED

Controls and Functions

- a. Low consumption circuit fuse (F3): directly downstream of J1.1, it protects all the inner and outer circuits supplied by the electronic board.
- b. Battery charger enabling circuit power supply (J4.1): directly downstream of F3.
- c. BATTERY CHARGER enabling (J4.2): if the dip-switch DIP2 is turned to 0 (CH position), the electronic board functions are activated only when the on-board battery charger is NOT connected to the electrical mains; if DIP2 is turned to 1 (NO CH position), the electronic board functions are active whether or not the battery charger is on board.

THE BATTERY CHARGER IS INSTALLED ON THE MACHINE AS A STANDARD COMPONENT; the dip-switch MUST BE turned to 0 (CH position).

- d. BRUSH function: is activated when J3.2 is at 24V with a 1 sec.-delay at switching off.
The BRUSH function includes activation of J2.3 (BRUSH ELECTROMAGNETIC SWITCH) and J1.2,3 (SOLENOID VALVE) outputs, which are subjected to the presence of the signal on J3.4 with a 1 sec.-delay to switching on. The output on J1.2,3 (SOLENOID VALVE) is controlled by the WATER FLOW CONTROL function (see step f).
The BRUSH function is subjected to the BATTERY PROTECTION function (see step g) and to the BRUSH MOTOR PROTECTION function (see step j).
- e. VACUUM SYSTEM function: is activated when J3.3 is at 24V with a 1 sec.-delay at switching on and a 1 sec.-delay at switching off.
The VACUUM SYSTEM function includes the activation of J2.4 (VACUUM SYSTEM RELAY) output.
The VACUUM SYSTEM function is subjected to the BATTERY PROTECTION function (see step g).
- f. WATER FLOW CONTROL function: J1.2,3 (SOLENOID VALVE) output, when activated (see step d), is modulated by ON/OFF cycles according to the following table; the current status is shown by the LEDs (see step h):

Solution flow push-button setting (SW3)	LED display	Solenoid valve ON time (EV1)	Solenoid valve OFF time (EV1)
0	○ ○ ○	-	Always OFF
1	○ ○ ●	1 sec	5 sec
2	○ ● ●	3 sec	3 sec
3	● ● ●	Always ON	-

The default setting for the solution flow push-button (SW3) is 1.

The next detergent percentage setting is NOT stored into memory when the machine is turned off.

Controls and Functions (Continues)

- g. BATTERY PROTECTION function: battery charge status is shown by the 3 LEDs depending on the type of battery (WET/GEL, see step j) according to the following diagram:

Transition threshold (V, tolerance ± 0.1)		WET	GEL
1	Green (fix) $\Leftrightarrow$ yellow (fix)	22.0	22.2
2	Yellow (fix) $\Rightarrow$ red (flashing 1Hz)	20.4	21.6
3	Safety threshold	19.4	20.6

The transition is filtered with a time constant of 3 sec. as to the supply voltage reading.

When threshold 2 is reached, the J2.3 (BRUSH ELECTROMAGNETIC SWITCH) and J1.2,3 (SOLENOID VALVE) outputs are automatically cut off after a 5 sec.-delay.

In chase threshold 3 is reached, also J2.4 (VACUUM SYSTEM) output is automatically deactivated (without delays) and the BRUSH MOTOR BRAKING function (see step k) is disabled.

Irrespective of the voltage reading, when transition 2 is performed, it is not possible to go back to YELLOW or GREEN condition.

The system reset happens when the machine is turned off by turning the rotary switch (SW1) to 0.

- h. WATER FLOW SETTING function: When the battery charge status is above threshold 1, the 3 LEDs show the charge status only during the first 5 sec. after BRUSH or VACUUM SYSTEM function has been activated, then they switch to the display of water flow setting (see step f). If during the first 5 sec. the push-button SW3 is pressed, the display immediately switches to the water flow setting. When the water flow setting is displayed, each time the push-button SW3 is pressed, the setting of the water flow increases by 1 in sequence (from 3 to 0). When the battery charge status is below threshold 1, the display shows the battery charge status. The LEDs switches from battery charge status to water flow setting display, only when the push-button SW3 is pressed. This display last 5 sec., before switching again. If during the 5 sec. the push-button SW3 is pressed, the setting of the water flow increases by 1 in sequence (from $x=3$ to $x=0$). If the push-button SW3 is not pressed for more than 5 sec., the display switches again to the battery charge status.

- i. Battery type selection (WET/GEL): each time the electronic board is switched on, the current condition is shown for 2 sec. by LEDs according to the following diagram:

WET	RED LED flashing
GEL	GREEN LED flashing

After the first 2 sec., the LEDs show the battery charge status or the water flow level (see step h).

WET/GEL setting depends from dip-switch DIP1 position, according to the silk-screen printed “WET” and “GEL” marks beside the dip-switch.

Controls and Functions (Continues)

- j. BRUSH MOTOR PROTECTION function: through the differential input (J2.1 - J2.2), the voltage drop is read on the BRUSH MOTOR fuse: if the voltage drop exceeds the alarm threshold for more than 30 sec., the J2.3 (BRUSH ELECTROMAGNETIC SWITCH) and J1.2,3 (SOLENOID VALVE) outputs are switched off until their reset by switching off the electronic board.

When the threshold is exceeded (without delays), the GREEN, YELLOW and RED LEDs flash simultaneously (freq. 1Hz).

The alarm threshold is $40 \pm 2\text{mV}$, which correspond to about 40 ± 5 Ampere in the motor.

If the protection activates (automatic switching off of J2.3 and J1.2,3 outputs), the GREEN, YELLOW and RED LEDs continue to flash until their reset by switching off the machine.

- k. BRUSH REMOVAL SYSTEM: When the BRUSH function is active and the push-button SW2 is NOT PRESSED for at least 3 sec., if the push-button SW2 is pressed and released 3 times in 2 sec., the following cycle is performed:

- 1) Alternating flashing of RED AND GREEN LEDs for 2 sec. to confirm brush remove mode.
- 2) Closing (by a TIANBO HJR-3FF-S-Z relay contact) of J2.6 output on J1.1 positive power supply through F4 fuse, for 2 sec. shunt B+ to both states of motor to cause abrupt stop.
- 3) Activation after 0,2 sec. of J2.3 (BRUSH ELECTROMAGNETIC SWITCH) output for 1 sec..

The BRUSH REMOVAL SYSTEM is subjected to the BATTERY PROTECTION function (see step g).

During this cycle (which lasts 4 sec.) the SW2 push-button is disabled.

Control System - Cable Version

Functional Description

The function control is performed with the program selection knob/rotary switch (SW1), the machine start-up enabling push button (SW2) which can be used simultaneously with the brush levers and the solution flow push-button (SW3).

The switch outputs are read by the functions electronic board (EB1) which consequently controls the brush motor (M1) and the solenoid valve (EV1).

The LED electronic board (EBLED) has a set of 3 LEDs. The set of 3 LEDs is used to indicate the water flow level depending on the current mode of operation:

LEDs to set water flow level	○ ○ ○	
	● ○ ○	
	● ● ○	
	● ● ●	

The LED electronic board (EBLED) is driven by the functions electronic board (EB1).

The main switch (SW0) inhibits any function of the machine.

Fuses


The fuse (F1) from 1A protects all internal circuitry of the electronic board except the power circuits of the motors (M1 - M2).

Diagram of Output Activation according to the Position of the Switches (SW1), (SW2) and (SW3)

Program selection knob /rotary switch (SW1) settings	Machine start-up enabling push button (SW2) settings (with brush levers)	Functions electronic board (EB1) + LED electronic board (EBLED)	Brush motor (M1) + solenoid valve (EV1)	Vacuum system motor (M2)
0	Pressed/released	Off	Off	Off
  	Released	On	Off	On
  	Pressed	On	On	On
 	Released	On	Off	Off
 	Pressed	On	On	Off
	Pressed/released	On	Off	On

Solution flow push-button setting (SW3)	LED display	Symbols	Solenoid valve ON time (EV1)	Solenoid valve OFF time (EV1)
0	○ ○ ○		-	Always OFF
1	● ○ ○		1 sec	5 sec
2	● ● ○		3 sec	3 sec
3	● ● ●		Always ON	-

Wiring Diagram

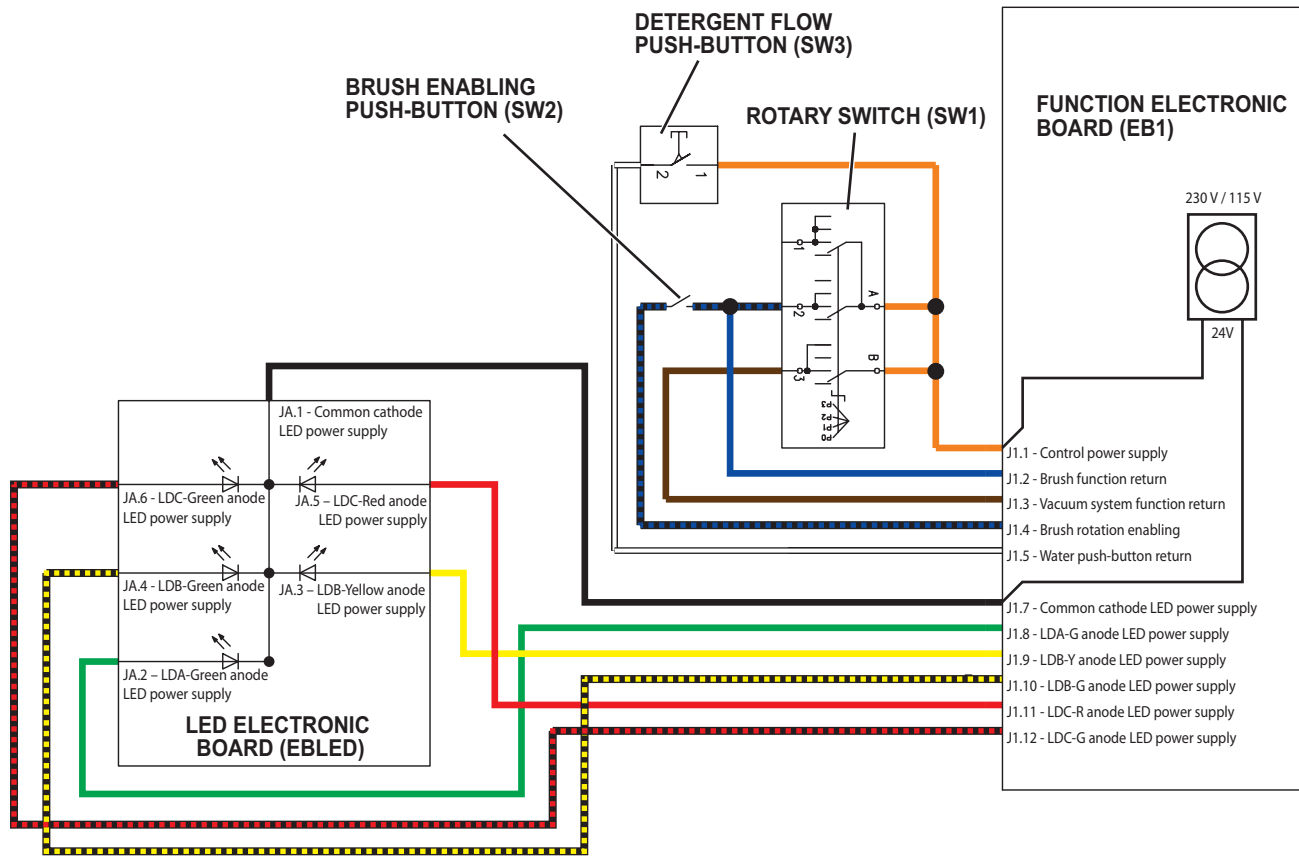




P200075E



Note: For the cord versions used the LEDs green color only.

Component Locations

- Handlebar with control panel
- Program selection knob / rotary switch (SW1)
- LED indicators for solution quantity
- Rotary switch (SW1)
- Brush levers
- Machine start-up enabling push button (SW2)
- Solution flow push-button (SW3)
- Functions electronic board (EB1)
- LED electronic board (EBLED)
- Functions electronic board fuse (F1)
- Wiring harness
- Handlebar inclination adjusting lever

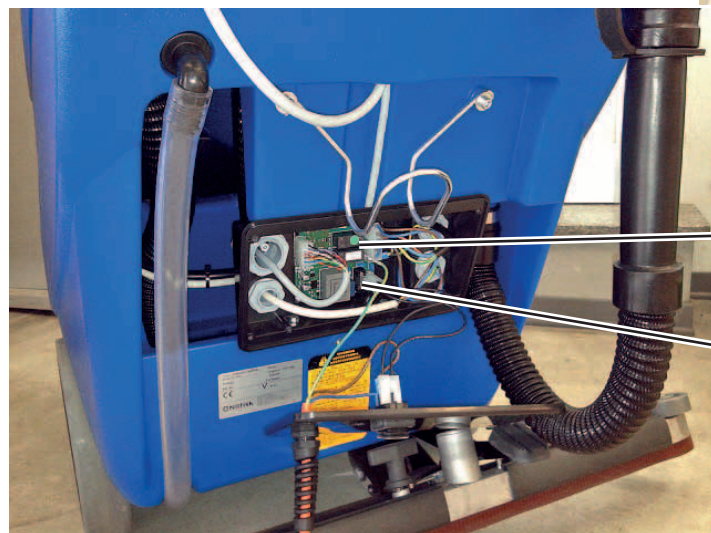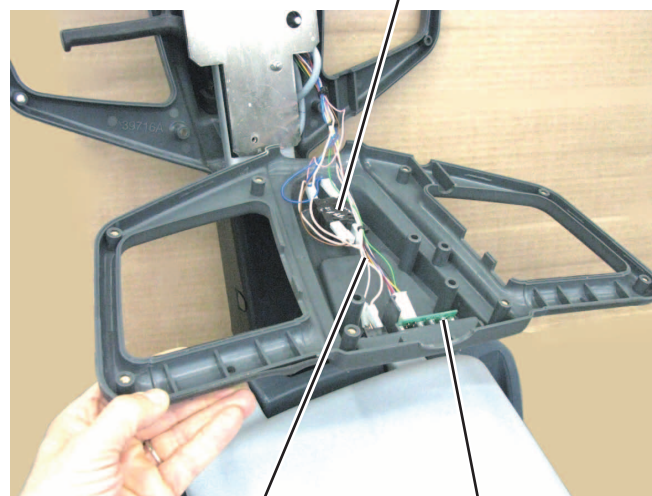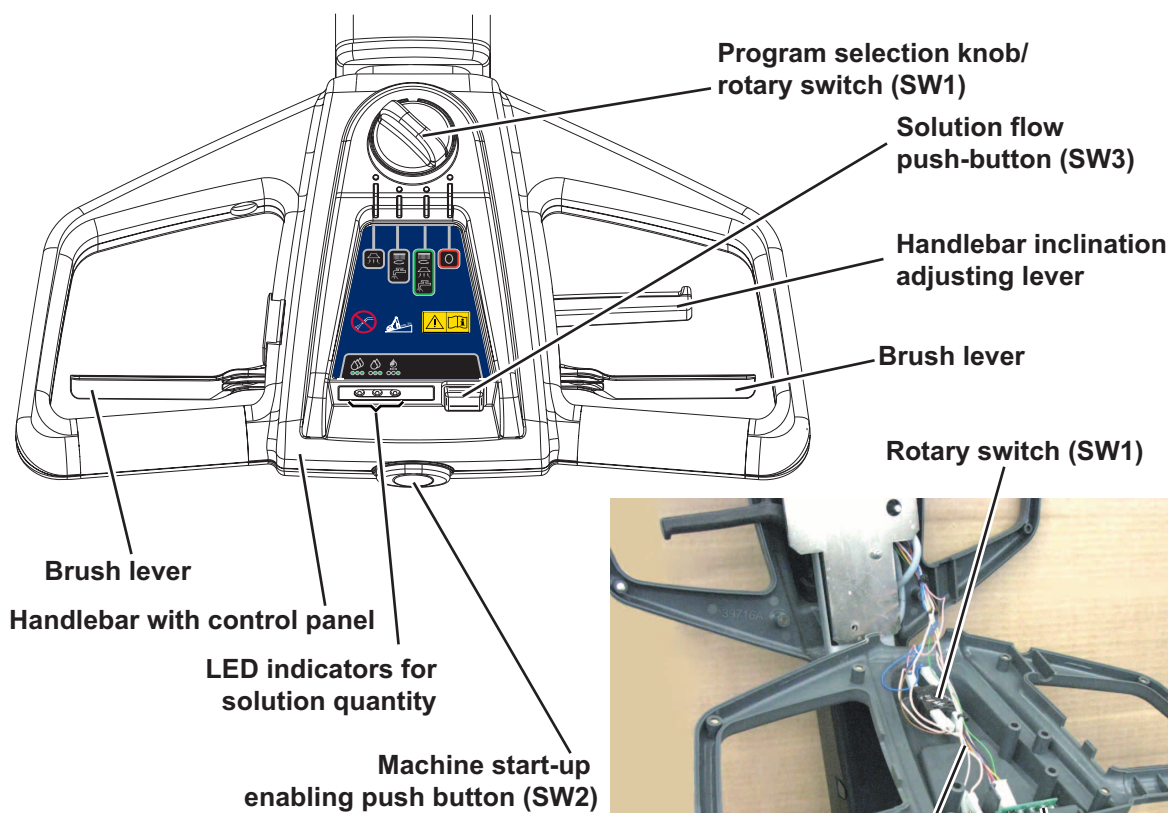

Troubleshooting

Trouble	Possible Causes	Remedy
The machine is not working	The power supply cable is cut or pressed or short circuited	Replace
	The wiring harness is cut or pressed or short circuited	Repair
	The rotary switch (SW1) of the program selection knob is not working	Replace
	The functions electronic board (EB1) is broken	Replace
	The main switch (SW0) is broken	Replace

Removal and Installation

Functions Electronic Board (EB1) Disassembly/Assembly

Disassembly


1. Drive the machine on a level floor. Make sure that the machine cannot move independently.
2. Make sure that the power supply cable plug is disconnected from the electrical mains and turn the machine program selection knob to "0".
3. Unscrew the screw and remove the slot board cover.
4. Disconnect the J1 connector (A).
5. Unscrew the nut and remove the eyelets (B).
6. Disconnect the connector (C) of the power supply cable.
7. Disconnect the connector (D) of the brush motor supply.
8. Disconnect the connector (E) of the vacuum motor supply.
9. Disconnect the connector (F) of the solenoid valve supply.
10. Unscrew the screws (G) and remove the functions electronic board (H).



Caution! Before removing the following connectors note their correct position on the inputs of the functions electronic board.

Assembly




11. Assemble the removed parts by reversing the sequence of operations performed for disassembly, with the following indications:
 - Assemble the connectors (C), (D), (E) and (F) in the correct position on the inputs of the functions electronic board.

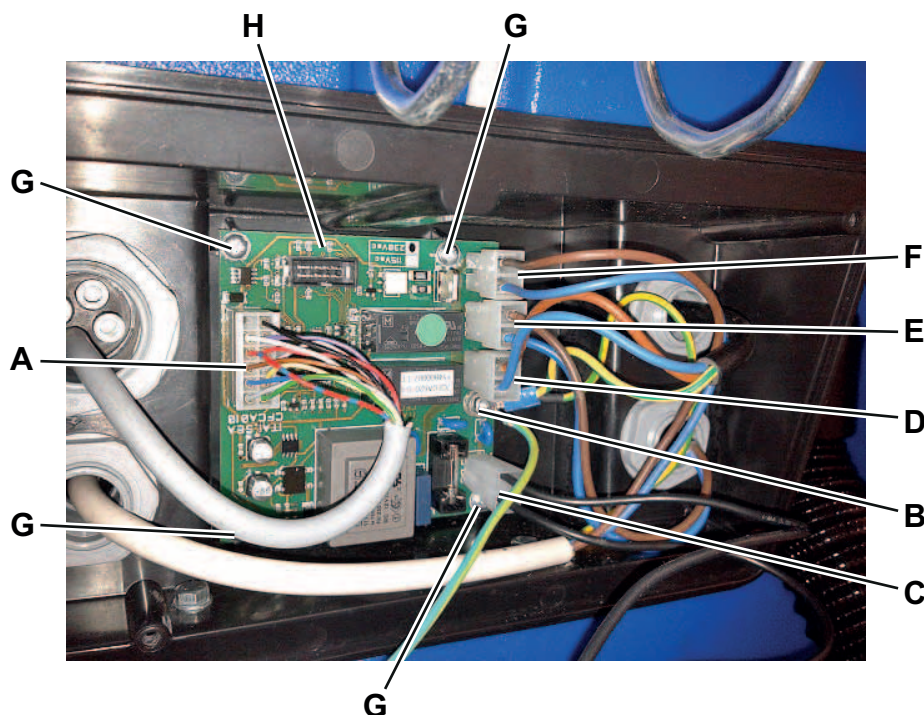

LED Electronic Board (EBLED) Disassembly/Assembly

Disassembly

1. Drive the machine on a level floor. Make sure that the machine cannot move independently.
2. Make sure that the power supply cable plug is disconnected from the electrical mains and turn the machine program selection knob to "0".
3. On the lower side of the handlebar with the control panel, unscrew the screws (A).
4. Lower the upper side (B) of the handlebar with the control panel.
5. Disconnect the connector (C) of the LED electronic board (D). Remove the screws (E) and remove the LED electronic board (D).
6. If necessary, disconnect the connector (F) and remove the solution flow push-button (G) by disengaging the inner tabs (H).


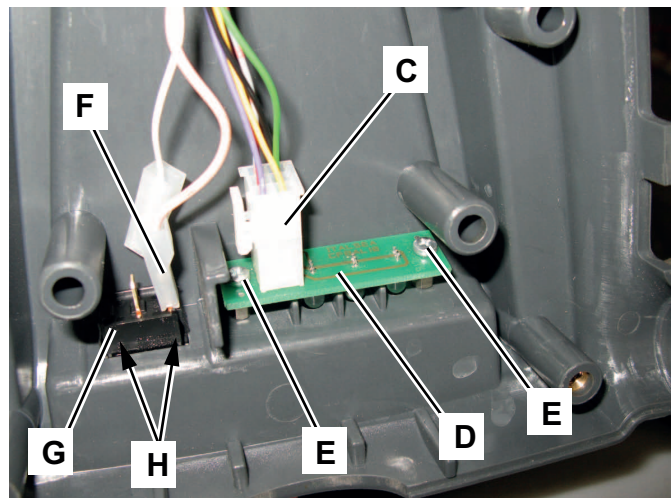
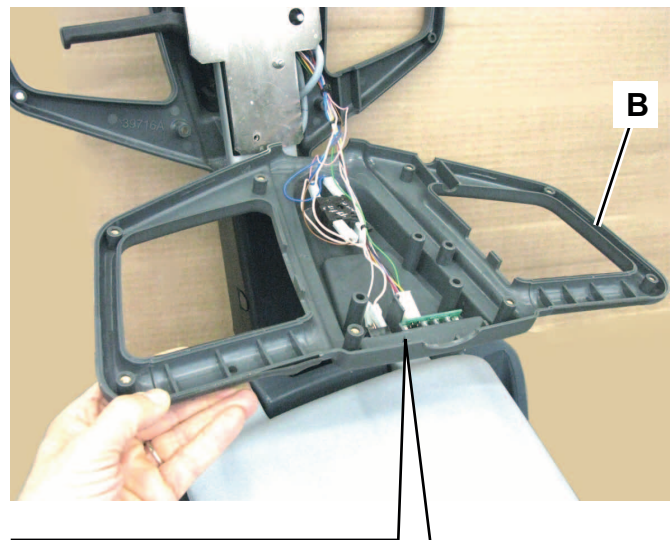
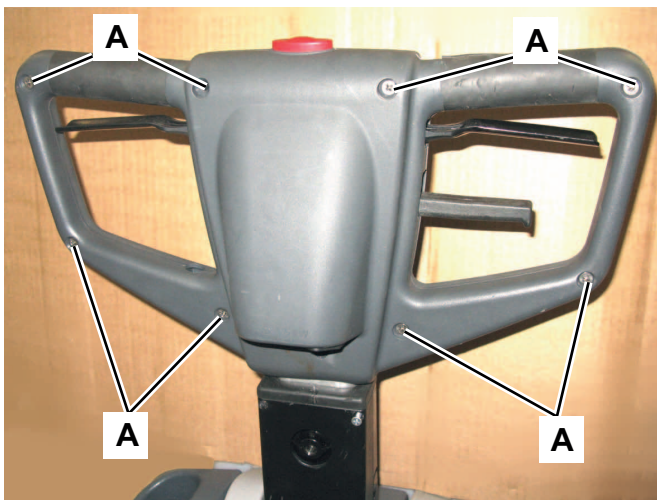


LED Electronic Board (EBLED) Disassembly/Assembly (Continues)

7. If necessary, remove the selector assembly (N) of the machine program selection knob (I), as shown below:
- Disconnect the connectors (J)
 - On the outer side, turn the knob (I) on the position (K) (vacuum system activation).
 - Loosen the set screw inside the housing (L), then remove the knob (I) from the housing.
 - Remove the screws (M) and, from the inside, remove the selector assembly (N) of the knob (I).

Assembly

8. Assemble the components in the reverse order of disassembly.

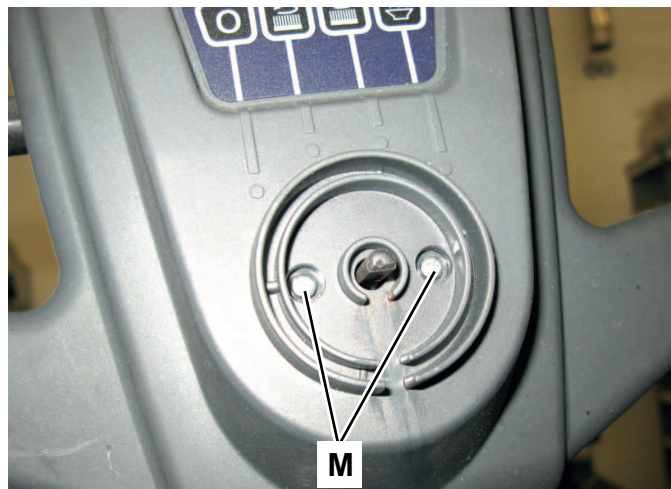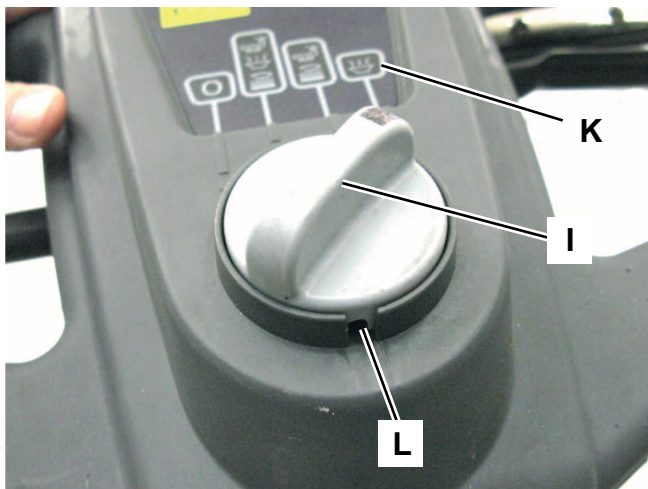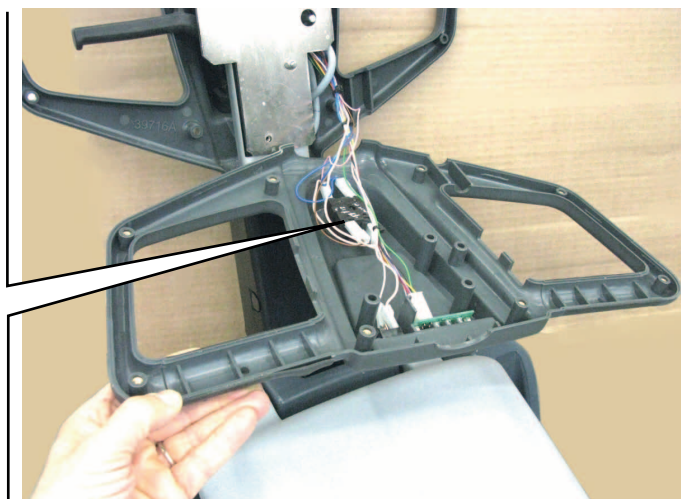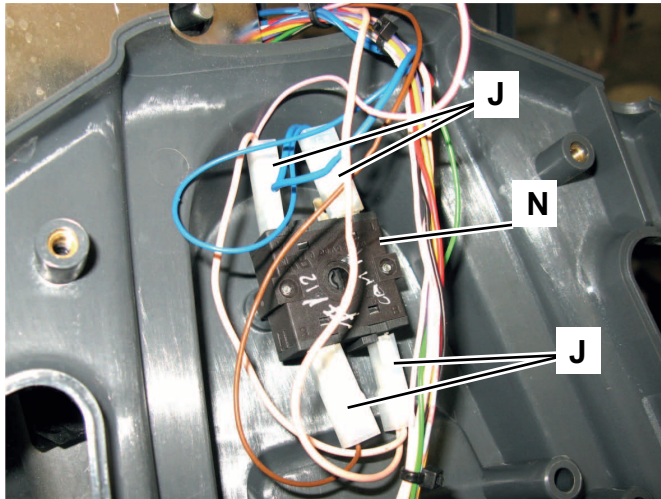





Machine Start-up Enabling Push-Button Disassembly/Assembly (SW2)

Disassembly

1. Drive the machine on a level floor. Make sure that the machine cannot move independently.
2. Make sure that the power supply cable plug is disconnected from the electrical mains and turn the machine program selection knob to "0".
3. On the lower side of the handlebar with the control panel, unscrew the screws (A).
4. Move the upper side (B) of the handlebar with the control panel.
5. Remove the screws (C) and move the lower side (D) of the handlebar from the frame (E).
6. Disconnect the connectors (F) of the brush enabling push-button (G).
7. Remove the screws (H) and remove the switch (G).
8. If necessary, remove from the housing the enabling push-button (I) of the switch (G).
9. If necessary, remove the brush levers (J) from the housing.

Assembly


10. Assemble the components in the reverse order of disassembly.

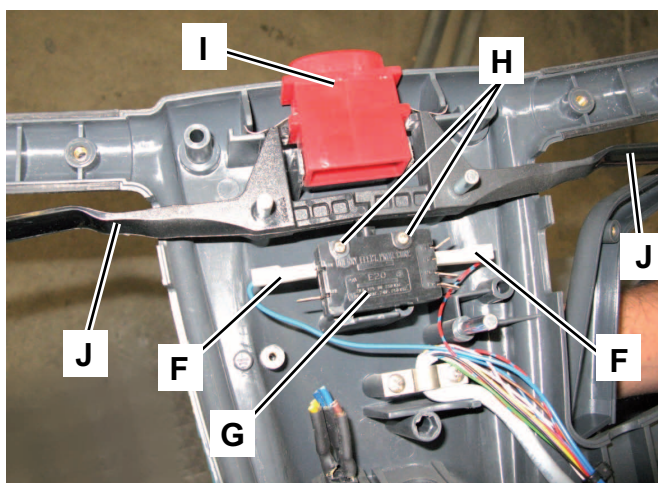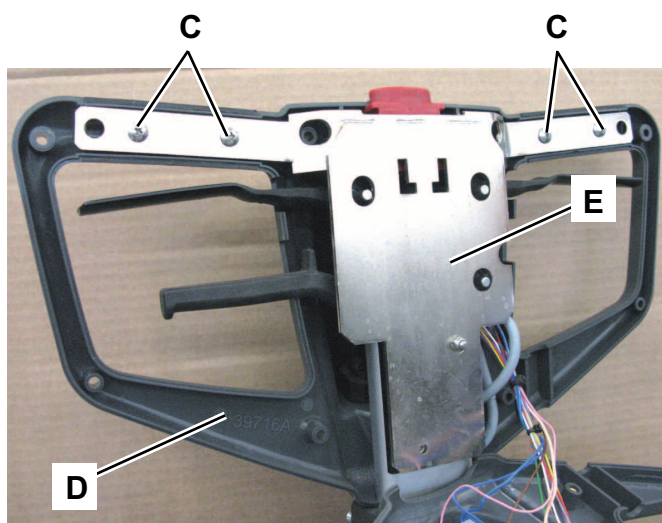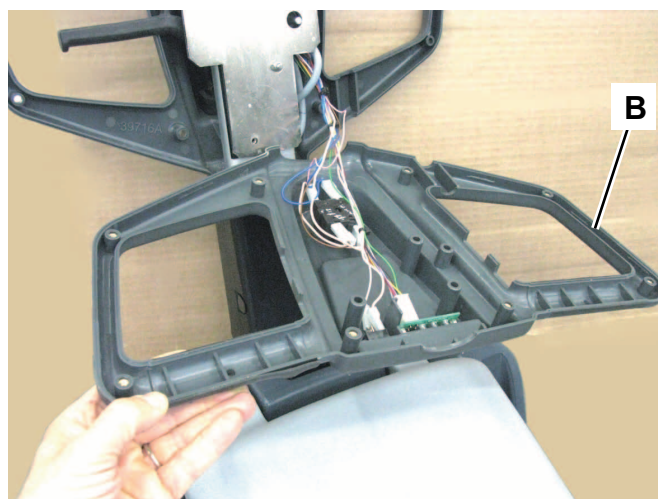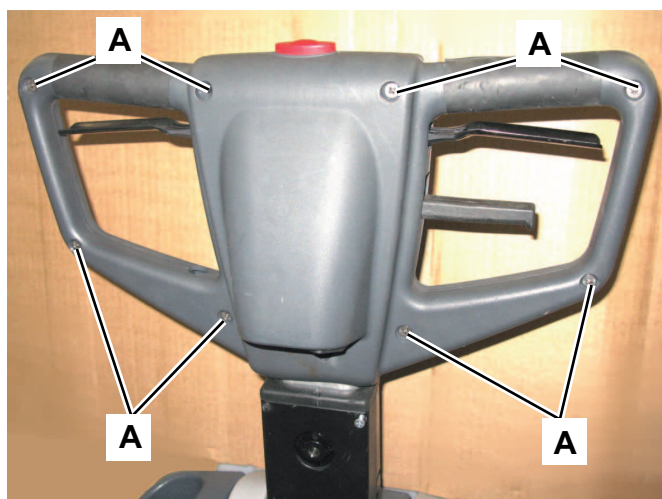

Specifications

Functions Electronic Board (EB1) Specifications

FUSES

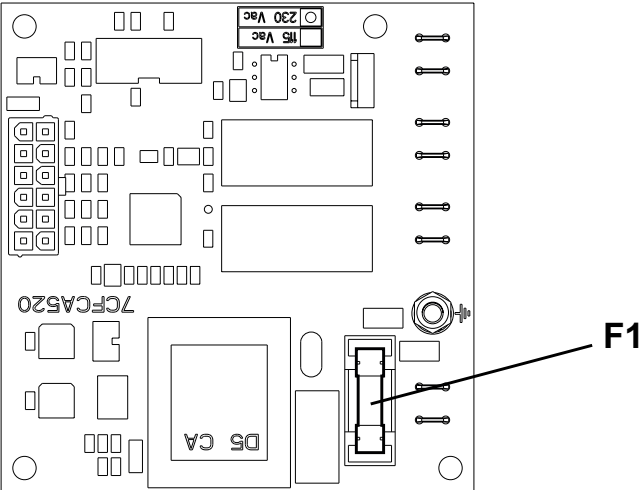


Code	Description	Type	Size
F1	Functions electronic board fuse	Glass Cyl. 5x20 UL Recognized	1A

Functions Electronic Board (EB1) Connectors

J1: MOLEX MINIFIT type, 12-ways vertical

GROUND SCREW

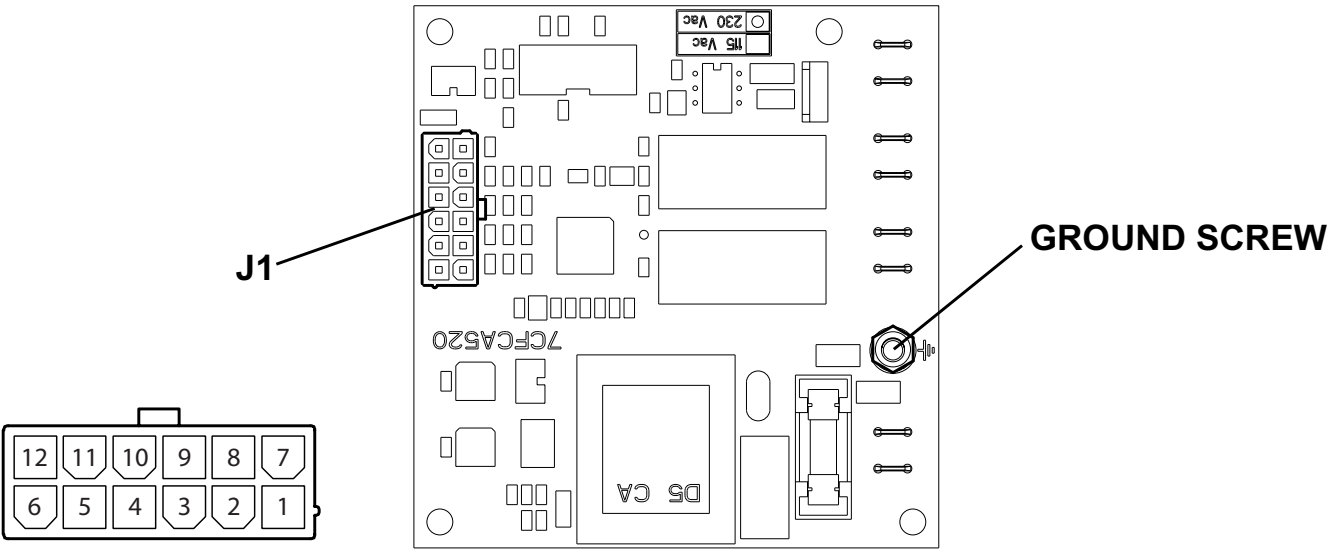


PIN	Description	Electronic board in/out	V ref.	I max.	Connected to
1	Control power supply	out	24V	<1A	SW1 - 2 - 3
2	Brush function return	in	24V	<1A	SW1
3	Vacuum system function return	in	24V	<1A	SW1
4	Brush rotation enabling	in	24V	<1A	SW2
5	Water push-button return	in	24V	<1A	SW3
6	Not used				
7	Common cathode LED power supply	out	0V	<1A	JA.1
8	LDA-G anode LED power supply	out	0.7V	<1A	JA.2
9	LDB-Y anode LED power supply	out	0.7V	<1A	JA.3
10	LDB-G anode LED power supply	out	0.7V	<1A	JA.4
11	LDC-R anode LED power supply	out	0.7V	<1A	JA.5
12	LDC-G anode LED power supply	out	0.7V	<1A	JA.6

COD	Description	Electronic board in/out	V ref.	I max.	Connected to
EQP	Ground contact (PA)	in-out	ground	-	PLG, M1, EV

Functions Electronic Board (EB1) Connectors (Continues)

MALE FASTON (SINGLE) 0.25x0.03in (6,3x0,8mm)

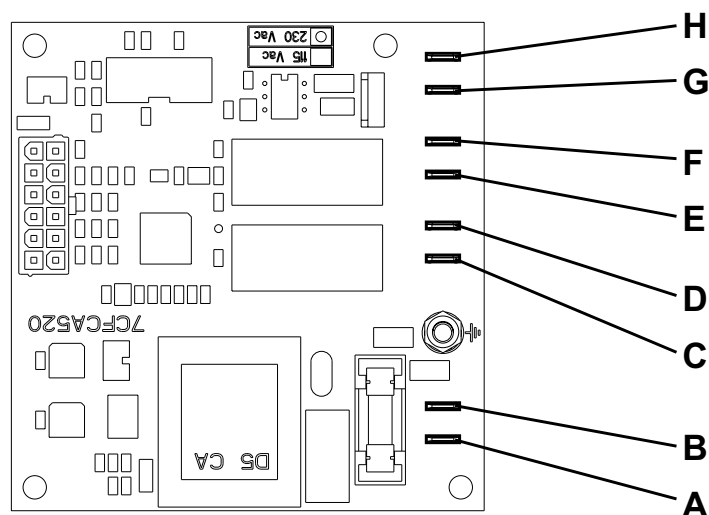

COD	Description	Electronic board in/out	V ref.	I max.	Connected to
A	Supply (Phase)	in	(*)	16A	PLG
B	Supply (Neutral)	in	0Vac	16A	PLG
C	Brush motor output (Phase)	out	(*)	10A	M1
D	Brush motor output (Neutral)	out	0Vac	10A	M1
E	Vacuum motor output (Phase)	out	(*)	5A	M2
F	Vacuum motor output (Neutral)	out	0Vac	5A	M2
G	Solenoid valve output (Phase)	out	(*)	0,5A	EV
H	Solenoid valve output (Neutral)	out	0Vac	0,5A	EV

(*) 100-120Vac±10% 50/60Hz for version 115V, 220-240Vac ±10% 50/60Hz for version 230V

LED Electronic Board (EBLED) Specifications

Code	Description
LDA	GREEN / RED two-color Ø5mm LED
LDB	GREEN / YELLOW two-color Ø5mm LED
LDC	GREEN / RED two-color Ø5mm LED



Note: For the cord versions used the LEDs green color only.

Controls and Functions

- a. Main fuse (F1) directly downstream of A, protects all internal and external circuits powered from the functions electronic board except for the power circuits (see point d.) of the BRUSH MOTOR output and VACUUM MOTOR output.
- b. Circuit low voltage (SELV): all voltages on the J1 connector are provided by a circuit low voltage (SELV) obtained via double insulated transformer and circuit sections suitably insulated from mains voltage.
- c. BRUSH function: This is activated when J1.2 is high with switch-off delay of 1 second. The BRUSH function includes BRUSH MOTOR output activation of C, D (see step e.) And SOLENOID VALVE on G, H, subject to the presence of the signal on J1.4 with delayed switching on and off of 1 “. The output of I, L (SOLENOID VALVE) is regulated also by the function CONTROL SOLUTION FLOW (see step f.)
- d. VACUUM function: J1.3 is active when power is high with a delay of 1 “and shutdown of 1”. The VACUUM function includes the activation of the outputs VACUUM MOTOR on E, F (see point e) and J1.6 (HOUR COUNTER).
- e. Power circuits: the BRUSH MOTOR output on C, D is implemented through the contact of relays with 15A (1 contact). The scope of this circuit is at least 15A continuous. The verification of the sine wave power supply ensures that all switching operations are carried out in the neighborhood of the voltage step to 0 (zero-crossing). The VACUUM MOTOR output of E, F is realized through the NO contact of relays with 15A (1 contact). The scope of this circuit is at least 10A continuous current. The verification of the sine wave power supply ensures that all switching operations are carried out in the neighborhood of the voltage step to 0 (zero-crossing). The SOLENOID VALVE output on G, H, is realized by MOSFET.
- f. WATER FLOW CONTROL function: the SOLENOID VALVE output G, H, when activated (see point c), is modulated by cycles ON / OFF according to the following table, the current state is displayed by the LEDs:

Solution flow push-button setting (SW3)	LED display	Solenoid valve ON time (EV1)	Solenoid valve OFF time (EV1)
0	○ ○ ○	-	Always OFF
1	○ ○ ●	1 sec	5 sec
2	○ ● ●	3 sec	3 sec
3	● ● ●	Always ON	-

At each closing of the J1.5 input to +24 V, the state x increases by 1 with cyclic sequence (from x = 3 switch to x = 0).

The default value state is x = 1.

The condition subsequently set is not retained in memory after switching off the functions electronic board.

Mode Switch On / Switch Off: When the board is powered from the mains through A, B it is turned on and working as described in the preceding paragraphs.

Controls and Functions (continues)

- g. FASTON connections. Each pair is marked by screen printing with the code of the corresponding output: C-D = M1,

E-F = M2, G-H = EV.

The sockets are labeled A and B respectively with F and N.

The screw connection EQP is marked with the symbol “ground” 5019 of IEC 60417.

Electrical System - Battery Version

Functional Description

Basically the electrical system consists of a function electronic board (EB1) which determines the brush motor, vacuum system motor and solenoid valve activation by means of the relevant controls (rotary switch (SW1) and brush activation push-button (SW2), disabling them when the battery voltage drops below the battery safety threshold value.

The batteries are connected to the system by means of the ANDERSON POWER connector (C1).

The battery charger (CH) is connected to the batteries (BAT) directly on the – and + terminals and it supplies the enabling signal to activate the machine functions only when it is disconnected from the electrical mains with the J4 2-way connector. When the battery charger is connected to the electrical mains, the battery charger inner relay opens the contact and stops the enabling signal on the J4 connector.

For further details, see the descriptions of individual sub-systems.

Fuses

The brush motor circuit is protected from short-circuits by the 40A fuse (F1). The motor is protected from overloads by means of the electronic protection system described in the Function Electronic Board Specifications chapter.


The vacuum system motor circuit is protected by the 30A fuse (F2).

The solenoid valve (EV1) and the function electronic board (EB1) control circuits are protected by the 5A fuse (F3) on the function electronic board (EB1).

The brush release circuit is protected by the 20A fuse (F4) on the function electronic board (EB1).




(Only for 9087311020 - 9087318020 models). The 125A battery fuse (F0) is assembled directly on the + terminal of the battery and jump connected to the negative terminal of the other. This fuse operates only in case of short circuits on the machine power wiring harness, to prevent fire or battery explosion.

Wiring Diagram

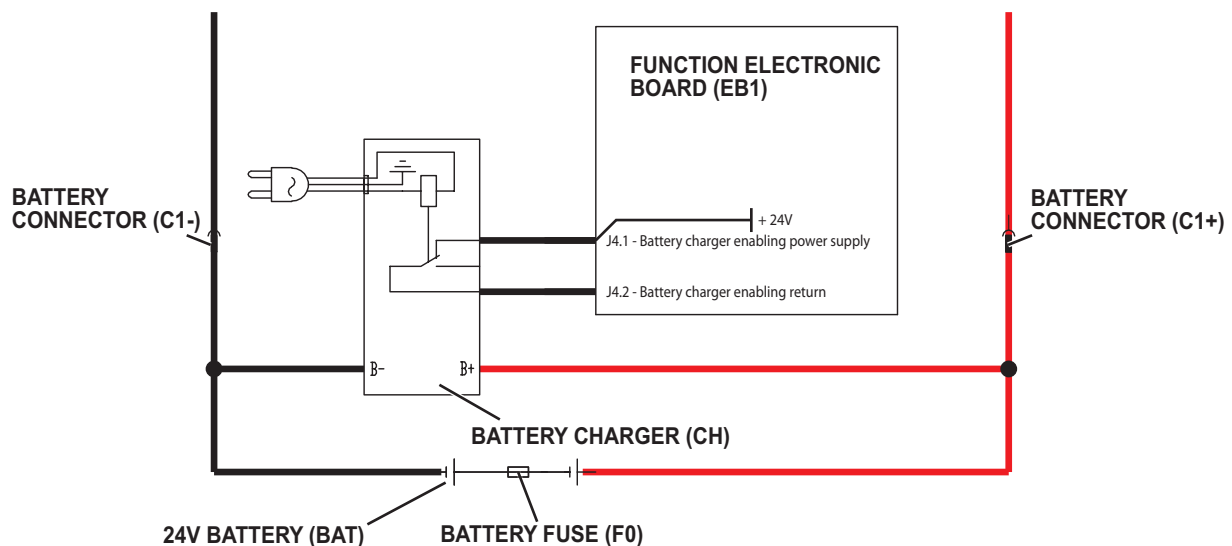


Component Locations

- Battery charger (CH)
- Batteries (BAT)
- Battery connection connector (C1)
- Battery wiring harness
- Machine wiring harness
- Electrical component box
- Battery fuse (F0) (only for 9087311020 – 9087318020 models)
- Brush motor fuse (F1)
- Vacuum system motor fuse (F2)
- Solenoid valve and electronic board fuse (F3)
- Brush release fuse (F4)

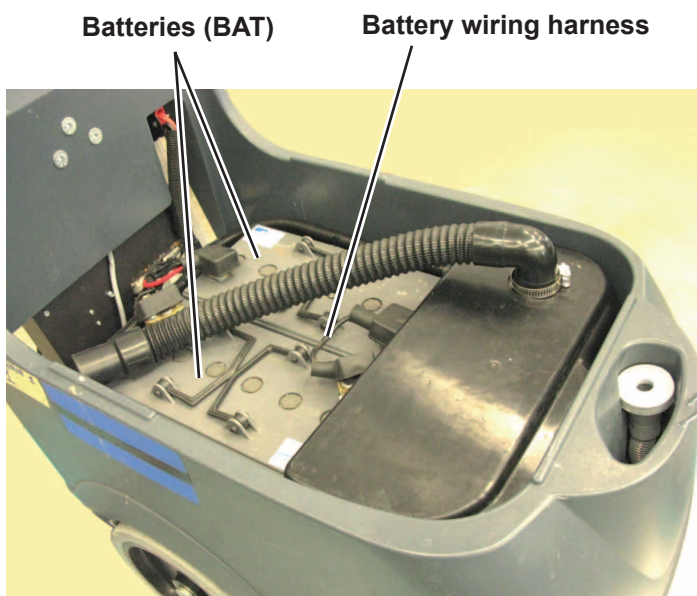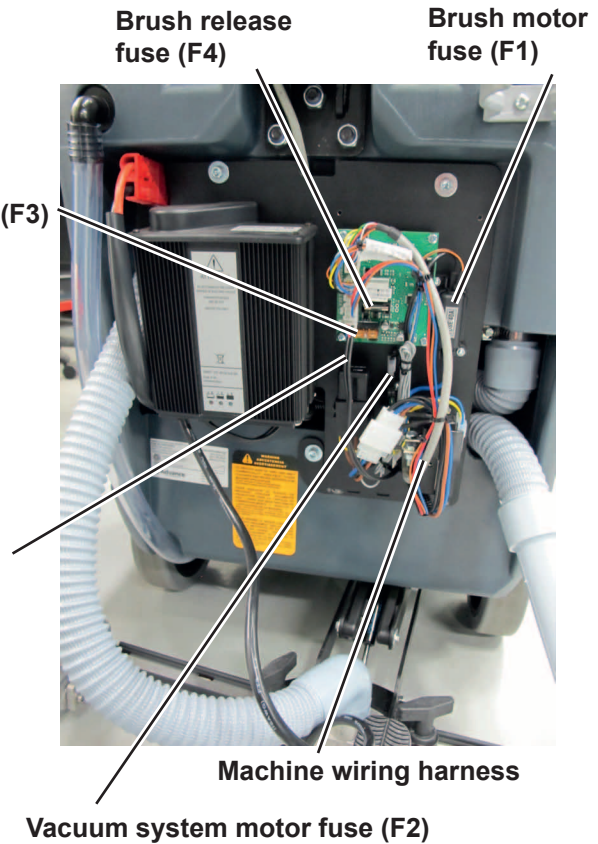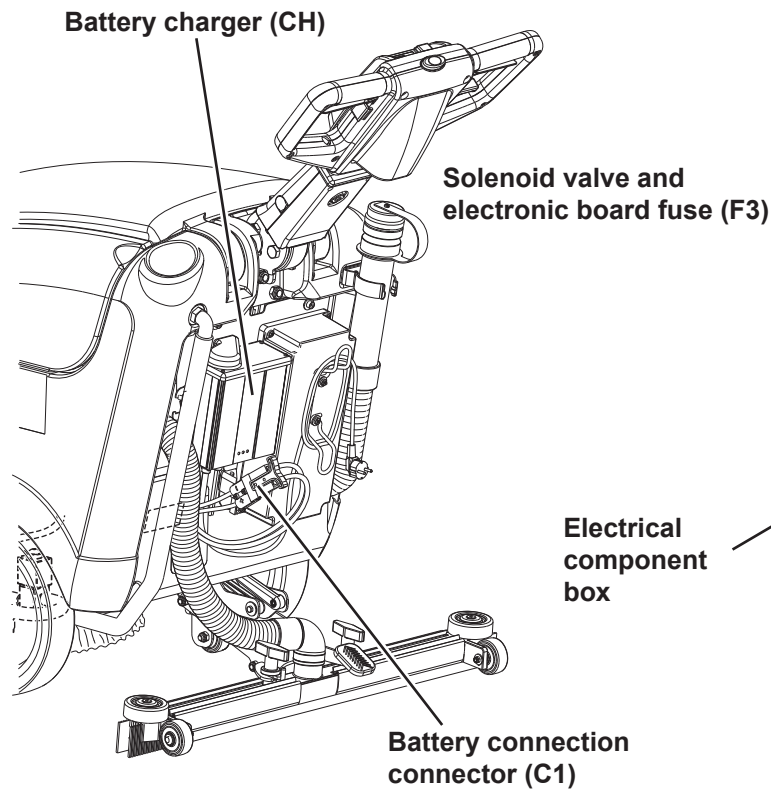

Battery fuse (F0)
(only for 9087311020 – 9087318020 models)

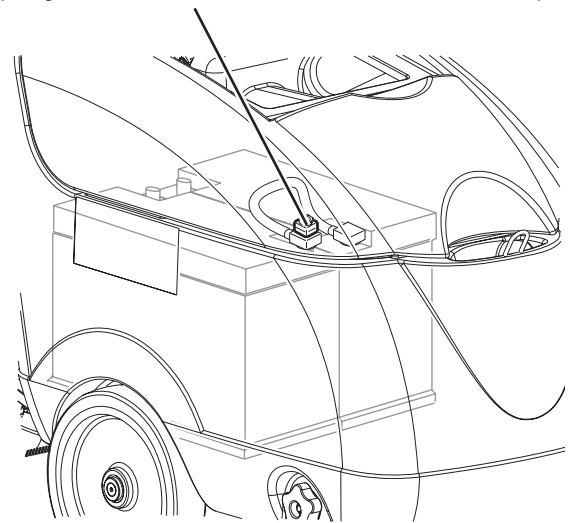

Maintenance and Adjustments

Battery Installation And Battery Type Setting (WET or GEL/AGM)

Set the electronic board of the machine and the battery charger according to the type of batteries to be installed (WET or GEL/AGM) as shown below.


Machine Setting

1. Disconnect the battery connector (red).
2. Remove the screws (A), then carefully remove the electrical component box cover (B).
3. On the electronic board, turn the microswitch (C) to WET or GEL/AGM, according to the type of batteries to be installed.



Warning! Do not move/set the adjacent switch (D).

4. Reinstall the electric component box cover (B) and tighten the screws (A).

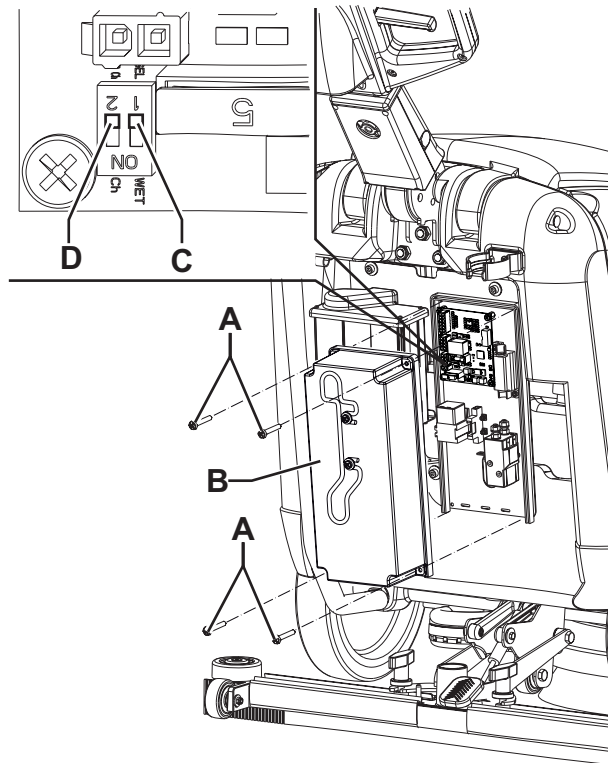


Battery Installation And Battery Type Setting (WET or GEL/AGM) (Continues)

Battery charger setting

5. To set the battery charger, refer to the relevant Manual supplied with the machine.

Battery Installation

6. Disconnect the vacuum hose (E) from the squeegee (F).
7. Disconnect the recovery water drain hose (G) from the bracket (H).
8. Open the cover (I).
9. Grasp the recovery tank (J) in the area (K) and slightly raise it.
10. Disconnect the vacuum hose (L) from the tank, then remove the tank (J) with the hoses (M) and (N).
11. Install the batteries on the machine according to the diagram (P).
12. Perform steps 6 to 10 in the reverse order.
13. Connect the battery connector (red).
14. Charge the batteries (see the procedure in Battery Charging paragraph).

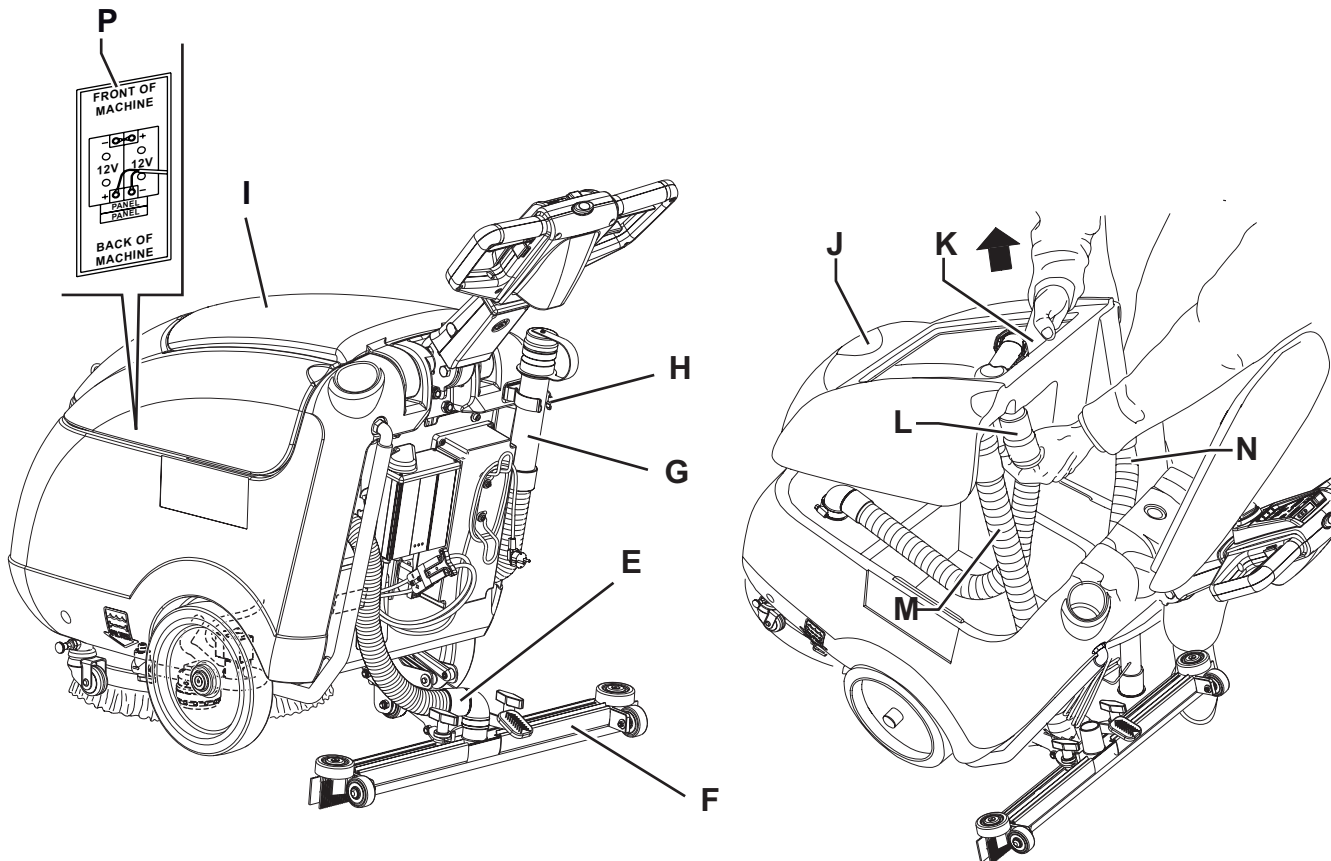

Battery Charging



Note: Charge the batteries when the yellow or red LED turns on, or at the end of each working cycle. Keeping the batteries charged make their life last longer.



Caution! When the batteries are discharged, charge them as soon as possible, as that condition makes their life shorter. Check for battery charge at least once a week.



Caution! When using lead (WET) batteries, battery charging produces highly explosive hydrogen gas. Charge the batteries in well-ventilated areas and away from naked flames.
Do not smoke while charging the batteries.
Do not reinstall the recovery tank until the battery charging cycle is over.



Caution! Pay careful attention when charging lead batteries (WET) as there may be battery fluid leakages. The battery fluid is corrosive. If it comes in contact with skin or eyes, rinse thoroughly with water and consult a physician.

1. Drive the machine to the appointed recharging area.
2. Turn the machine program selection knob to “0”.
3. For WET batteries only:
 - Tip up the recovery tank.
 - Check the level of electrolyte inside the batteries; if necessary, top up through the caps.
 - Leave all the battery caps open for next charging.
 - If necessary, clean the upper surface of the batteries.
4. Connect the battery charger cable to the electrical mains (the electrical mains voltage and frequency must be compatible with the battery charger values shown on the machine serial number plate).



Note: When the battery charger is connected to the electrical mains, all machine functions are automatically cut off.
The battery charger red or yellow LED turned on, indicates that the batteries are charging.


5. When the battery charger green LED stays on, the battery charging cycle is over.
6. When the battery charging is completed, disconnect the battery charger cable from the electrical mains and wind it round its housing.
7. For WET batteries only:
 - Close all the battery caps.
 - Tip down the recovery tank.
8. Now the machine is ready to be used.




Note: For further information about the operation of the battery charger, see the Battery Charger Manual.

Battery Charger Setting and Dipswitch Configuration

To change the dipswitch configuration, remove the round white cap near the openings (see the illustration below), with a screwdriver.

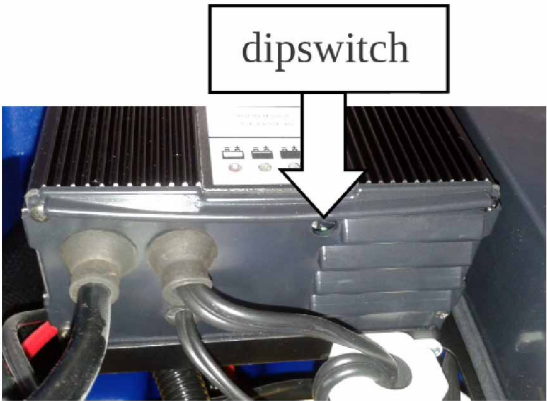

P100782

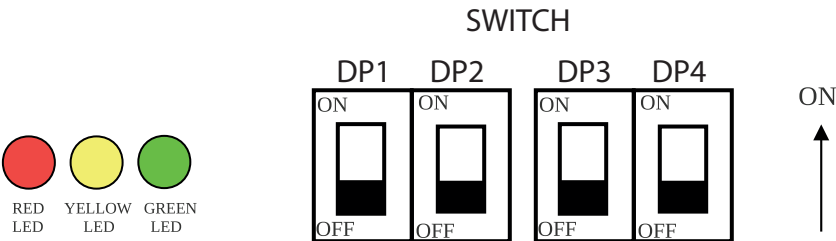

P100783

Switch DP1	Switch DP2	Switch DP3	BATTERY CHARGER LED CODE (*)	CHARGING CURVE	Switch DP4	CHARGING CURRENT
ON	ON	ON	2 flashes of RED	IUIa-ACD for Lead-Acid (WET) batteries	ON	9A
OFF	ON	ON	2 flashes of GREEN	IUU0-GEL for generic Gel and AGM batteries	OFF	8A (default)
OFF	ON	OFF	2 flashes of RED & GREEN	IUIa-AGM for DISCOVER AGM batteries		
OFF	OFF	ON	2 flashes of YELLOW & GREEN	IUU0-OPTIMA for OPTIMA batteries (default Nilfisk)		
OFF	OFF	OFF	2 flashes of YELLOW	IUIa-GEL for EXIDE SONNENSCHN Gel batteries		

(*) The LED codes are shown by the battery charge indicators each time that the battery charger is turned on, before the charging cycle starts.



Fuse Check and Replacement

Fuses in the electric component box

1. Drive the machine on a level floor. Make sure that the machine cannot move independently.
2. Disconnect the battery connector (red).
3. Remove the screws (A), then remove the electrical component box cover (B).
4. Check the following fuses for integrity:
 - (C): F1 (40 A) circuit breaker, brush motor (open cover).
 - (D): F2 (30 A) blade fuse, vacuum system motor.
 - (E): F3 (5 A) blade fuse, solenoid valve and electronic board.
 - (F): F4 (20 A) glass fuse, brush release system.
5. Replace the open fuse, when the component that caused deactivation has fully cooled down.
6. Place the cover (B) and tighten screws.
7. Connect the battery connector (red).

Battery Fuse (only for 9087311020 – 9087318020 models)

1. Drive the machine on a level floor. Make sure that the machine cannot move independently.
2. Disconnect the battery connector (red).
3. Remove the recovery tank.
4. On the battery cable (G) check/replace the following fuse:
 - (H): F0 (125 A) battery fuse.
5. Assemble the recovery tank.
6. Connect the battery connector (red).

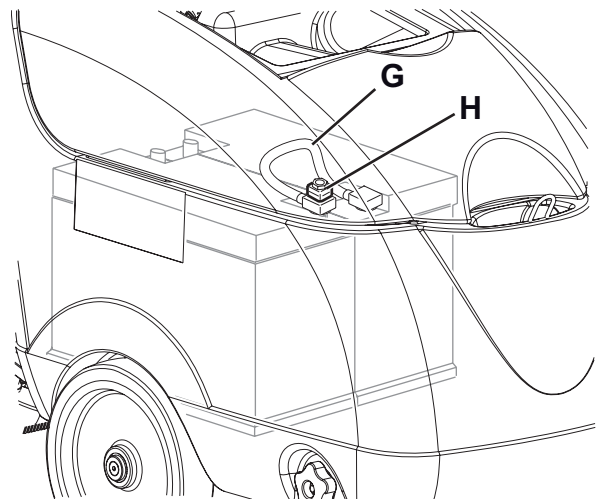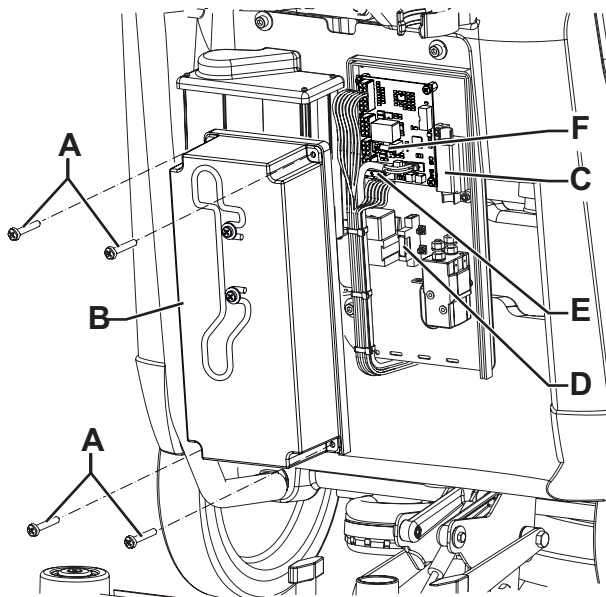


Charge condition display

	INDICATION	TRANSITION THRESHOLD (VOLT)		CONSEQUENCE
		WET	GEL	
1	GREEN LED: fixed - YELLOW LED: fixed	22 V	22.2 V	-
2	YELLOW LED: fixed - RED LED: flashing	20.4 V	21.6 V	Brushes + Vacuum system OFF

Troubleshooting

Trouble	Possible Causes	Remedy
The machine is not working	The battery connector (C1) is not connected or broken	Connect or replace it
	The batteries (BAT) are discharged or its connections are not efficient	Charge the batteries or clean/repair the connections
	The batteries (BAT) are broken	Check the battery no-load voltage
	The battery charger (CH) is broken	Replace
	The fuses (F0, F3) are open	Replace
	The wiring harness is cut or pressed or short circuited	Repair
	The rotary switch (SW1) of the program selection knob is not working	Replace
	The function electronic board (EB1) is broken	Replace
	The DIP-switch 2 is turned to NO CH (ON) when the battery charger is installed	Turn the DIP-switch 2 to CH (OFF)

Machine Wiring Diagram

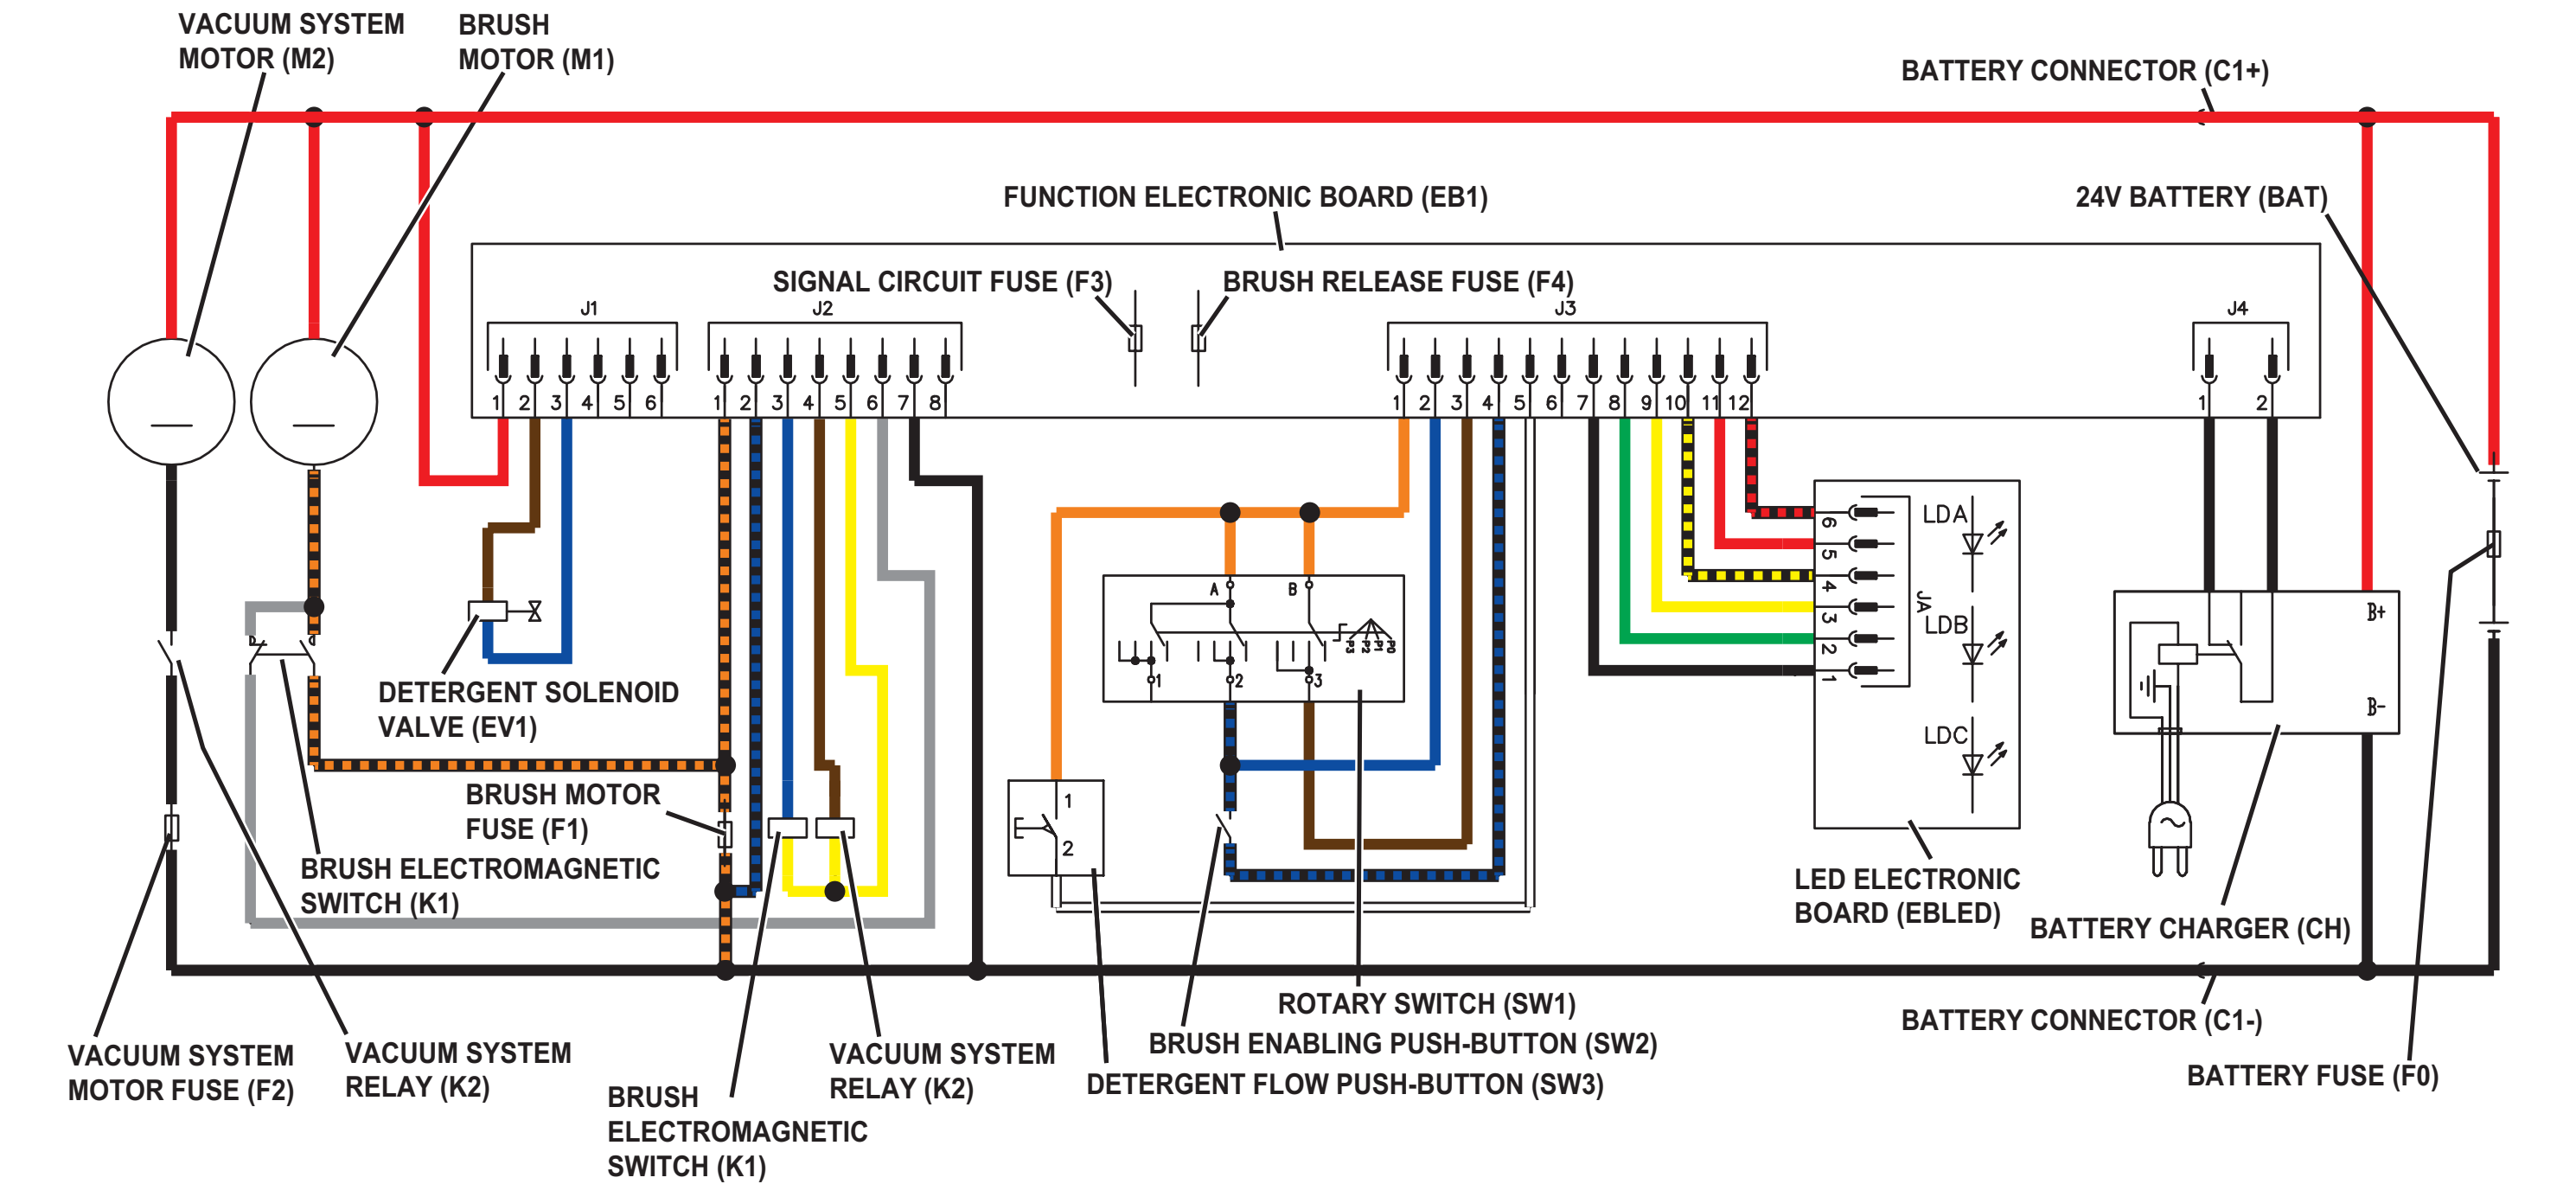


Specifications

Descriptions / Model	Advance SC400 17 B	Nilfisk SC400 43 B FULL PKG	Nilfisk SC400 43 B
Total absorbed power	29 A (0.75 kW)		
Battery compartment size	13.7x17.7x10.2 in (350x350x260 mm)		
Battery voltage	24 V		
Standard batteries (2)	12 V - 50 Ah C5 (AGM) Spiracell		
Battery charger	100-240 VAC		
Work autonomy (standard batteries)	1.5 hour		

Electrical System - Cable Version

Main Wiring Diagram

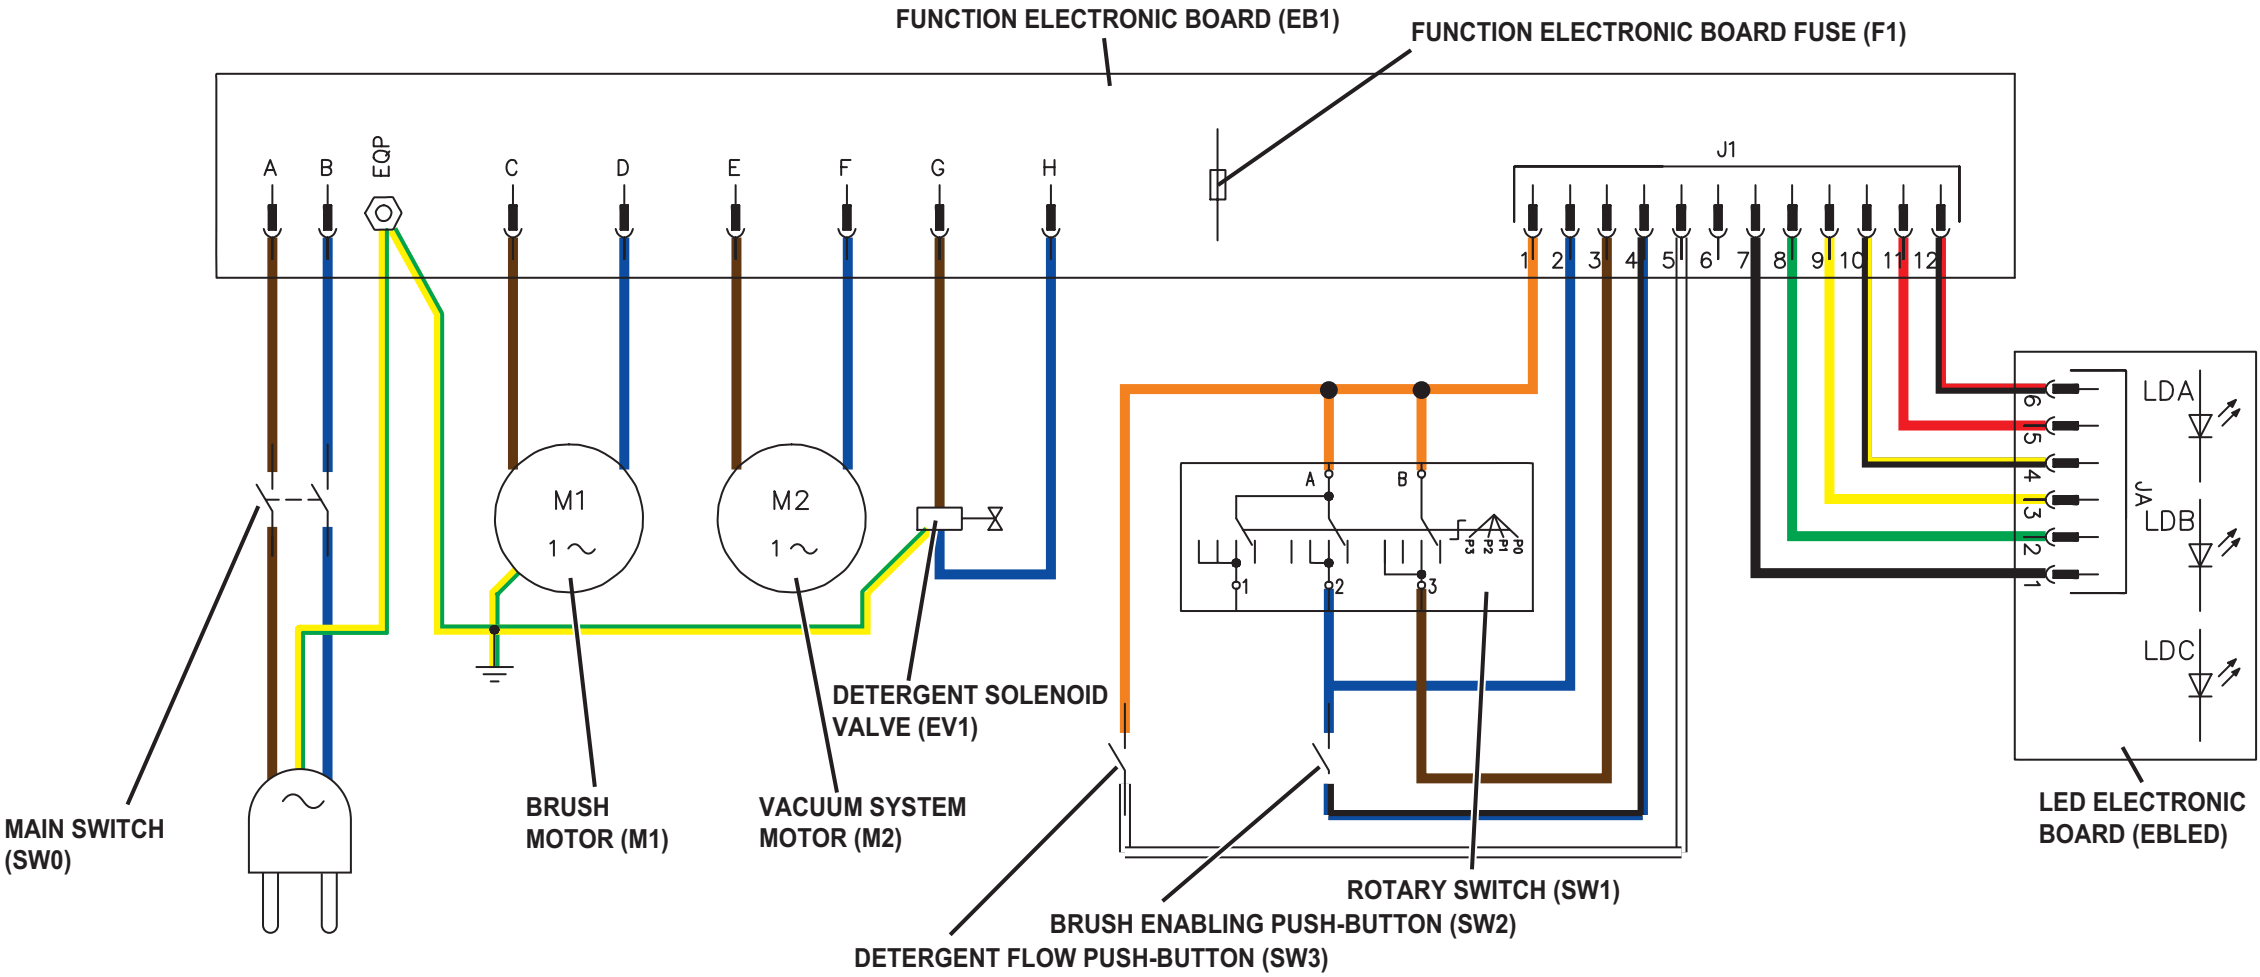

Specifications

Descriptions / Model	Advance SC400 17 E	Nilfisk SC400 43 E
IP protection class	X4	
Protection class (electric)	I	
Length electrical main	65.6 ft (20 mt) US PLUG	65.6 ft (20 mt) SHUKO PLUG
Electrical system voltage	115 V - 60 Hz	230 V - 50/60 Hz
Total absorbed power	10 A (1.1 kW)	1,6 kW


Recovery System - Battery Version

Functional Description

The water recovery system removes the dirty water from the floor and pipes it to a recovery tank. When the machine is running, the dirty water on the floor is collected by the squeegee blades and collected through the slots in the same, piped through the vacuum hose and into the tank by the airflow created by vacuum motor (M2). The dirty water is piped into the recovery tank, while the airflow continues to the vacuum fan. The vacuum system motor (M2) is supplied by the relay (K2) which is driven by the function electronic board (EB1) when the rotary switch (SW1) is turned to 1 or 3. The circuit is protected by the fuse (F2). The automatic float in the vacuum grid stops vacuum system motor (M2) from collecting any liquids.


When the automatic float closes and shuts down the vacuum system, the vacuum system motor noise will increase and the floor will not be dried. When the recovery tank is full it can be emptied through the drain hose.

Wiring Diagram

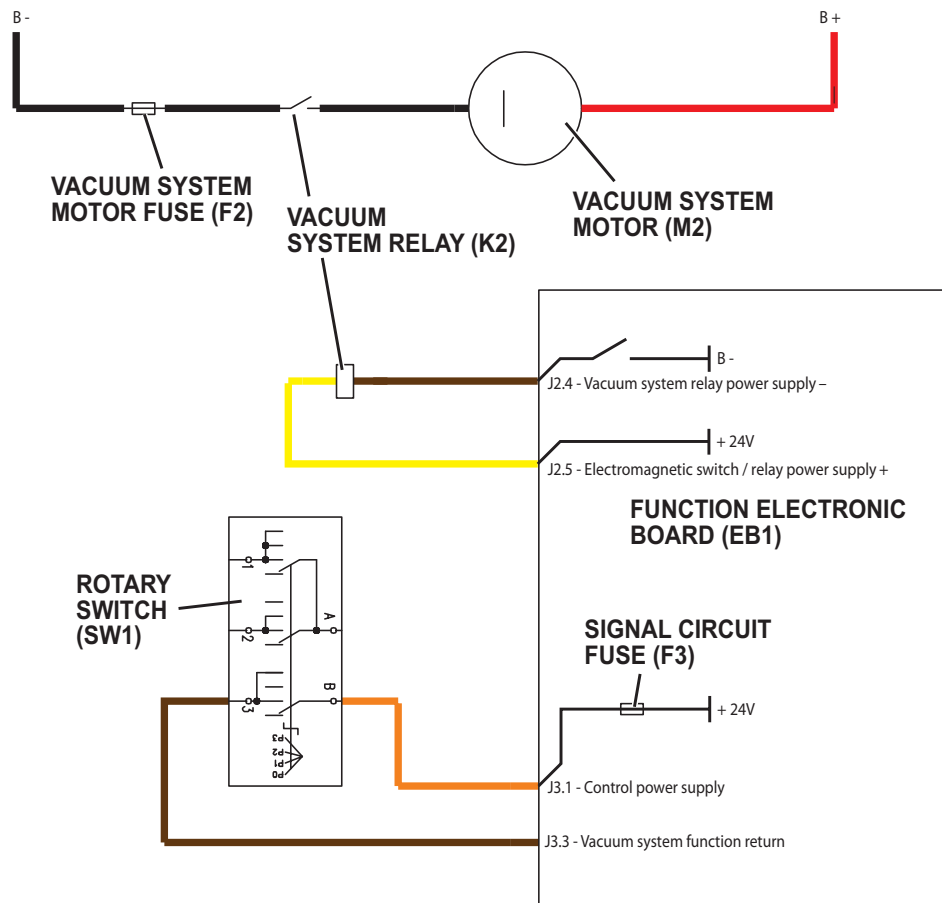

Component Locations

- Recovery tank
- Vacuum grid with automatic shut-off float
- Recovery tank cover
- Cover gasket
- Recovery water drain hose
- Squeegee vacuum hose
- Vacuum system motor (M2)
- Electrical component box
- Vacuum system motor fuse (F2)
- Vacuum system relay (K2)

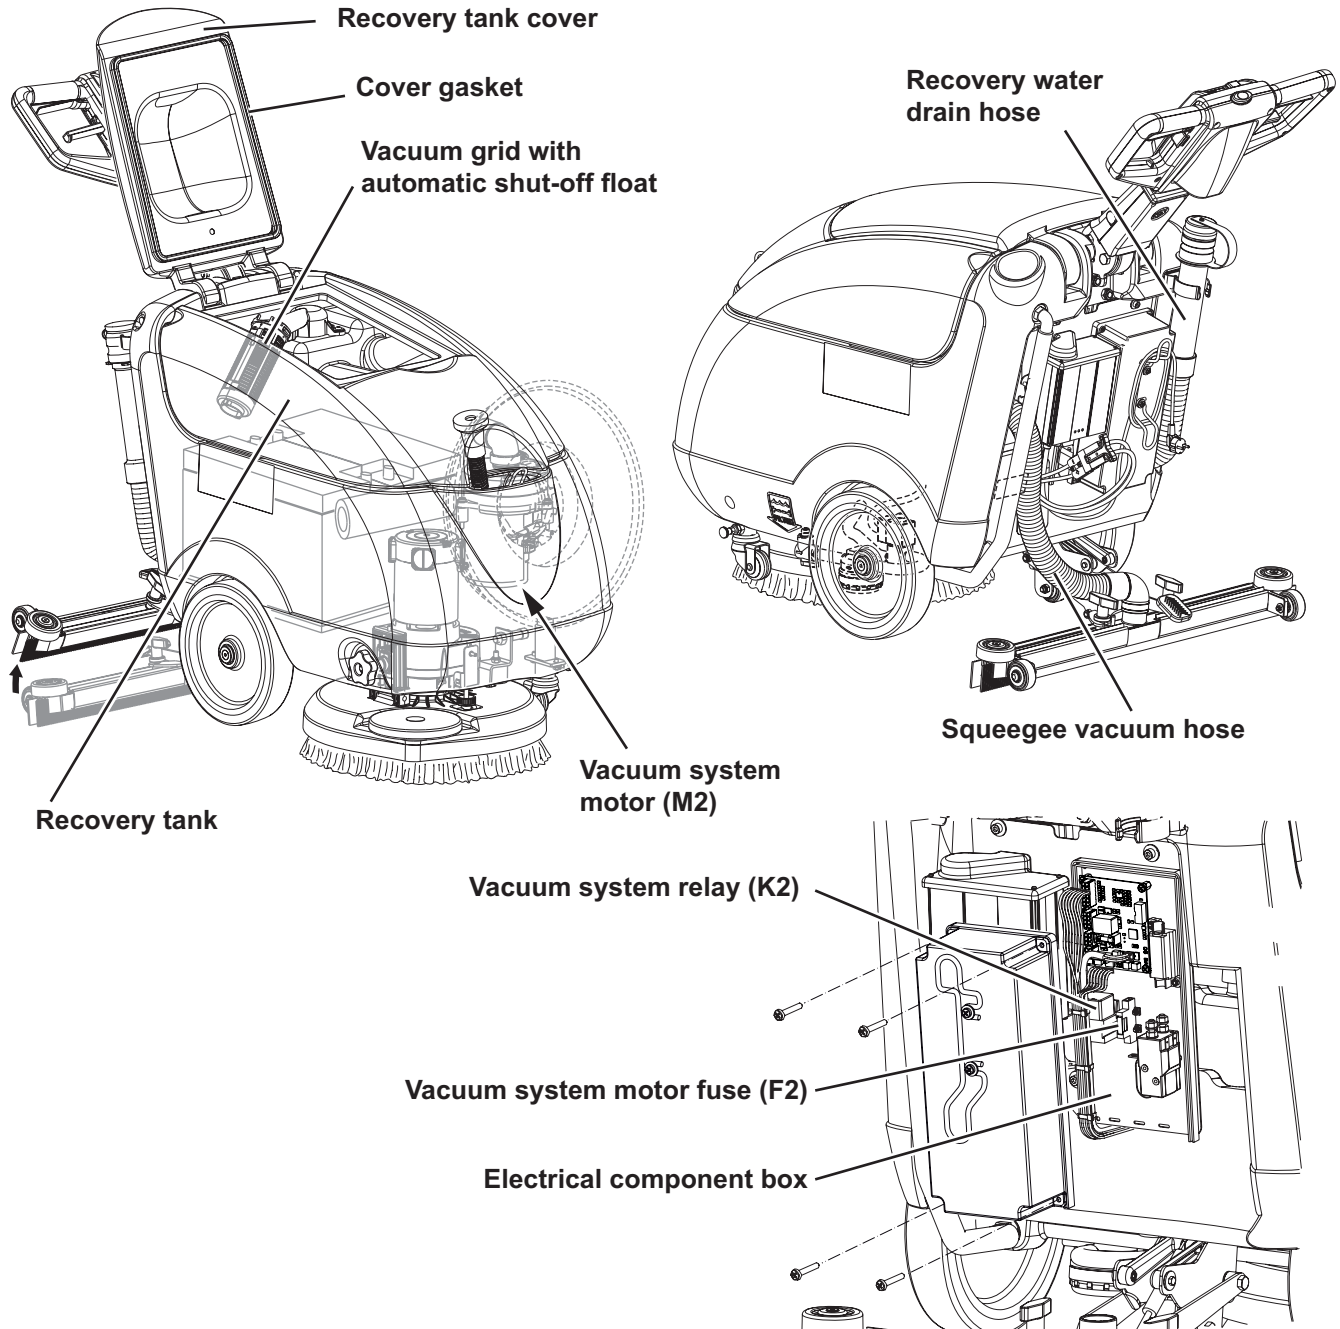

Maintenance and Adjustments

Tank and Vacuum Grid Cleaning

1. Drive the machine to the appointed disposal area.
2. Turn the machine program selection knob to “0”.
3. Open the recovery tank cover (A), then clean and wash the cover, the tank (B) and the vacuum grid (C) with clean water.

If necessary, release the fasteners (D) and open the grid (C), remove the float (E), clean all the components and then reinstall them.

If necessary, clean also the solution tank.


Drain the water from the tanks with the relevant drain hoses.

4. Check the recovery tank cover gasket (F) for integrity.

The gasket (F) must be efficient, because it creates vacuum in the tank that is necessary for vacuuming the recovery water.

If necessary replace the gasket (F) by removing it from its housing (G). When assembling the new gasket, install its junction (H) in the central rear area as shown in the figure.

5. The gasket (F) must be in good shape, as it is necessary for the recovery tank stay sealed.
6. Close the recovery tank cover (A).

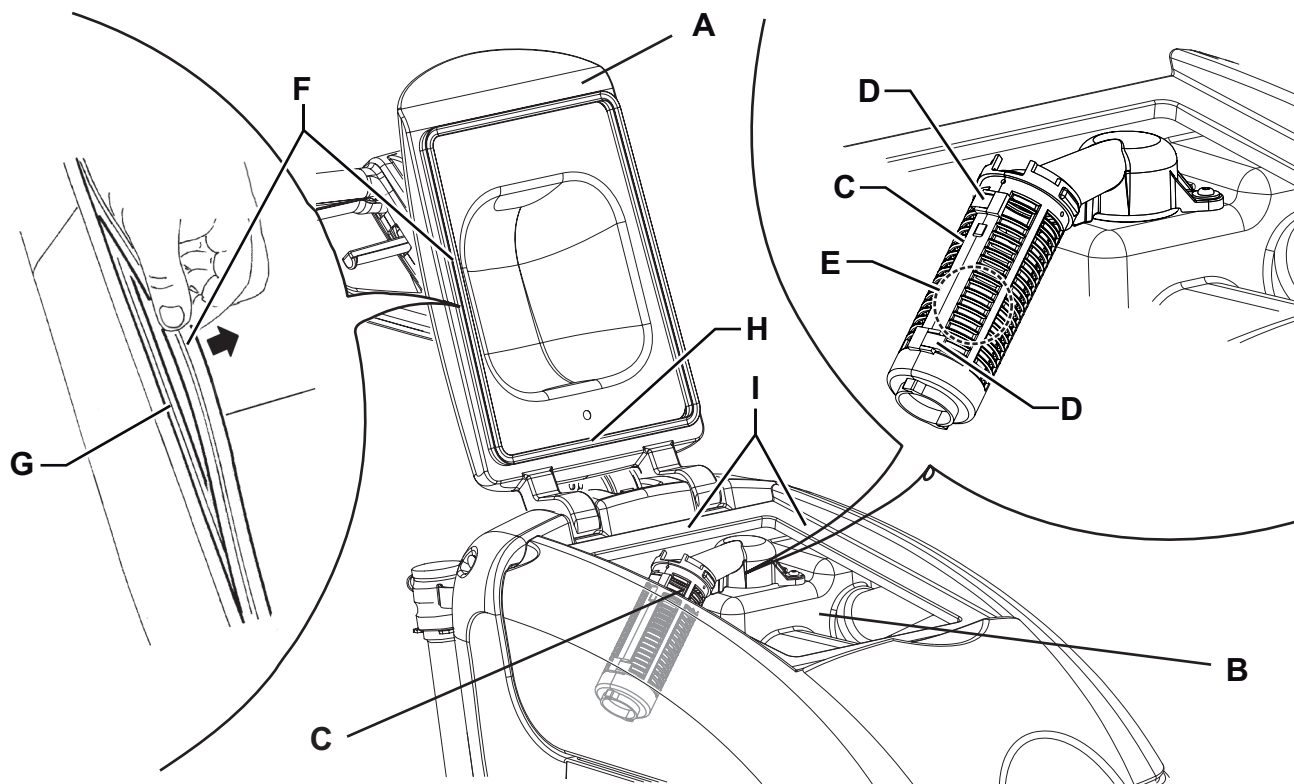

Troubleshooting

Trouble	Possible Causes	Remedy
The vacuum system motor (M2) does not turn on	The vacuum system motor carbon brushes are worn	Replace
	The rotary switch (SW1) is broken	Replace
	The vacuum system motor is faulty	Check the amperage.
		Check the carbon brushes.
		Replace.
	The fuse (F2) is open	Replace
	The relay (K2) is broken	Replace
The recovery water vacuuming is insufficient or there is no vacuuming	The vacuum grid with automatic shut-off float is activated because the recovery tank is full	Drain the recovery tank
	The vacuum grid is dirty	Clean
	The tank cover is not correctly positioned	Adjust
	The tank cover gasket is not efficient	Clean/replace
	The vacuum system motor filter is dirty	Clean
	The vacuum gaskets are damaged or do not match perfectly	Repair or replace
	The squeegee vacuum hose is broken	Replace
	The recovery tank vacuum hose is broken	Replace

Removal and Installation

Vacuum System Motor Amperage Check



Warning! *This procedure must be performed by qualified personnel only.*

1. Check that the squeegee and the vacuum hose are clean and that there is no dirt in their inner parts.
2. Keep the squeegee lifted.
3. Remove the screws (A), then remove the electrical component box cover (B).



Warning! *Do not touch uncovered electrical components while performing the following steps.*

4. Apply the Amp clamp (C) on the electrical cable (D) of the vacuum system motor on the relay output (E).
5. Turn on the vacuum system and check that the vacuum system motor amperage is between 13 and 17 A at 24V.
Stop the vacuum system.
Turn the machine program selection knob to “0”.

Remove the Amp clamp (C).




If the amperage is higher, perform the following procedures to detect and correct the abnormal input:

- Check that the vacuum system motor fuse (F2) is properly tightened.
- Check the condition of the vacuum system motor carbon brushes.
- Remove the vacuum system motor (see the procedure in the Vacuum System Motor Disassembly/Assembly paragraph), and check the condition of all its components.

If the above-mentioned procedures do not produce the correct readings for the vacuum system motor amperage, the motor must be replaced (see the procedure in the Vacuum System Motor Disassembly/Assembly paragraph).

Reassembly

6. Assemble the components in the reverse order of disassembly.

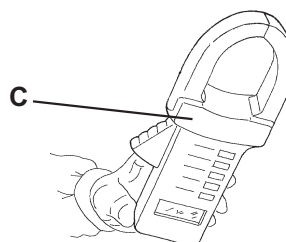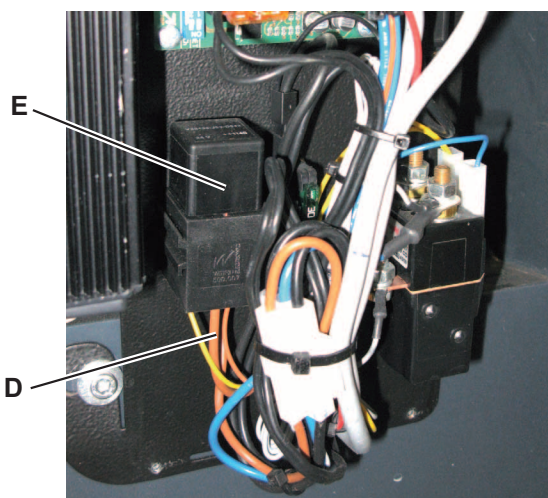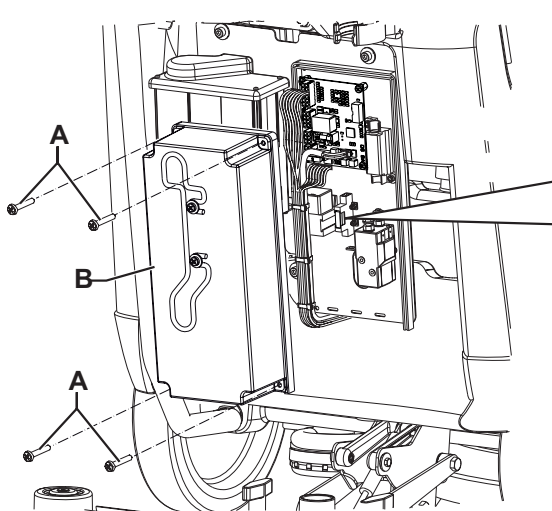

Vacuum System Motor Carbon Brush Check/Replacement

Disassembly/Check





1. Remove the vacuum system motor (see the procedure in the Vacuum System Motor Disassembly/Assembly paragraph).
2. At the workbench, remove the vacuum system motor guard (A) by disengaging its inner fasteners (B).
3. With a proper tool, remove the tin soldering spot (C) between both lead-in wires (D).
4. Disconnect the lead-in wires (D).
5. Remove the screws (E) and remove the carbon brushes (F).

6. Check the carbon brushes (F) for wear. The carbon brushes are worn when:
 - The contact with the motor armature is insufficient
 - The contact surface is not integral
 - The stroke is less than 0.12 in (3 mm)
 - The spring is broken

In this cases, replace both motor carbon brushes.

Assembly

7. Assemble the components in the reverse order of disassembly, and note the following:
 - after connecting the lead-in wires (D) fasten them with a tin soldering spot (C).

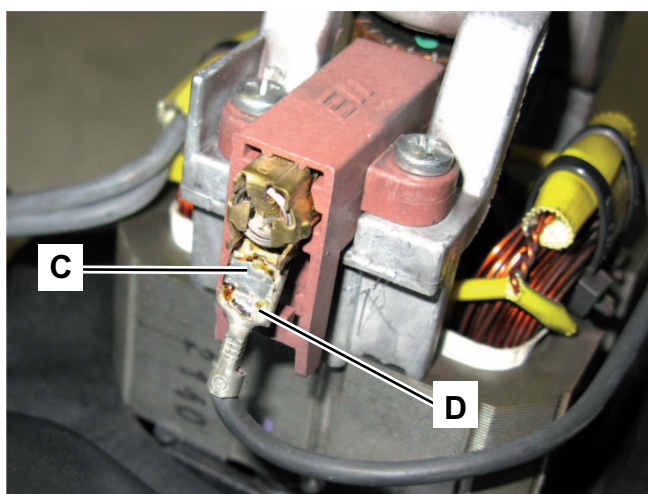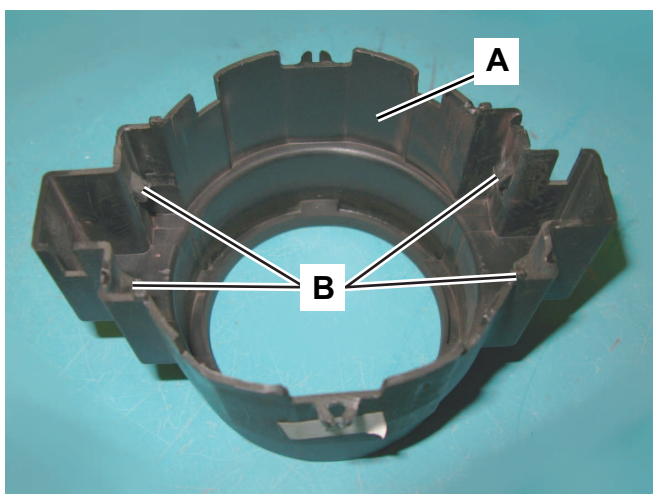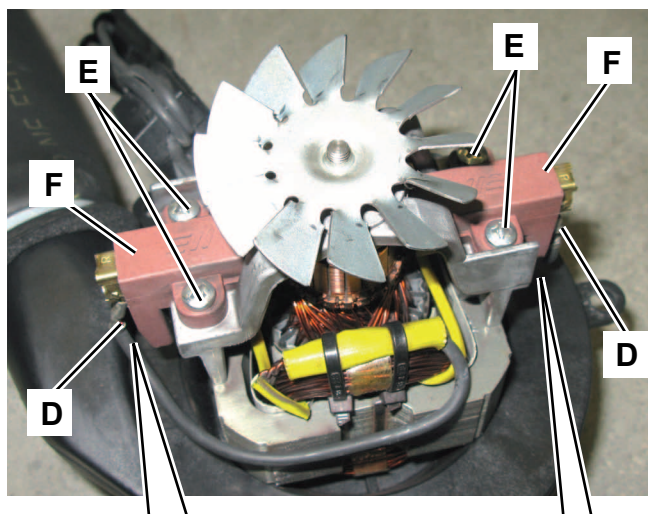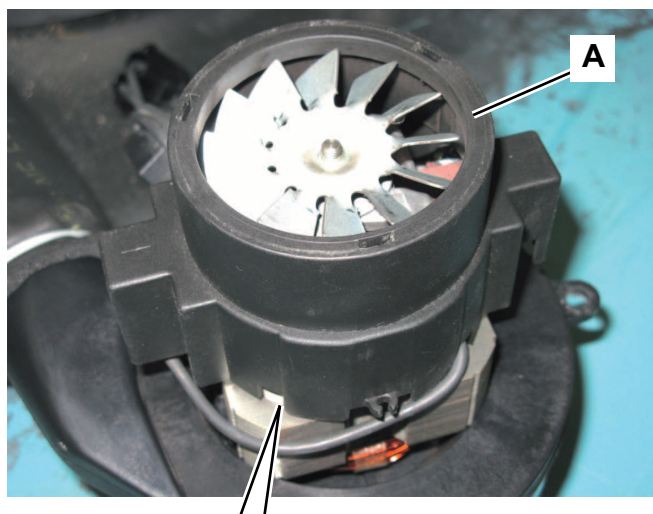




Vacuum System Motor Disassembly/Assembly

Disassembly

1. Remove the recovery tank.
2. Loosen the band (A) and disconnect the hose (B) from the vacuum system motor below.
3. Remove the guard (C).
4. Disconnect the connector (D) of the vacuum system motor (E).
5. Remove the screws (F), then lift them from the housing and remove the vacuum system motor (E).
6. If necessary, remove the sound-proof panels (G) and (H) from the motor.

Assembly

7. Assemble the components in the reverse order of disassembly.

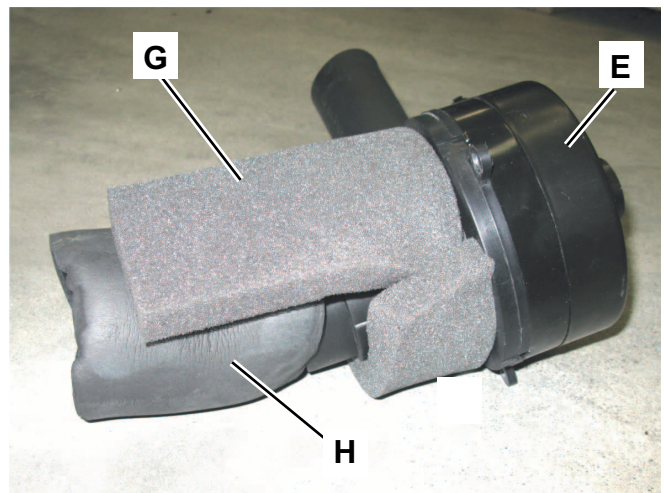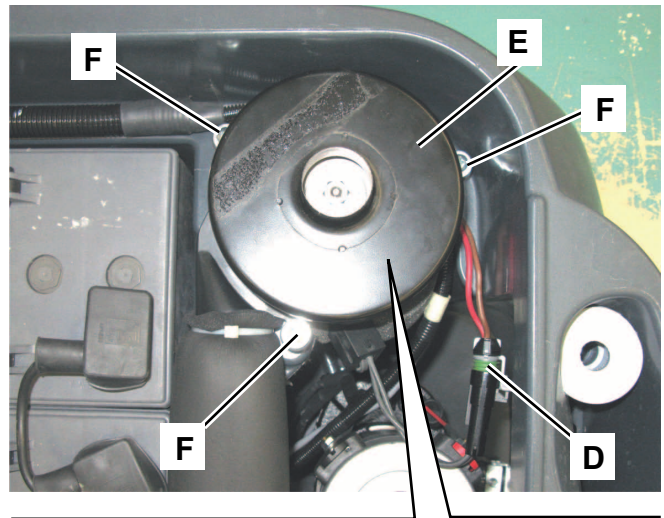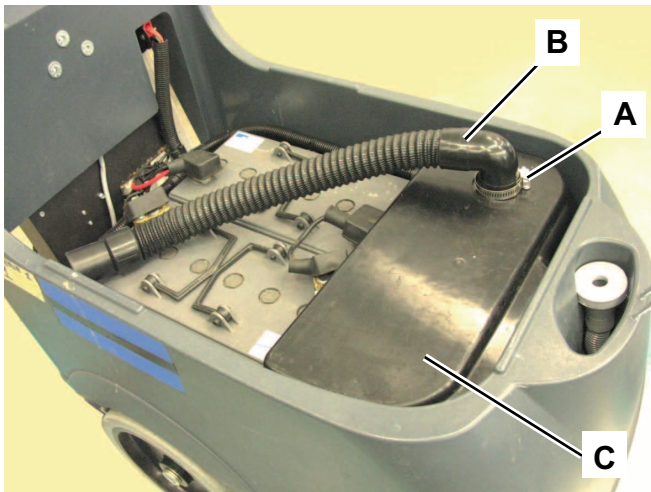

Specifications

Descriptions / Model	Advance SC400 17 B	Nilfisk SC400 43 B FULL PKG	Nilfisk SC400 43 B
Recovery tank capacity	5.5 US gal (21 liters)		
Vacuum system motor power	0.4 hp (300 W)		
Vacuum water lift (blocked)	47.2 inH ₂ O (1,200 mmH ₂ O)		


Recovery System - Cable Version

Functional Description

The water recovery system removes the dirty water from the floor and pipes it to a recovery tank. When the machine is running, the dirty water on the floor is collected by the squeegee blades and collected through the slots in the same, piped through the vacuum hose and into the tank by the airflow created by vacuum motor (M2). The dirty water is piped into the recovery tank, while the airflow continues to the vacuum fan. The vacuum system motor (M2) is supplied by the relay on board to the functions electronic board (EB1) when the rotary switch (SW1) is turned to 1 or 3. The automatic float in the vacuum grid stops vacuum system motor (M2) from collecting any liquids.


When the automatic float closes and shuts down the vacuum system, the vacuum system motor noise will increase and the floor will not be dried. When the recovery tank is full it can be emptied through the drain hose.

Wiring Diagram

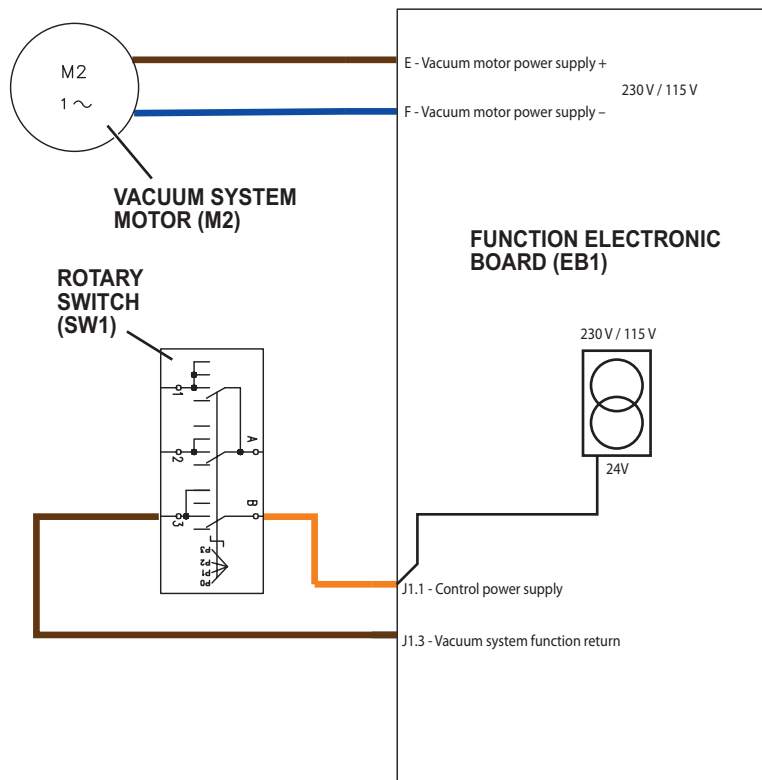

Component Locations

- Recovery tank
- Vacuum grid with automatic shut-off float
- Recovery tank cover
- Cover gasket
- Recovery water drain hose
- Squeegee vacuum hose
- Vacuum system motor (M2)

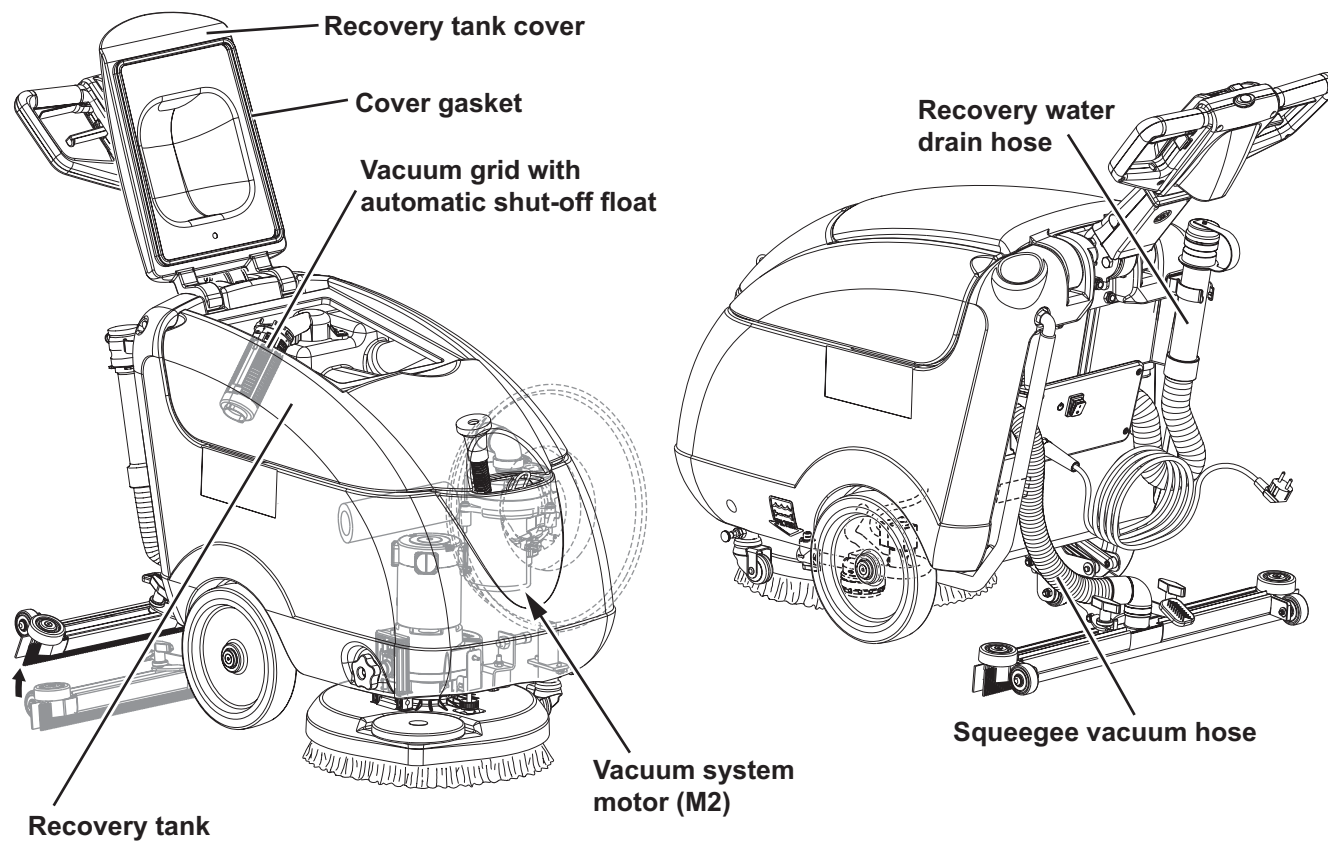

P200053E

Maintenance and Adjustments

Tank and Vacuum Grid Cleaning

1. Drive the machine to the appointed disposal area.
2. Make sure that the power supply cable plug is disconnected from the electrical mains and turn the machine program selection knob to "0".
3. Open the recovery tank cover (A), then clean and wash the cover, the tank (B) and the vacuum grid (C) with clean water.

If necessary, release the fasteners (D) and open the grid (C), remove the float (E), clean all the components and then reinstall them.

If necessary, clean also the solution tank.


Drain the water from the tanks with the relevant drain hoses.

4. Check the recovery tank cover gasket (F) for integrity.

The gasket (F) must be efficient, because it creates vacuum in the tank that is necessary for vacuuming the recovery water.

If necessary replace the gasket (F) by removing it from its housing (G). When assembling the new gasket, install its junction (H) in the central rear area as shown in the figure.

5. The gasket (F) must be in good shape, as it is necessary for the recovery tank stay sealed.
6. Close the recovery tank cover (A).

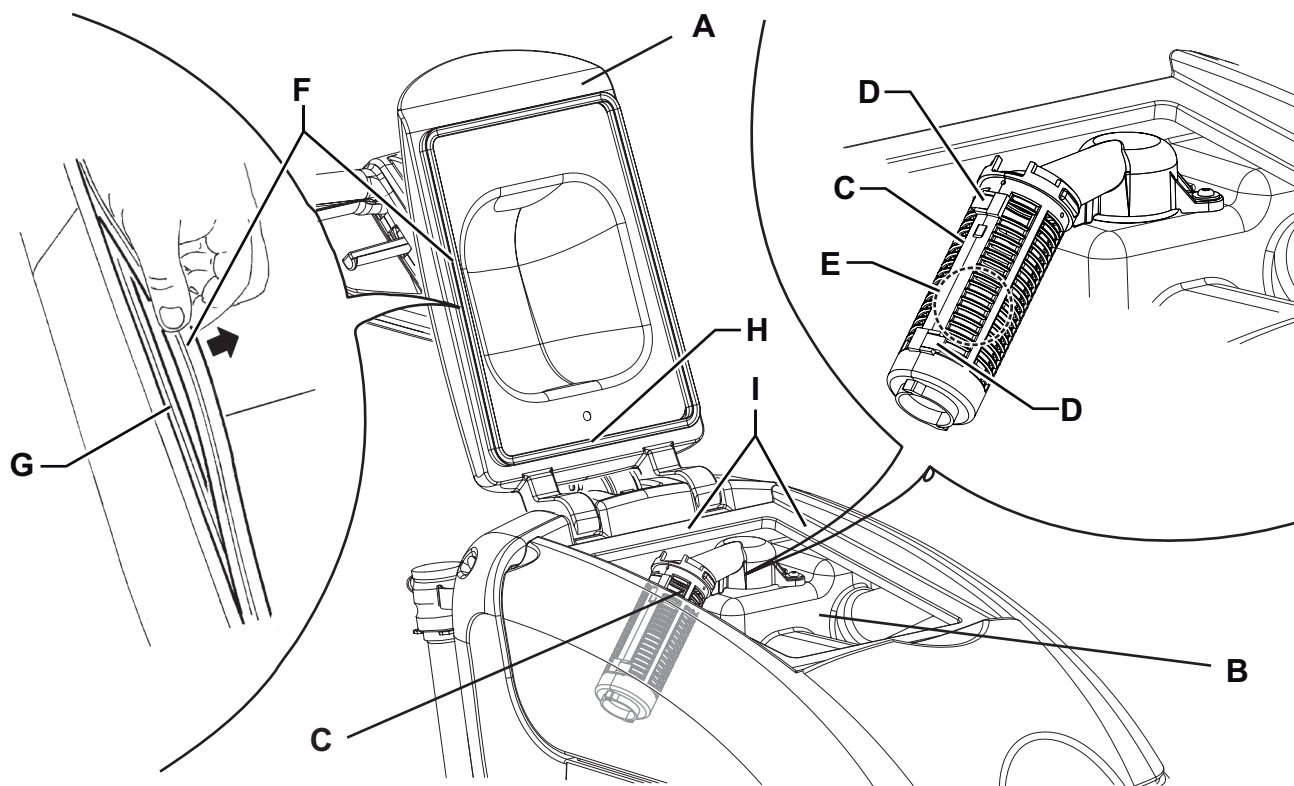

Troubleshooting

Trouble	Possible Causes	Remedy
The vacuum system motor (M2) does not turn on	The vacuum system motor carbon brushes are worn	Replace
	The rotary switch (SW1) is broken	Replace
	The vacuum system motor is faulty	Check the amperage.
		Check the carbon brushes.
		Replace.
The recovery water vacuuming is insufficient or there is no vacuuming	The vacuum grid with automatic shut-off float is activated because the recovery tank is full	Drain the recovery tank
	The vacuum grid is dirty	Clean
	The tank cover is not correctly positioned	Adjust
	The tank cover gasket is not efficient	Clean/replace
	The vacuum system motor filter is dirty	Clean
	The vacuum gaskets are damaged or do not match perfectly	Repair or replace
	The squeegee vacuum hose is broken	Replace
	The recovery tank vacuum hose is broken	Replace

Removal and Installation

Vacuum System Motor Amperage Check



Danger! *This procedure must be performed by qualified personnel only because the power plug must be connected to the power supply.*

7. Drive the machine on a level floor. Make sure that the machine cannot move independently.





Danger! *Do not touch uncovered electrical components while performing the following steps.*

8. Move the main switch to "I".
9. Unscrew the screw and remove the slot board cover.
1. Check that the squeegee and the vacuum hose are clean and that there is no dirt in their inner parts.
2. Keep the squeegee lifted.
3. Apply the Amp clamp (A) on the electrical cable (B) of the vacuum system motor.
4. Turn the program selection knob on the vacuum system and check that the vacuum system motor amperage is between:
 - For the 115 V, 60 Hz: from 4 to 4,5 A
 - For the 230 V, 50 - 60 Hz: from 2 to 2,5 A
5. Remove the Amp clamp (A).
6. Turn the machine program selection knob to "0".
7. Turn the main switch to "0".
8. If the amperage is higher, perform the following procedures to detect and correct the abnormal input:
 - Check the condition of the vacuum system motor carbon brushes.
 - Remove the vacuum system motor (see the procedure in the Vacuum System Motor Disassembly/Assembly paragraph), and check the condition of all its components.
9. If the above-mentioned procedures do not produce the correct readings for the vacuum system motor amperage, the motor must be replaced (see the procedure in the Vacuum System Motor Disassembly/Assembly paragraph).

Reassembly

10. Assemble the components in the reverse order of disassembly.

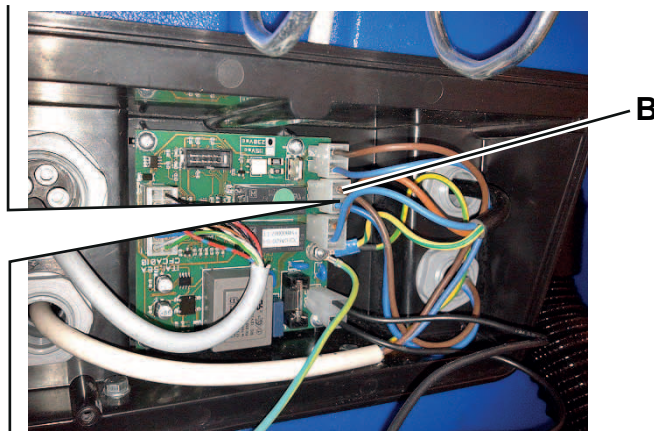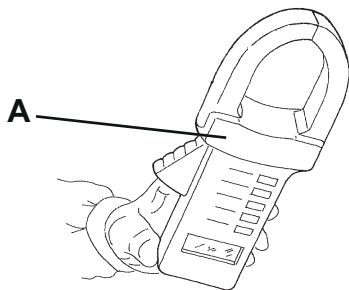

Vacuum System Motor Carbon Brush Check/Replacement

Disassembly/Check





1. Remove the vacuum system motor (see the procedure in the Vacuum System Motor Disassembly/Assembly paragraph).
2. At the workbench, remove the vacuum system motor guard (A) by disengaging its inner fasteners (B).
3. With a proper tool, remove the tin soldering spot (C) between both lead-in wires (D).
4. Disconnect the lead-in wires (D).
5. Remove the screws (E) and remove the carbon brushes (F).

6. Check the carbon brushes (F) for wear. The carbon brushes are worn when:
 - The contact with the motor armature is insufficient
 - The contact surface is not integral
 - The stroke is less than 0.12 in (3 mm)
 - The spring is broken

In this cases, replace both motor carbon brushes.

Assembly

7. Assemble the components in the reverse order of disassembly, and note the following:
 - after connecting the lead-in wires (D) fasten them with a tin soldering spot (C).

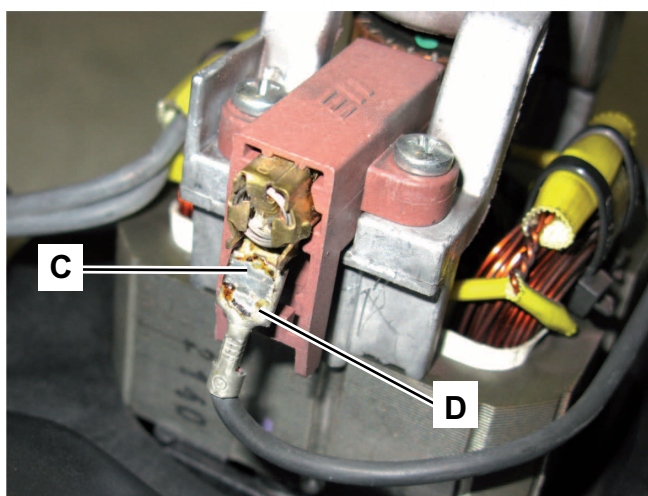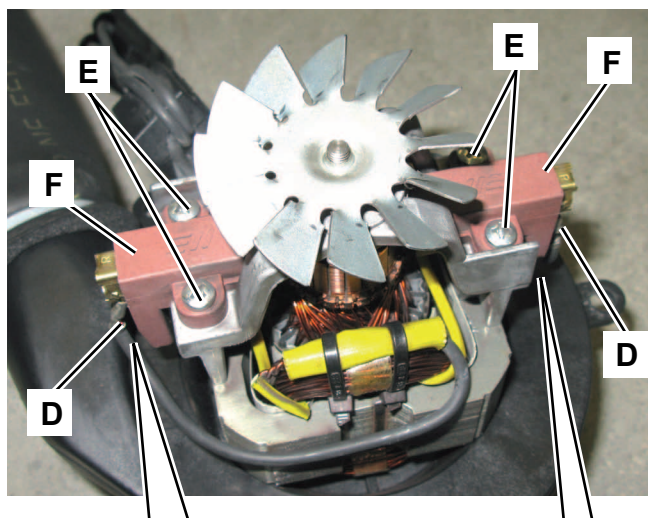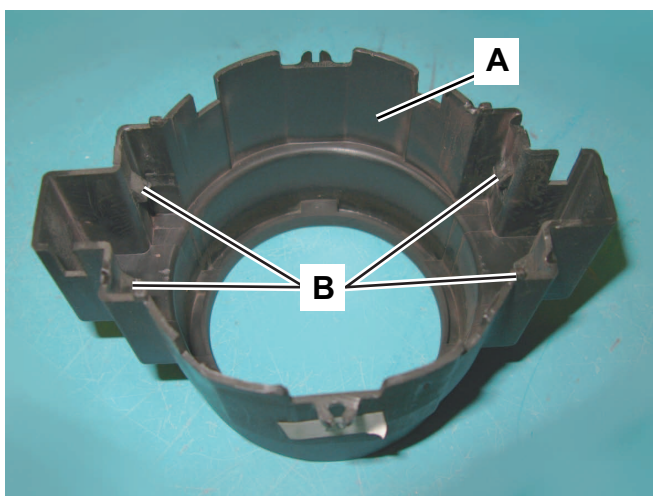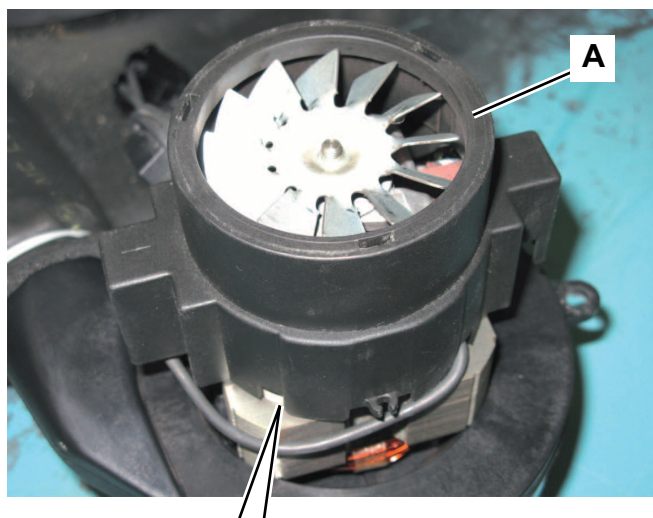




Vacuum System Motor Disassembly/Assembly

Disassembly

1. Remove the recovery tank.
2. Loosen the band (A) and disconnect the hose (B) from the vacuum system motor below.
3. Remove the guard (C).
4. Disconnect the connector (D) of the vacuum system motor (E).
5. Remove the screws (F), then lift them from the housing and remove the vacuum system motor (E).
6. If necessary, remove the sound-proof panels (G) and (H) from the motor.

Assembly

7. Assemble the components in the reverse order of disassembly.

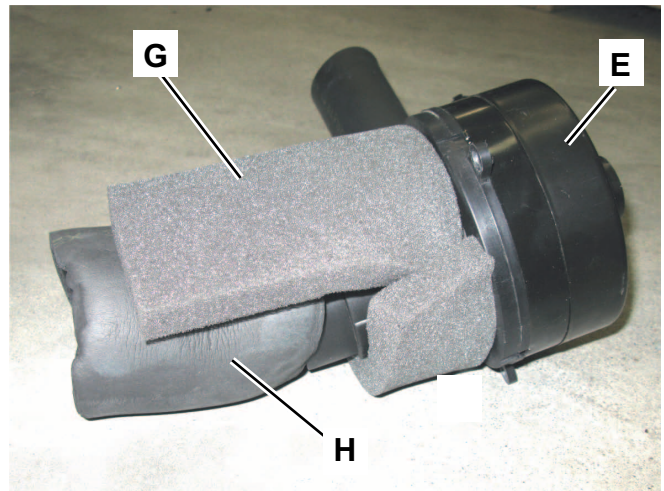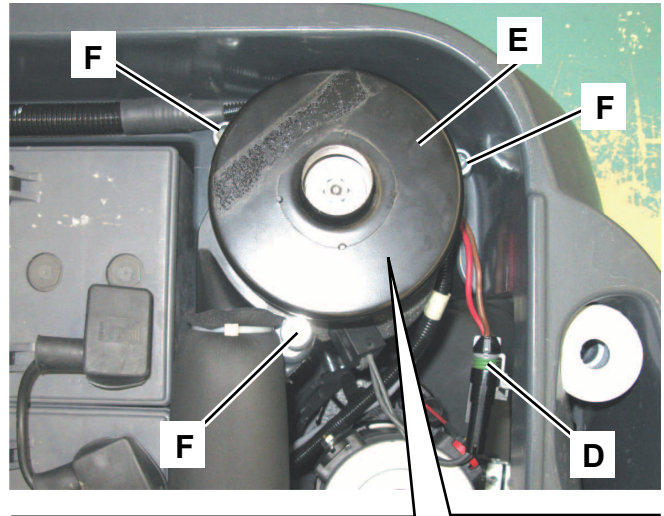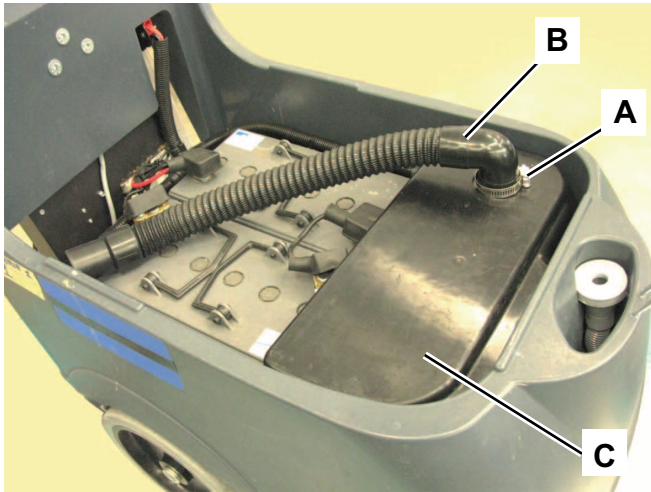

Specifications

Descriptions / Model	Advance SC400 17 E	Nilfisk SC400 43 E
Recovery tank capacity	5,5 US gal (21 Liters)	
Vacuum system motor power	0.73 hp (550 W)	
Vacuum water lift (blocked)	0.0127 MPa (1.300 mmH ₂ O)	

Scrub System, Disc - Battery Version

Functional Description

The disc brush system can be started by the operator. The disc brush rotates counter-clockwise.

The brush system, when turning, cleans/washes the floor surface and assists machine forward movement. The deck, where brushes suitable for cleaning the particular type of floor are installed, is the main part of the scrub system. The brush deck is fixed and integrated in the machine with a support bracket. The adjusting systems adjusts the forward speed, while the handwheel on the deck adjusts the machine straight-forward drive.

The brush working pressure is functional to the machine designed balance.

The brush motor (M1) is supplied by the electromagnetic switch (K1) which is driven by the function electronic board (EB1) when the rotary switch (SW1) is turned to 1 or 2, and the brush enabling push-button (SW2) is pressed. The circuit is protected by the fuse (F1) and by the electronic protection system described in the Function Electronic Board Specifications chapter.

The system, once activated, uses the solution coming from the solution system, to wash the floor.

In case of brush motor overload, a safety system stops the brushes after about one minute of continuous

overload. The overload is shown by the three battery warning LEDs flashing simultaneously.

The overload is detected by monitoring the current flow sum on the motor. The current is measured by checking the voltage drop through the fuse (F1). If the voltage drop is higher than 40 mV, the 3 battery LEDs flash simultaneously and, if the overload persists, the motor stops after a variable delay, depending on the overload amount.

To start scrubbing again after a brush stop due to overload, cycle the rotary switch (SW1) off and then back on.


To work properly, the brush motor needs the following:

- Rotary switch (SW1) turned to 1 or 2
- Brush enabling push-button (SW2) pressed
- Charged batteries (the red LED must not be flashing).

BRUSH RELEASE SYSTEM:


In order to release the brush from its hub, the brush motor starts running, then it is stopped quickly. Therefore the brush due to its inertia is disengaged from the hub. The system works better if the brush deck is lifted from the floor during this operation.

Wiring Diagram

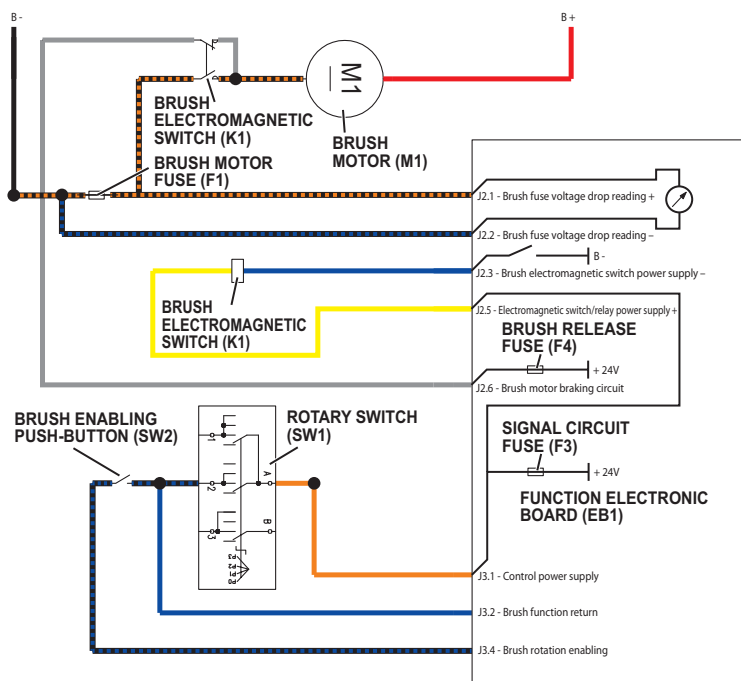

Component Locations

- Disc brush deck
- Brush motor (M1)
- Drive hub
- Electromagnetic switch (K1)
- Brush motor fuse (F1)
- Brush release fuse (F4)
- Machine forward speed adjusting handwheel
- Machine straight forward movement adjusting handwheel

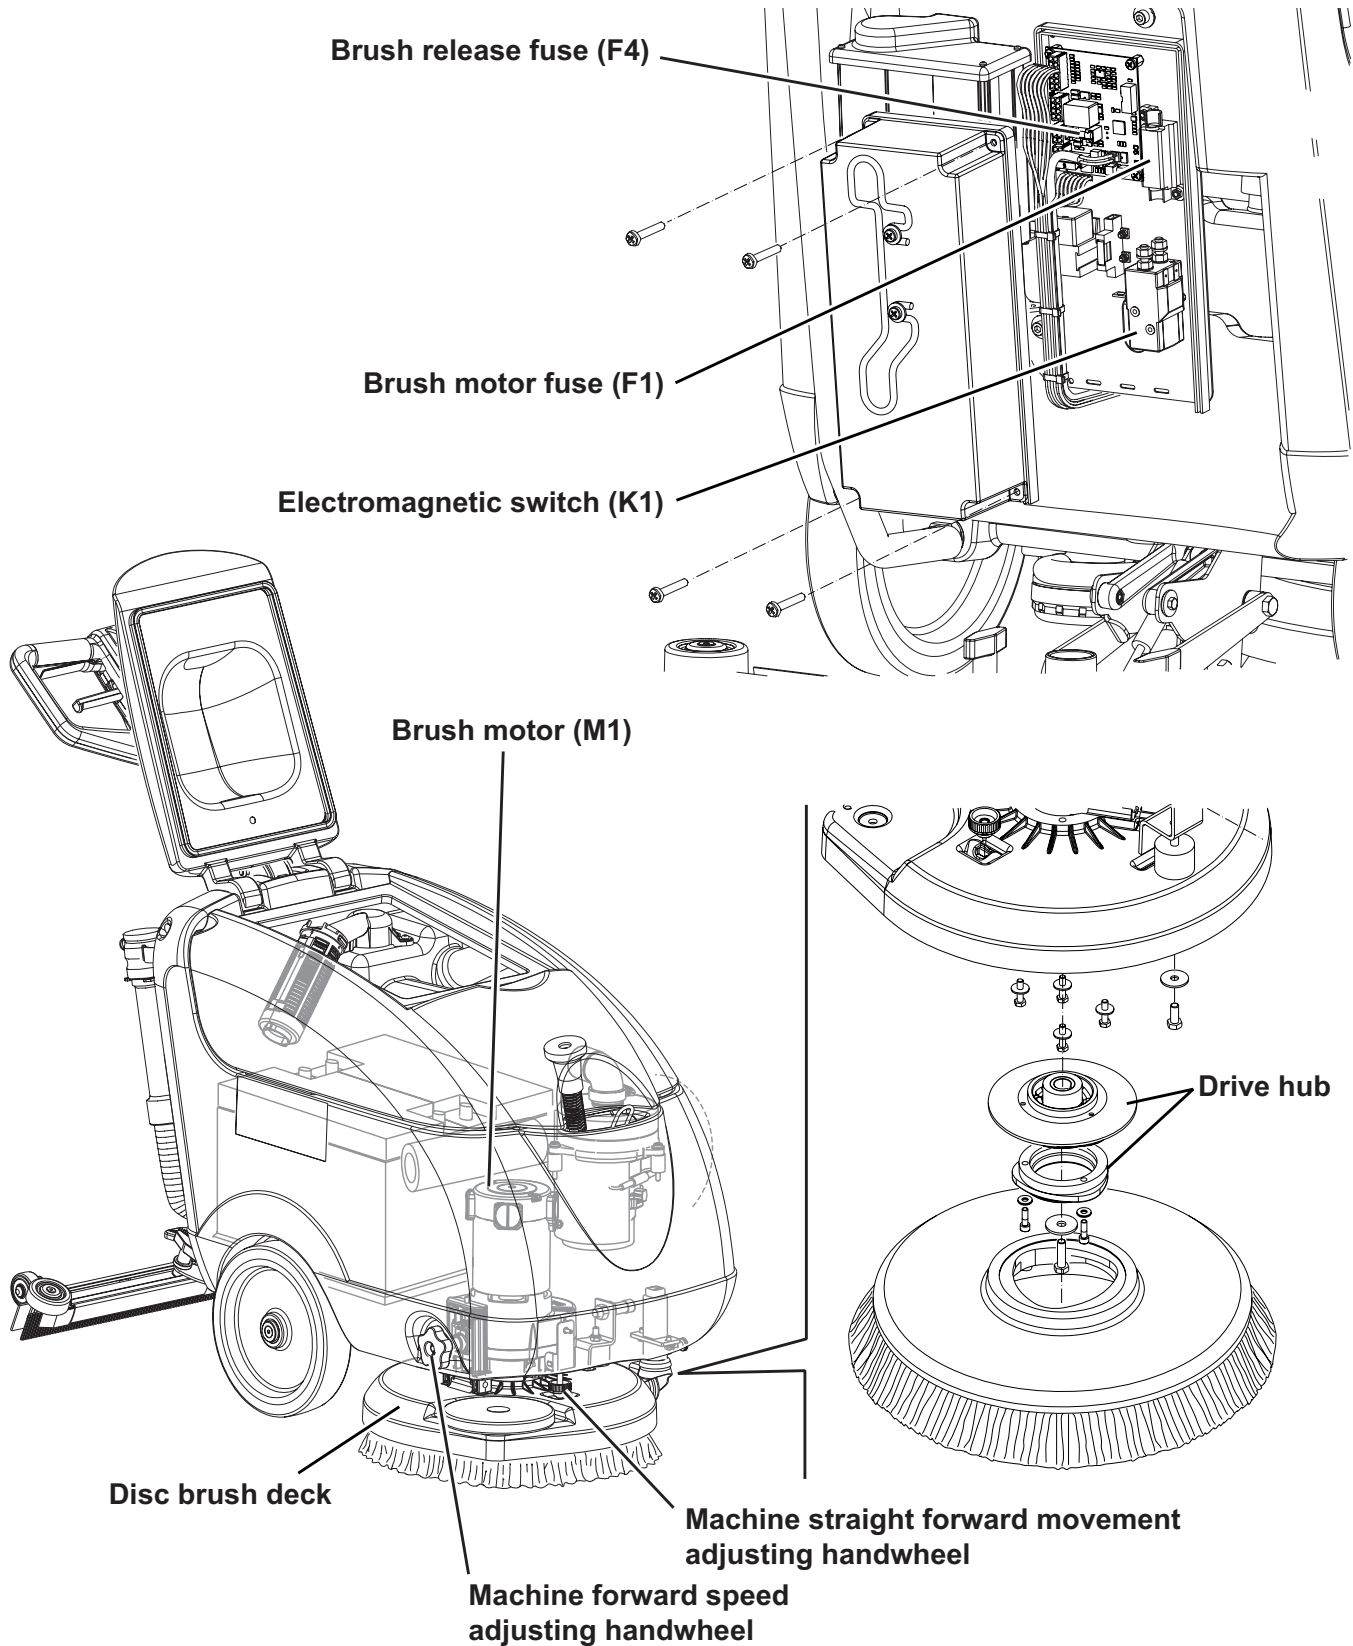


Maintenance and Adjustments

Brush Cleaning



Warning! *It is advisable to wear protective gloves when cleaning the brush because there may be sharp debris.*

1. Remove the brush (as shown in the User Manual).
2. Insert the positioning pin (A) and disengage the machine parking device (B).
3. Clean the brush with water and detergent.
4. Check the brush bristles for integrity and wear; if necessary, replace the brush.
5. Install the brush (as shown in the User Manual).

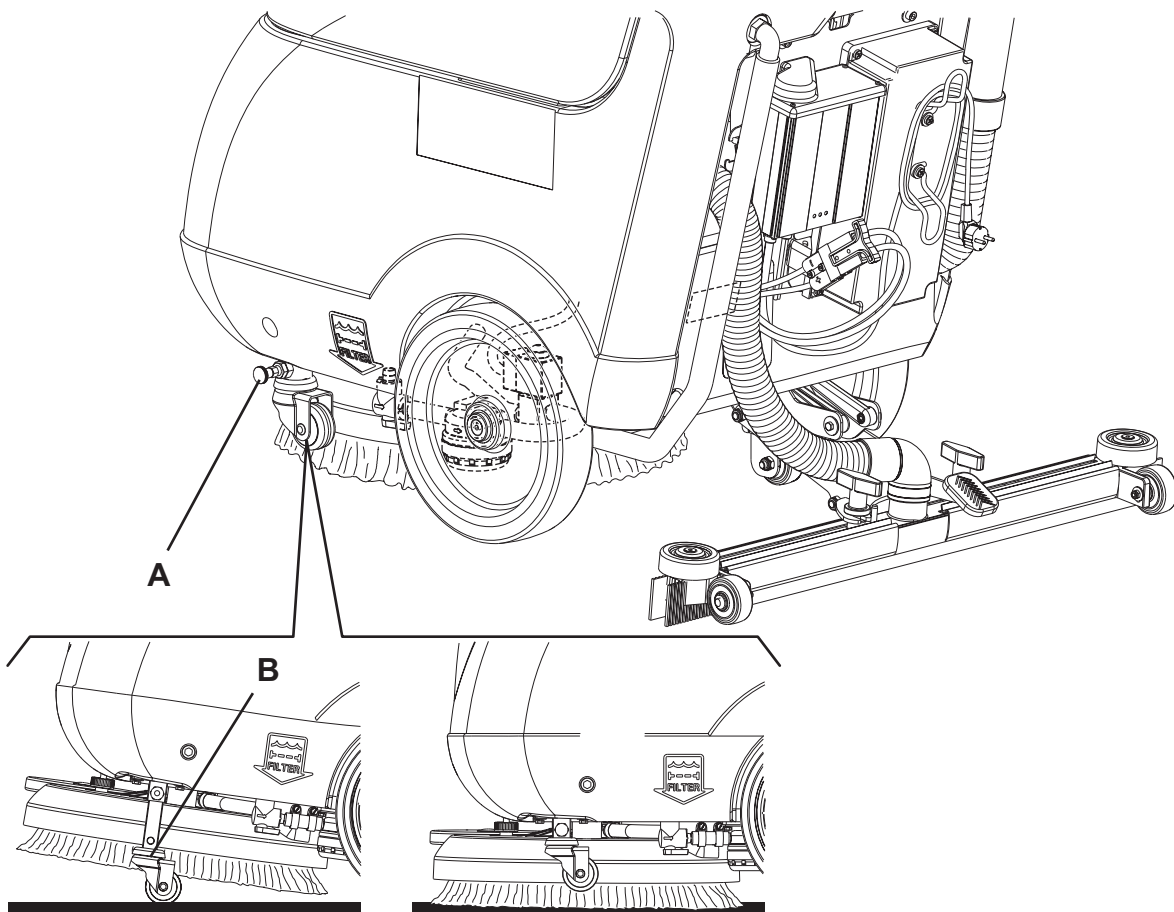


Machine Forward Movement Adjustment



Note:

*The machine speed and forward movement vary according to the type of floor to be cleaned and the choice of using the brush or the pad.
If necessary, perform the following procedure.*

1. Adjust the machine speed with the handwheel (A) according to the following procedure:
 - Turn it counter-clockwise to increase the machine speed.
 - Turn it clockwise to decrease the machine speed.
2. If it is difficult to keep the machine moving straight-forwardly because it deviates to the left or to the right, adjust the knob (B) by turning it clockwise or counter-clockwise.
3. With the machine ready to operate, perform hands-on tests of the machine speed; if necessary, perform step 2 again.

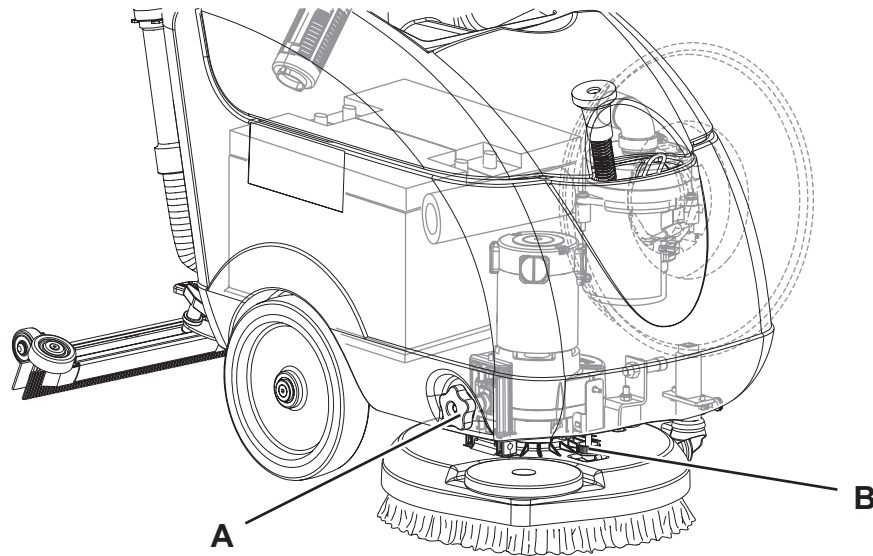

P200060

Troubleshooting

Open Circuit

- The fuse (F1) determines an open in the supply circuit of the brush deck motor. This system allows to prevent the circuits from being damaged under overload conditions.
- The open in the fuse can be caused by the following:
- Short circuit in the brush motor wiring harness; fault in the motor.

Trouble	Possible Causes	Remedy
The brush does not clean properly	The brush is excessively worn	Replace
The brush does not turn	Activation of motor overload	Restart the machine as shown in the User Manual
	The motor carbon brushes are worn	Replace
	The motor is faulty	Check the motor amperage/replace
	There are ropes or debris restraining the brush rotation	Remove and clean
	The fuse (F1) is open	Replace
	The motor electromagnetic switch (K1) is damaged	Replace
	The brush motor electromagnetic switch wiring harness is damaged	Repair
	The wiring harness between function electronic board (EB1) and brush motor electromagnetic switch (K1) is damaged	Repair
The brush release system does not work	The levers or the enabling push-button are broken	Replace
	The fuse (F4) is open	Replace.
	The electromagnetic switch (K1) is broken	Replace

Removal and Installation

Brush Motor Amperage Check



Warning! *This procedure must be performed by qualified personnel only.*

1. Remove the brush.
2. Remove the screws (A), then remove the electrical component box cover (B).



Warning! *Do not touch uncovered electrical components while performing the following steps.*

3. Apply the Amp clamp (C) on the electrical cable (D) of the brush motor on the electromagnetic switch output (E).
4. Turn on the brush (as shown in the User Manual) and check that the brush motor amperage is between 3 and 4 A at 24 V. Stop the brush rotation. Turn the machine program selection knob to “0”. Remove the Amp clamp (C). If the amperage is higher, perform the following procedures to detect and correct the abnormal




amperage:

- Check that the brush hub is free from foreign materials (ropes, dirt, ...) preventing it from turning.
- Check that the brush motor fuse (F1) is properly tightened.
- Check the condition of the brush motor carbon brushes
- Remove the brush motor (see the procedure in the Brush Motor Disassembly/Assembly paragraph), and check the condition of all its components.

If the above-mentioned procedures do not produce the correct readings for the brush motor amperage, the motor must be replaced (see the procedure in the Brush Motor Disassembly/Assembly paragraph).

Reassembly

5. Assemble the components in the reverse order of disassembly.

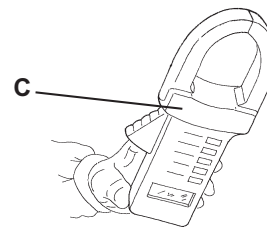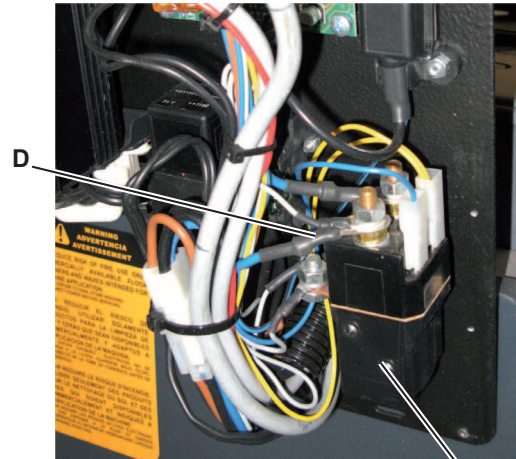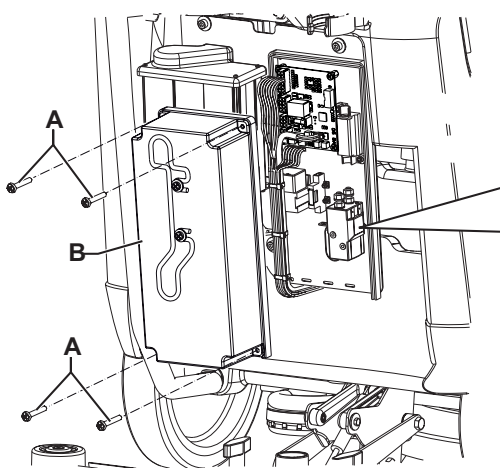

Brush Motor Carbon Brush Check/Replacement

Disassembly/Check





1. Remove the recovery tank (as shown in User Manual).
2. Loosen the band (A) and disconnect the hose (B) from the vacuum system motor below.
3. Remove the guard (C).
4. On the brush motor (D), if necessary, remove dirt from the area of the four carbon brush covers (E).
5. Turn and remove the four covers (E) (bayonet joint).
6. Remove the carbon brush nuts (F) with the lead-in wires.
7. Disengage the tabs (G) and remove the carbon brushes (H).

8. Check the carbon brushes (H) for wear. The carbon brushes are worn when:
 - The contact with the motor armature is insufficient
 - The contact surface is not integral
 - The stroke is less than 0.12 in (3 mm)
 - The spring is broken

In this cases, replace all motor carbon brushes.

Assembly

9. Assemble the components in the reverse order of disassembly.

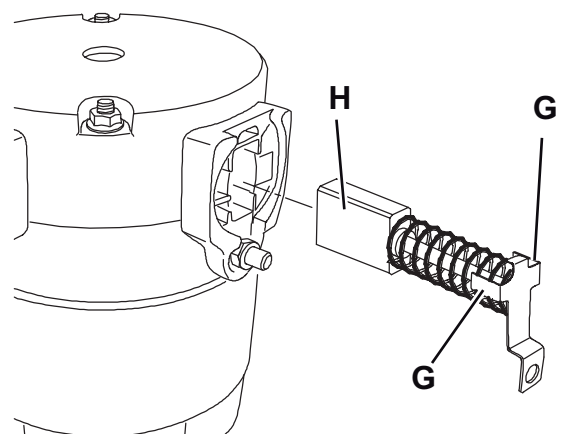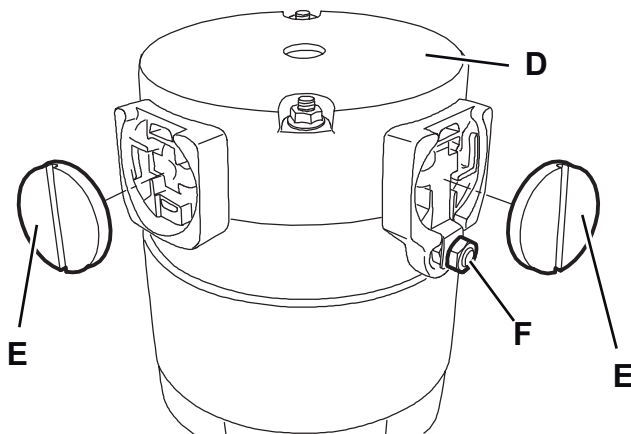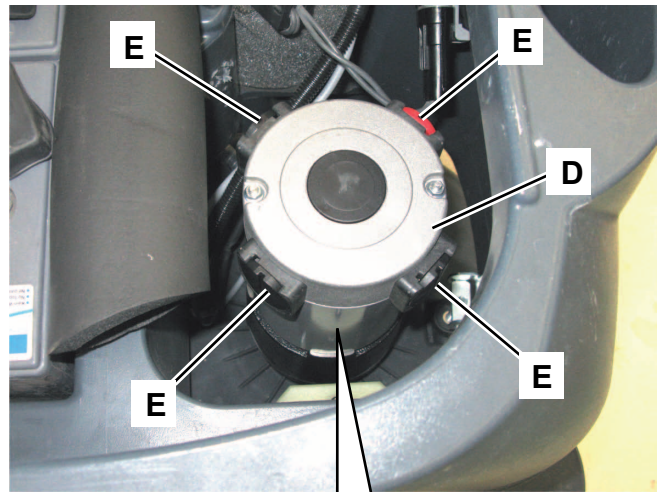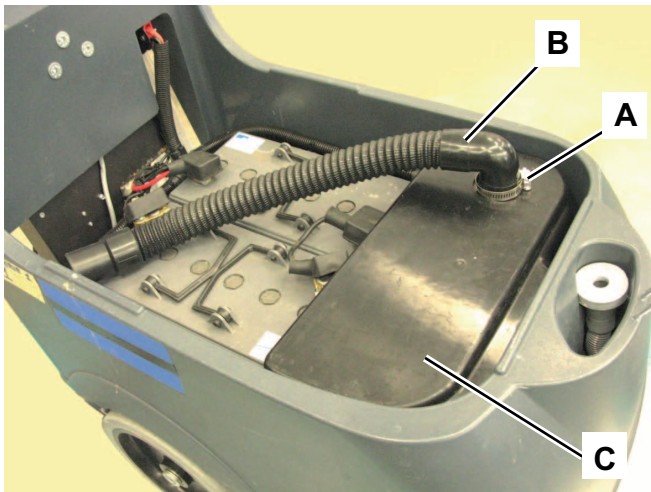





Brush Deck Disassembly/Assembly



Note: The figure shows the 520 Watt-motor; the 450 Watt-motor is similar.

Disassembly

1. Remove the recovery tank and the solution tank (as shown in User Manual).
2. Remove the brush (as shown in the User Manual).
3. If possible, place the machine on a hoisting system.
Make sure that the machine cannot move independently.
4. Turn the machine program selection knob to “0”.
5. Disconnect the battery connector (red).
6. On the machine front left side, remove the screw inside the hole (A).
7. With the wheel (B), fully unscrew the threaded pin (C) from the upper nut screw.
8. Turn the handwheel (D) clockwise until the end of the stroke (brush lowering).
9. Unscrew the nut (E) and remove the screw (F) thus letting the brush deck (G) lowering down.
10. Lift the machine front side (P) and keep it lifted.
11. Loosen the clamp (H) and disconnect the hose (I).

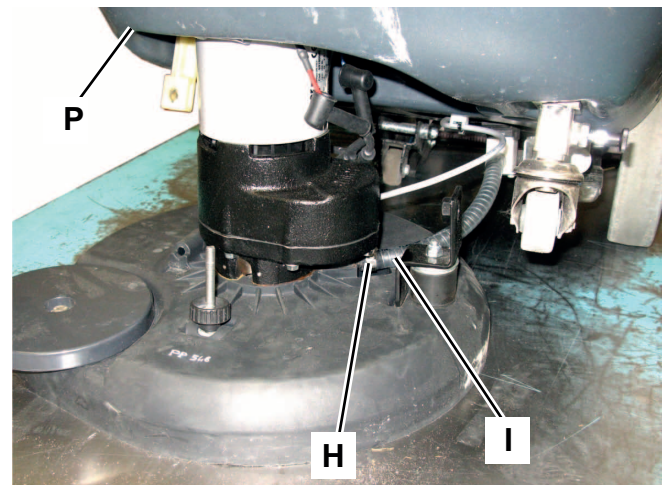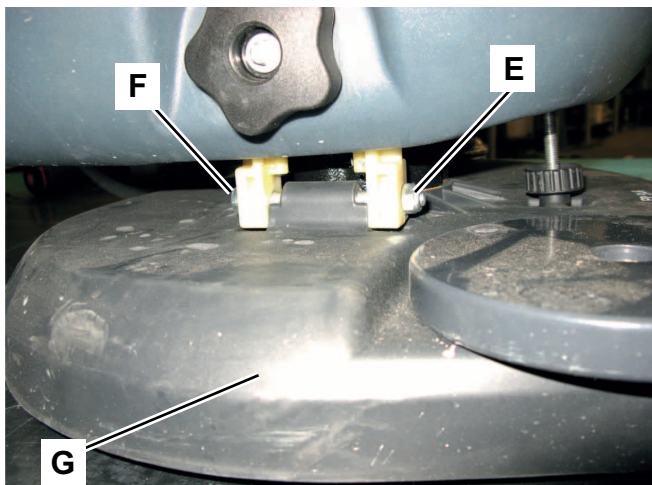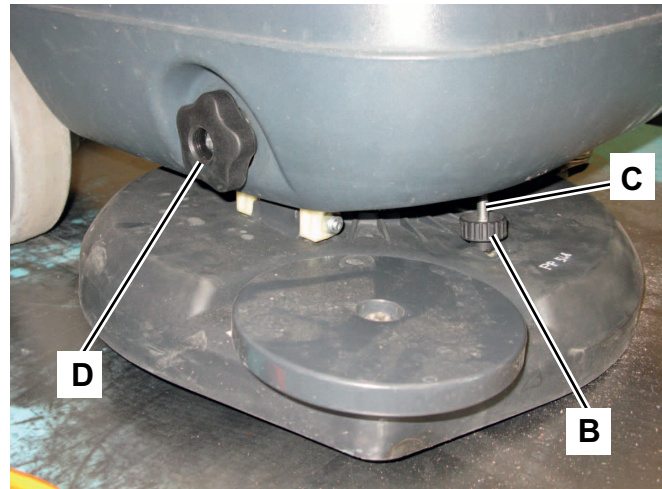
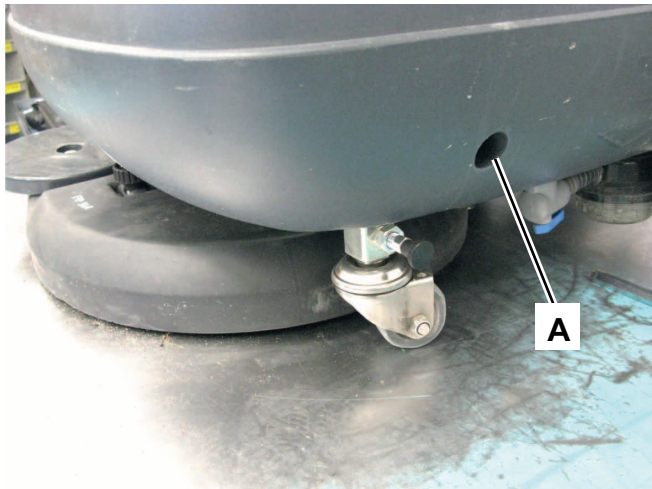


Brush Deck Disassembly/Assembly (Continues)

13. Remove the brush deck (J) by turning it as shown in the figure, then lay it on a flat surface.
14. Cut the clamp (K).
15. Remove the four protecting caps (L) of the four electrical connections (M) of the brush motor (N).
16. Mark the position of each of the four electrical connections (M) to make subsequent assembly easier.
Remove the nuts and disconnect the four electrical connections (M) from the motor.
17. Retrieve the brush deck (J).

Assembly

18. Assemble the components in the reverse order of disassembly.

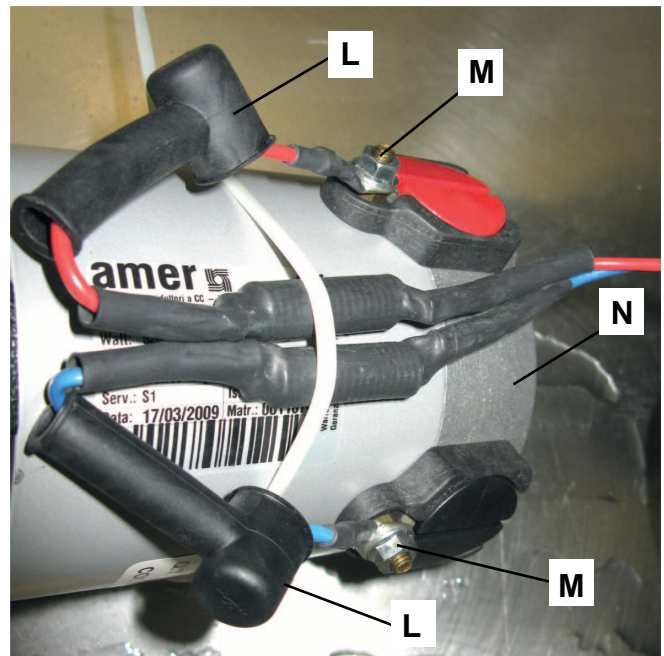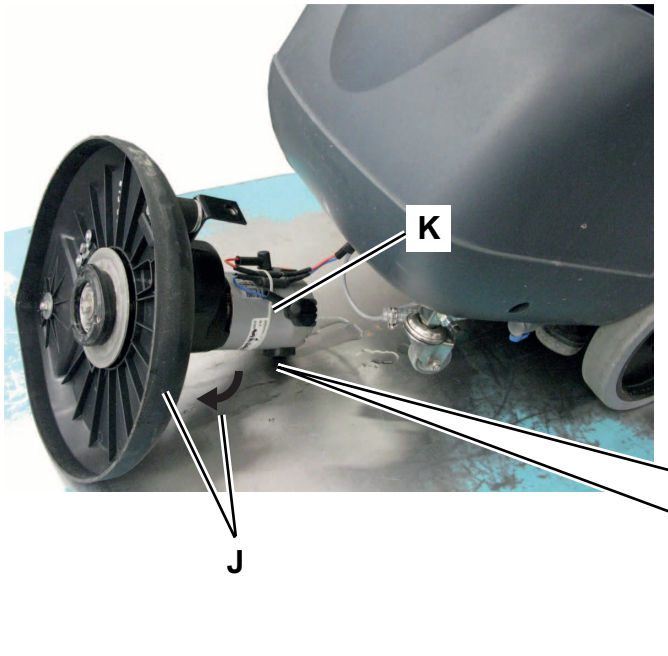

P200064




Brush Motor Disassembly/Assembly

Disassembly

1. Remove the brush deck (see the procedure in the Brush Deck Disassembly/Assembly paragraph).
2. On the lower side of the deck, remove the centre screw (A).
3. Remove the flange (B).
4. Remove the spacer (C) and the key (D) from the hub (E).
5. Remove the screws (F) and remove the brush case (G).
6. Retrieve the brush motor (H).

Assembly

7. Assemble the components in the reverse order of disassembly.

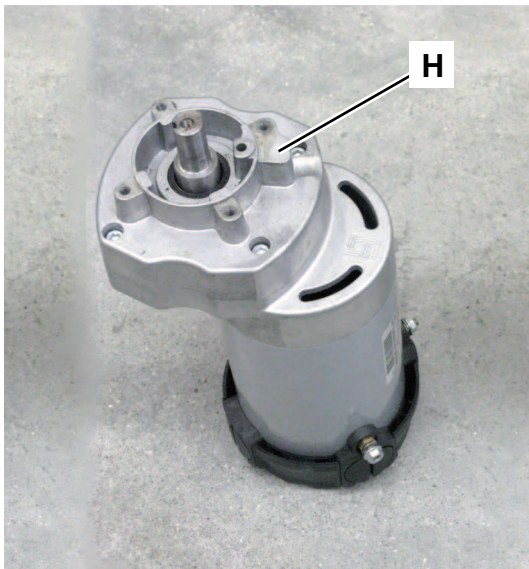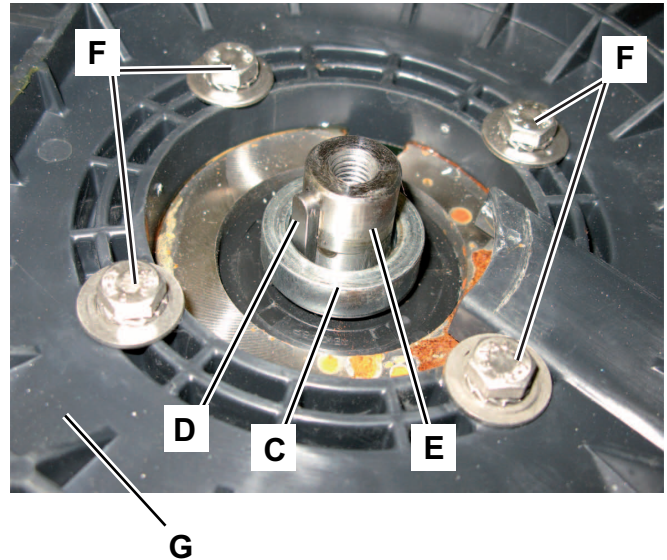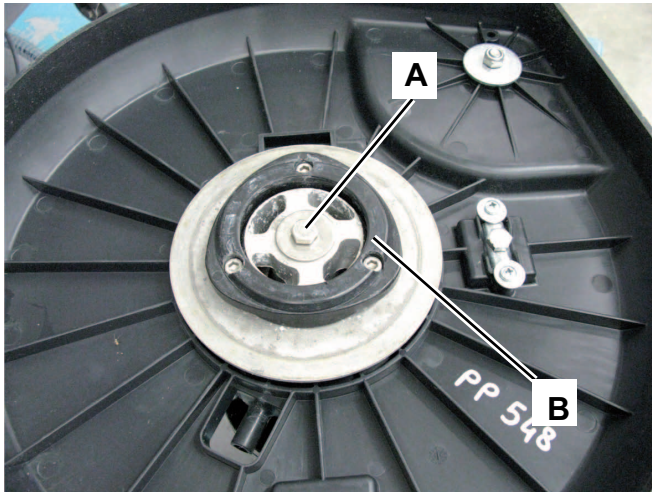




Brush Deck Adjuster Disassembly/Assembly

Disassembly

1. Remove the brush deck (see the procedure in the Brush Deck Disassembly/Assembly paragraph).
2. On the front right side of the machine, remove the screw (A) and the handwheel (B).
3. Remove the nut (C) and, from inside the wall, remove the deck adjuster (D).

Assembly

4. Assemble the components in the reverse order of disassembly.

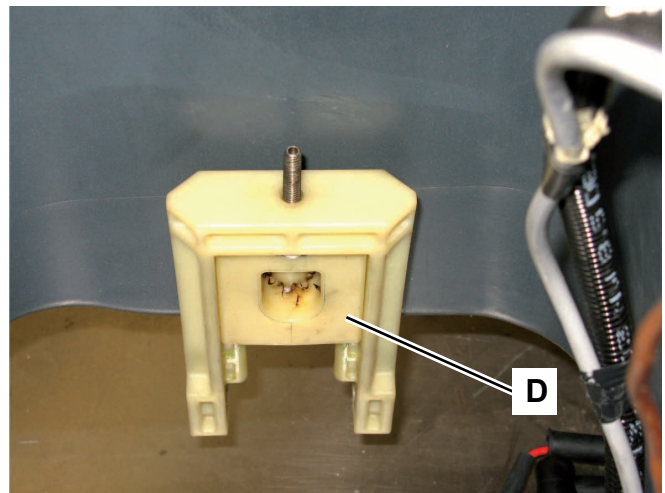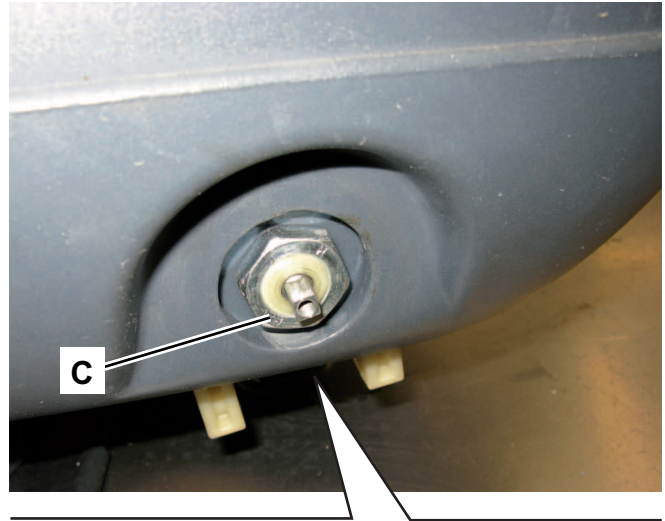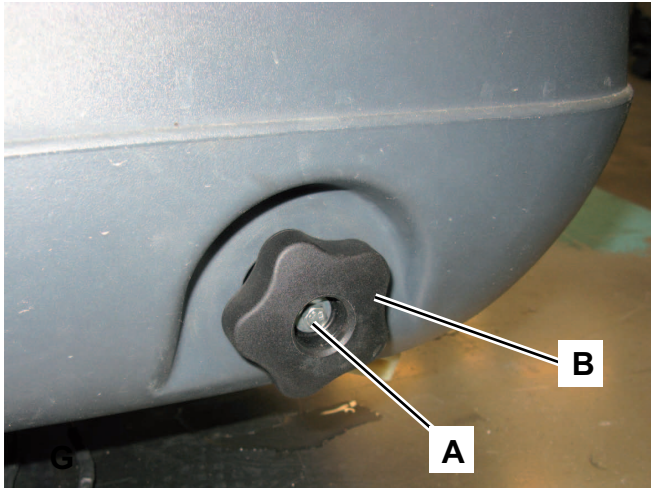

Specifications

Descriptions / Model	Advance SC400 17 B	Nilfisk SC400 43 B FULL PKG	Nilfisk SC400 43 B
Brush/pad diameter	17 in (430 - 432 mm)		
Brush pressure with full tank and lowered squeegee	77 lb (35 kg)		
Brush motor power	0.6 hp (450 W)		
Brush motor speed	155 rpm		
Brush motor amps	3 - 4 A, No load		

Scrub System, Disc - Cable Version

Functional Description

The disc brush system can be started by the operator. The disc brush rotates counter-clockwise.

The brush system, when turning, cleans/washes the floor surface and assists machine forward movement. The deck, where brushes suitable for cleaning the particular type of floor are installed, is the main part of the scrub system. The brush deck is fixed and integrated in the machine with a support bracket. The adjusting systems adjusts the forward speed, while the handwheel on the deck adjusts the machine straight-forward drive.

The brush working pressure is functional to the machine designed balance.


The brush motor (M1) is supplied by the relay on board to the functions electronic board (EB1) when the rotary switch (SW1) is turned to 1 or 2, and the brush enabling push-button (SW2) is pressed.

The system, once activated, uses the solution coming from the solution system, to wash the floor.

To work properly, the brush motor needs the following:


- Rotary switch (SW1) turned to 1 or 2
- Brush enabling push-button (SW2) pressed

Wiring Diagram

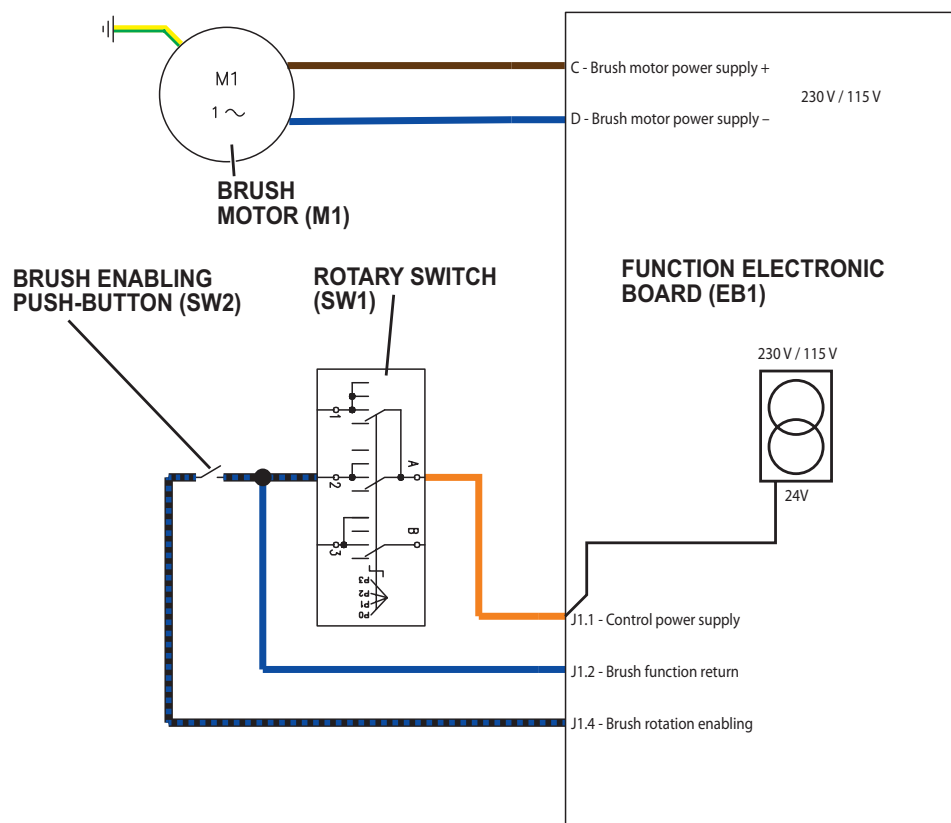

Component Locations

- Disc brush deck
- Brush motor (M1)
- Drive hub
- Machine forward speed adjusting handwheel
- Machine straight forward movement adjusting handwheel

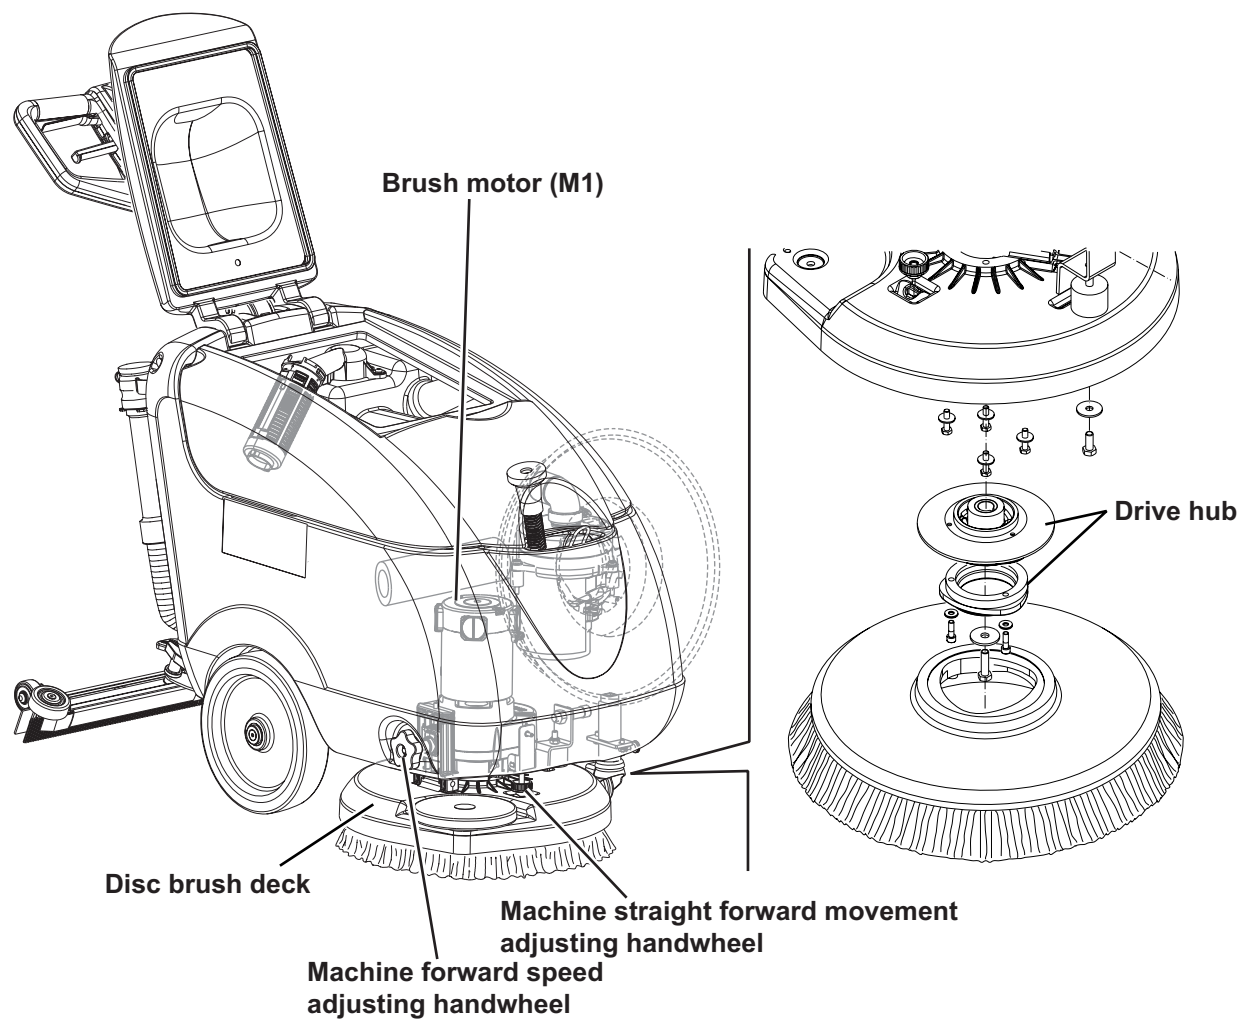


Maintenance and Adjustments

Brush Cleaning



Warning! *It is advisable to wear protective gloves when cleaning the brush because there may be sharp debris.*

1. Remove the brush.
2. Insert the positioning pin (A) and disengage the machine parking device (B).
3. Clean the brush with water and detergent.
4. Check the brush bristles for integrity and wear; if necessary, replace the brush.
5. Install the brush.

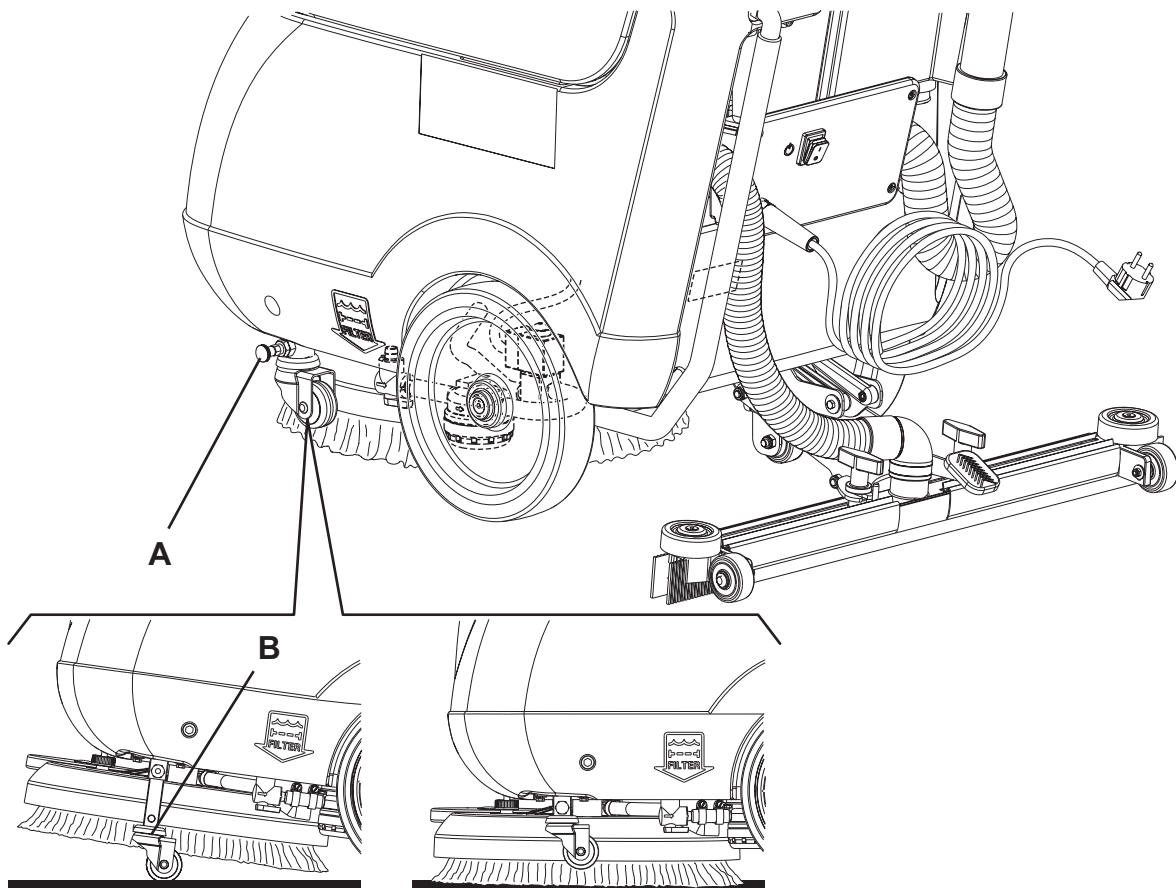


Machine Forward Movement Adjustment



Note:

*The machine speed and forward movement vary according to the type of floor to be cleaned and the choice of using the brush or the pad.
If necessary, perform the following procedure.*

1. Adjust the machine speed with the handwheel (A) according to the following procedure:
 - Turn it counter-clockwise to increase the machine speed.
 - Turn it clockwise to decrease the machine speed.
2. If it is difficult to keep the machine moving straight-forwardly because it deviates to the left or to the right, adjust the knob (B) by turning it clockwise or counter-clockwise.
3. With the machine ready to operate, perform hands-on tests of the machine speed; if necessary, perform step 2 again.

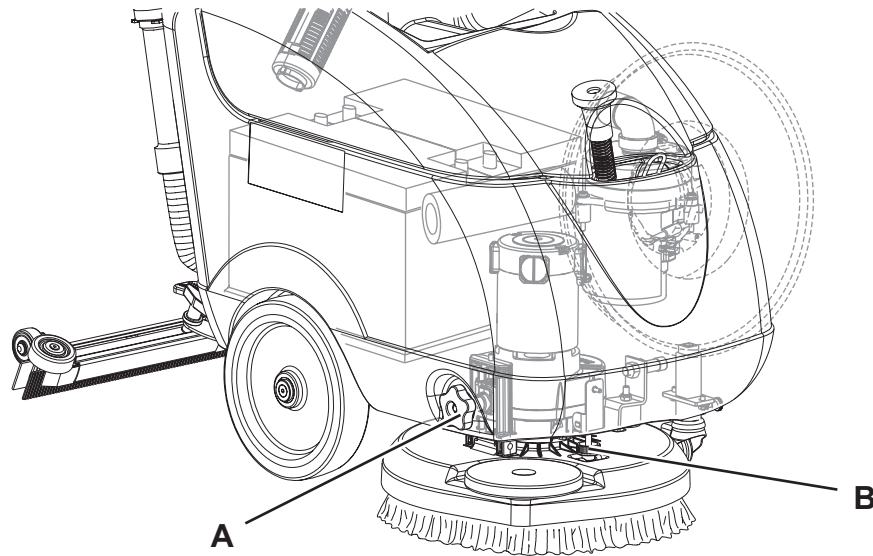

P200060

Troubleshooting

Trouble	Possible Causes	Remedy
The brush does not clean properly	The brush is excessively worn	Replace
The brush does not turn	The motor is faulty	Check the motor amperage/replace
	There are ropes or debris restraining the brush rotation	Remove and clean
	Brush motor electromagnetic switch is damaged	Replace the functions electronic board (EB1)
	The levers or the enabling push-button are broken	Replace

Removal and Installation

Brush Motor Amperage Check



Danger! *This procedure must be performed by qualified personnel only because the power plug must be connected to the power supply.*

1. Drive the machine on a level floor. Make sure that the machine cannot move independently.



Danger! *Do not touch uncovered electrical components while performing the following steps.*

2. Move the main switch to “T”.
3. Unscrew the screw and remove the slot board cover.
4. Apply the Amp clamp (A) on the electrical cable (B) of the brush system motor.
5. Turn the program selection knob on the brush motor then check that the brush motor electrical input is within the following limits:
 - For the 115 Volts, 60 Hz
 - with the brush on floor tiles: 6 to 8 A
 - with lifted brush: 5.5 to 6 A
 - For the 230 Volts, 50 - 60 Hz
 - with the brush on floor tiles: 4 to 5 A
 - with lifted brush: 4 to 4.5 A

6. Remove the Amp clamp (A).
7. Turn the machine program selection knob to “0”.
8. Turn the main switch to “0”.



If the electrical input is higher, perform the following procedures to detect and eliminate the cause of the abnormal input:

- Remove from the brush rotation shaft/flange all the possible amounts of dirt or wrapped-round materials (ropes, clothes, etc.), which prevent or slow down its rotation;
- If necessary, check the motor carbon brushes;
- If necessary, disassemble the motor, clean it and check its moving parts.

If the above-mentioned procedures do not lead to a correct electrical input, the motor must be replaced.



Reassembly

9. Assemble the components in the reverse order of disassembly.

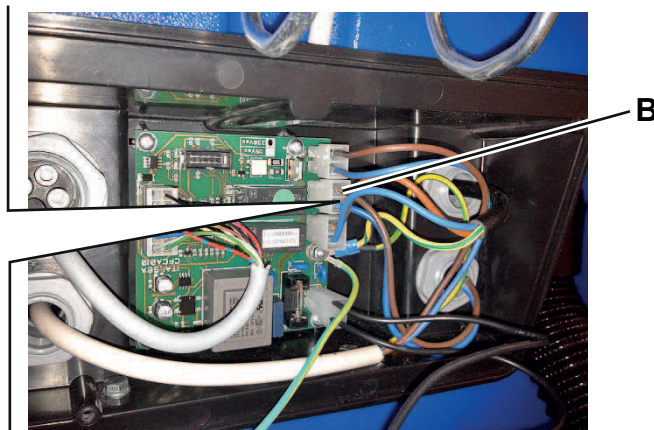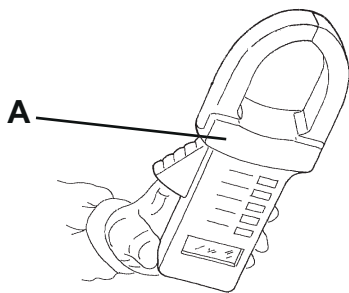


Brush Deck Motor - Capacitor Wiring Diagram (115V Cable version)

Internal wiring connections

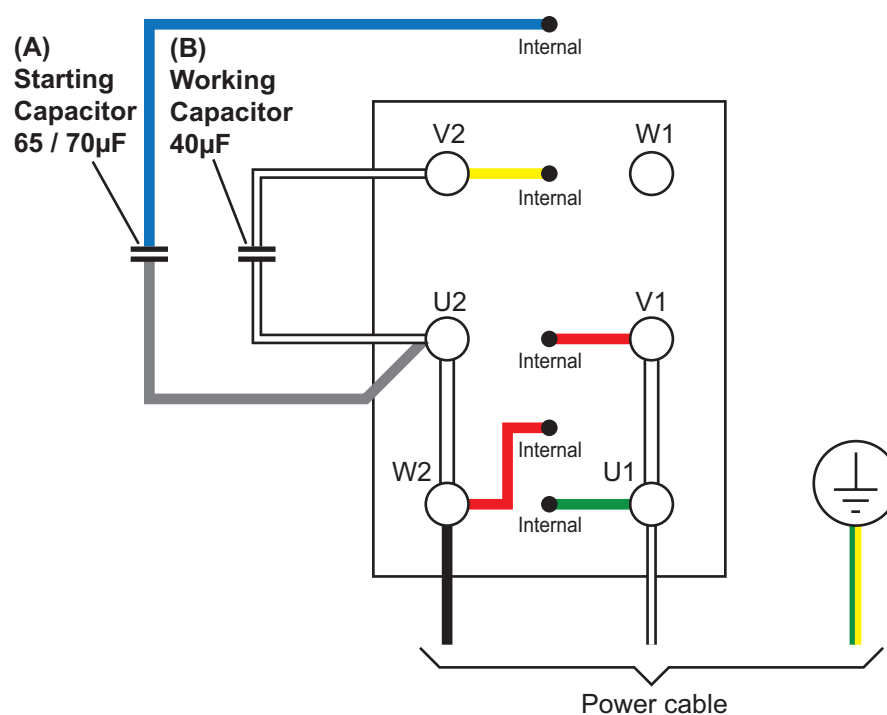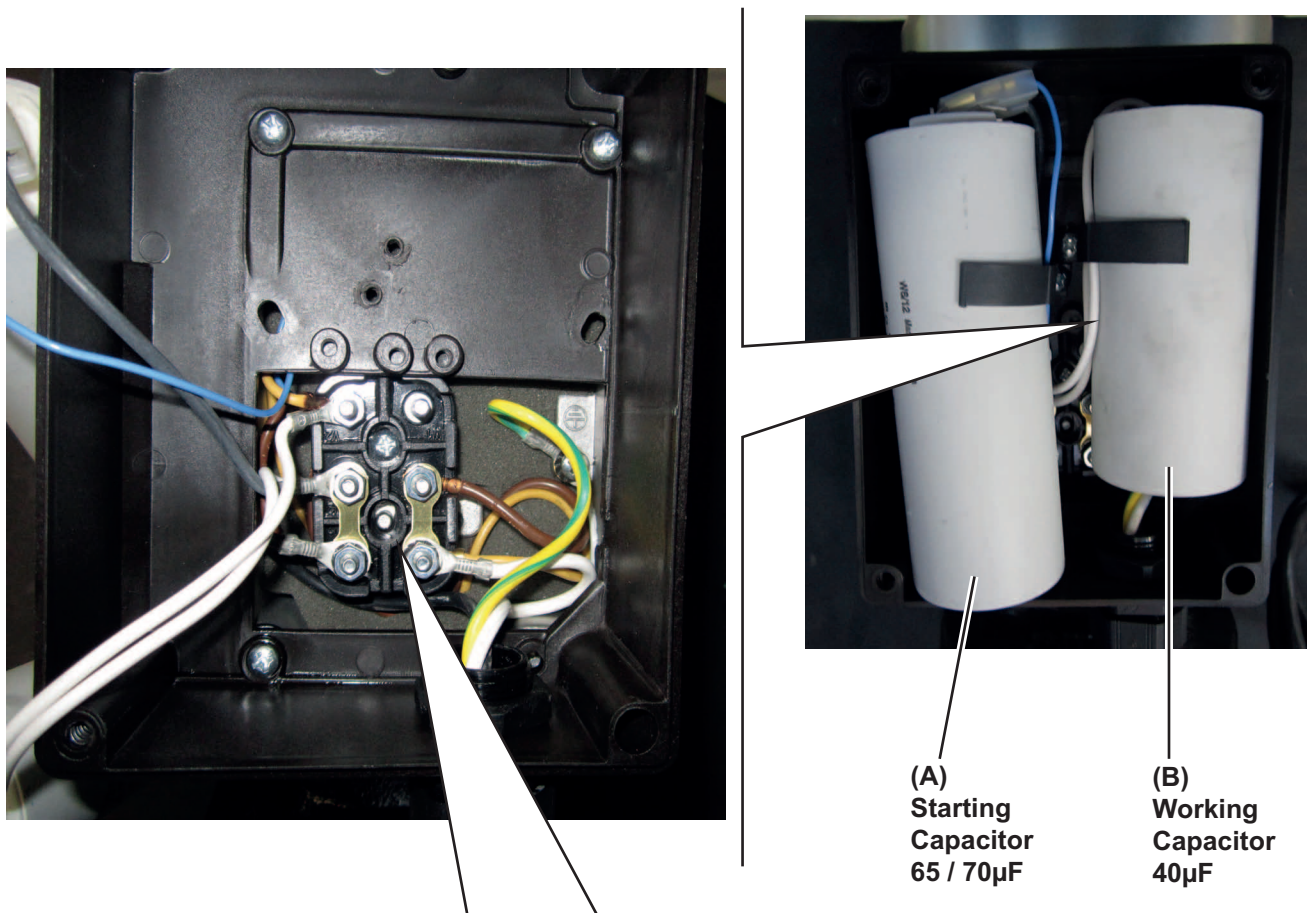


Brush Deck Motor - Capacitor Wiring Diagram (230V Cable version)

Internal wiring connections

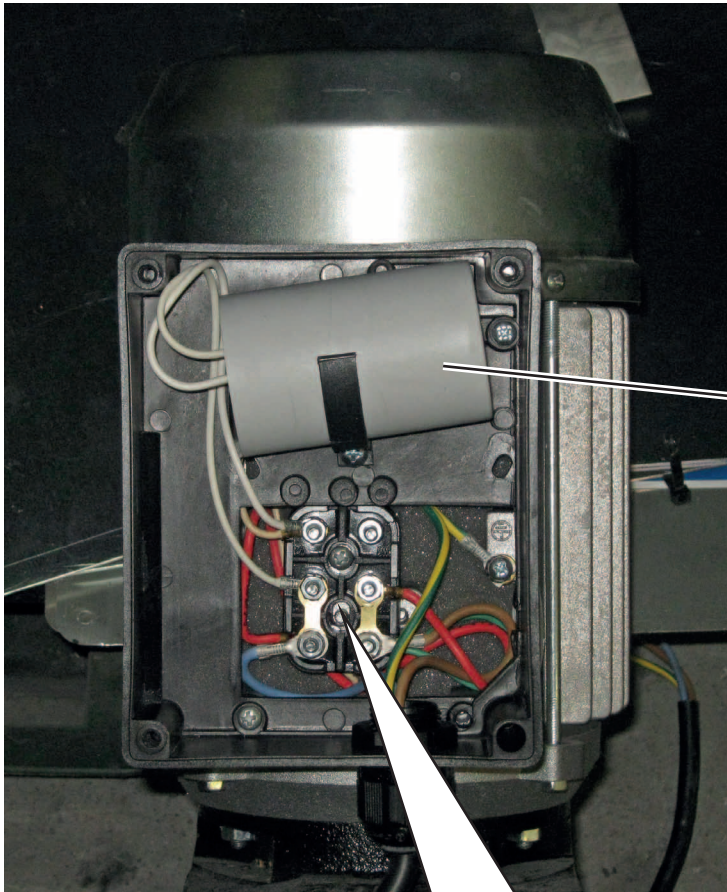

(A)
Working
Capacitor
30 μ F

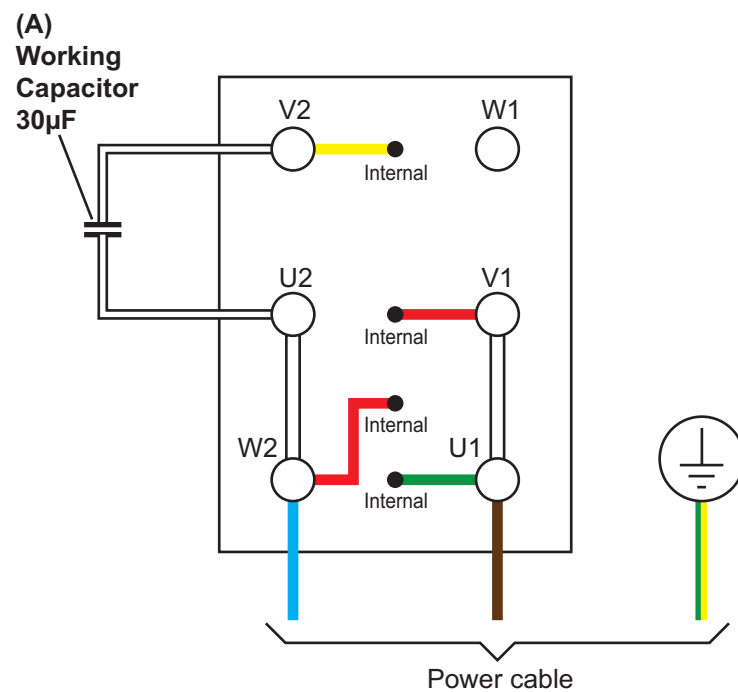





Brush Deck Disassembly/Assembly



Note: The figure shows the battery version motor; The cable version motor is similar.

Disassembly

1. Remove the recovery tank and the solution tank.
2. Remove the brush.
3. If possible, place the machine on a hoisting system.
Make sure that the machine cannot move independently.
4. Turn the machine program selection knob to “0”.
5. Make sure that the power supply cable plug is disconnected from the electrical mains and turn the machine program selection knob to “0”.
6. On the machine front left side, remove the screw inside the hole (A).
7. With the wheel (B), fully unscrew the threaded pin (C) from the upper nut screw.
8. Turn the handwheel (D) clockwise until the end of the stroke (brush lowering).
9. Unscrew the nut (E) and remove the screw (F) thus letting the brush deck (G) lowering down.
10. Lift the machine front side (P) and keep it lifted.
11. Loosen the clamp (H) and disconnect the hose (I).

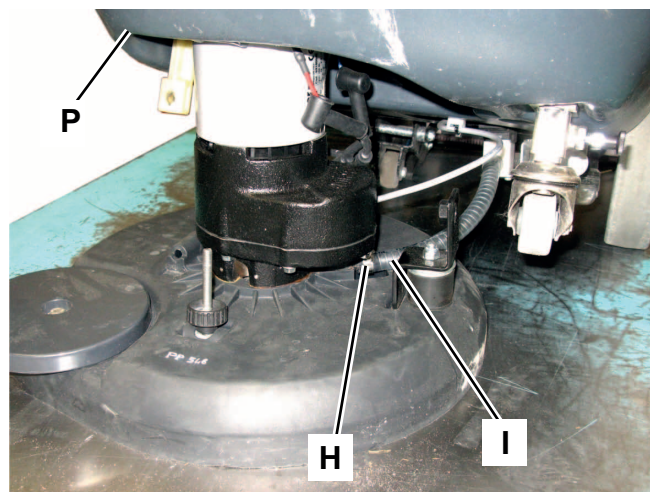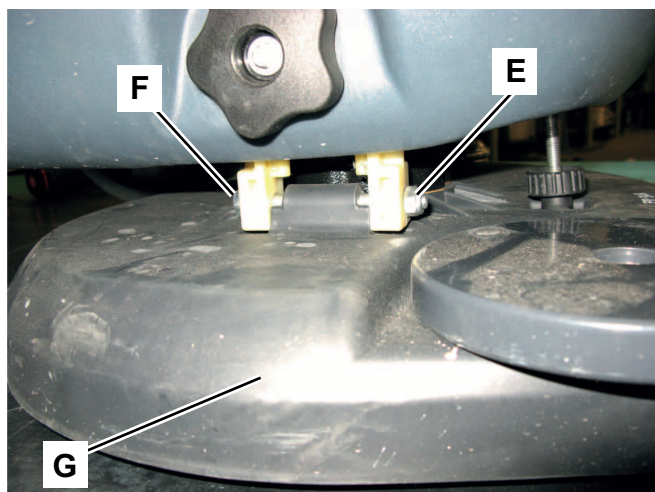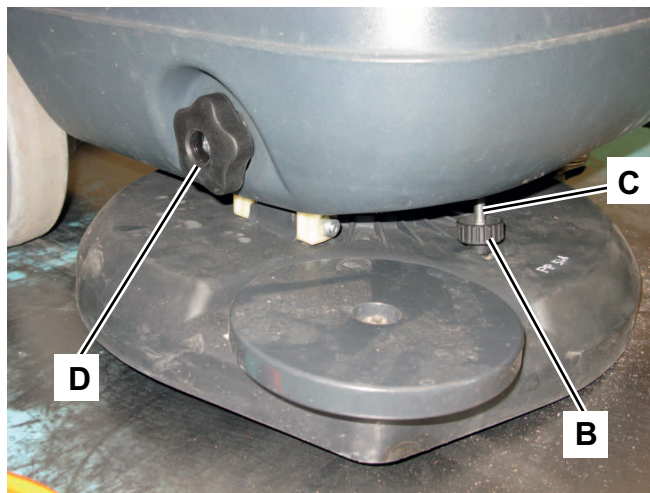
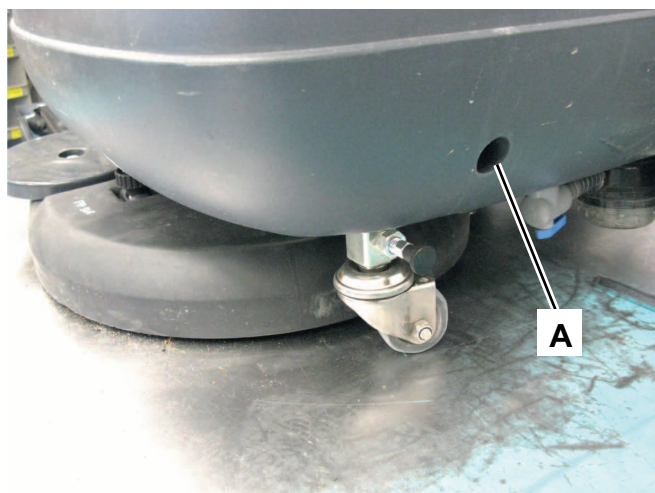


Brush Deck Disassembly/Assembly (Continues)

13. Remove the brush deck (J) by turning it as shown in the figure, then lay it on a flat surface.
14. Cut the clamp (K).
15. Remove the four protecting caps (L) of the four electrical connections (M) of the brush motor (N).
16. Mark the position of each of the four electrical connections (M) to make subsequent assembly easier.
Remove the nuts and disconnect the four electrical connections (M) from the motor.
17. Retrieve the brush deck (J).

Assembly

18. Assemble the components in the reverse order of disassembly.

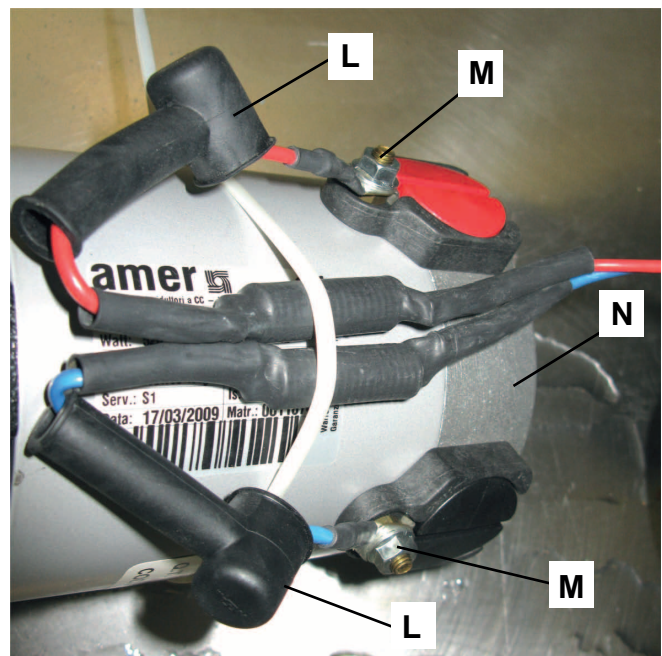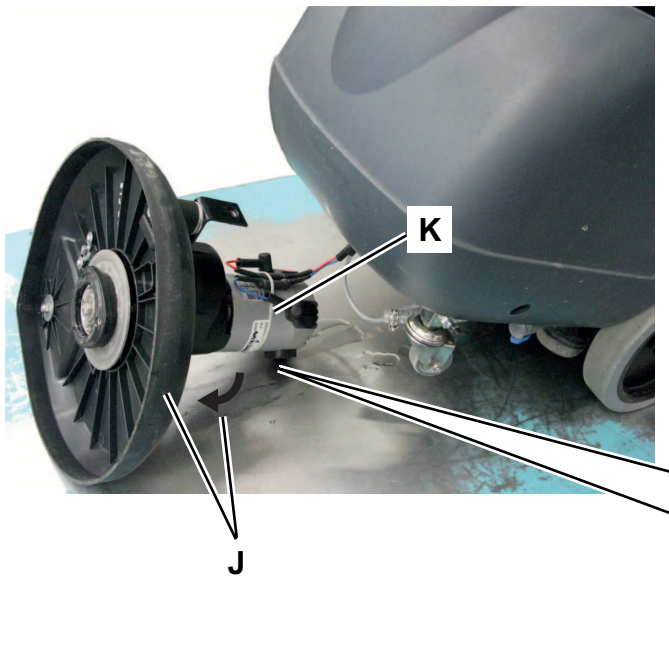

P200064




Brush Motor Disassembly/Assembly

Disassembly

1. Remove the brush deck (see the procedure in the Brush Deck Disassembly/Assembly paragraph).
2. On the lower side of the deck, remove the centre screw (A).
3. Remove the flange (B).
4. Remove the spacer (C) and the key (D) from the hub (E).
5. Remove the screws (F) and remove the brush case (G).
6. Retrieve the brush motor (H).

Assembly

7. Assemble the components in the reverse order of disassembly.

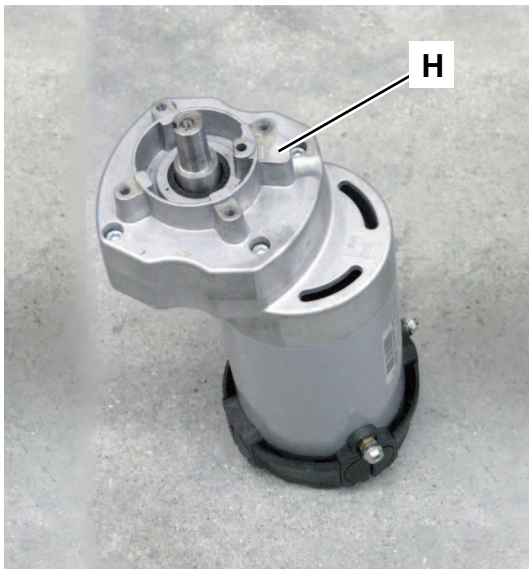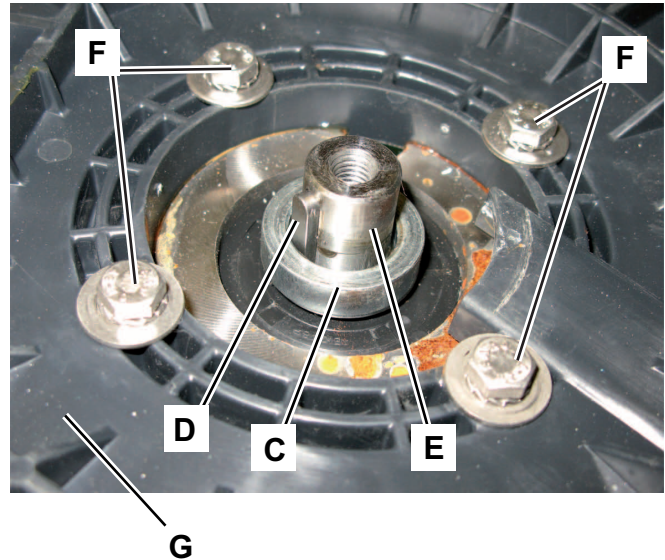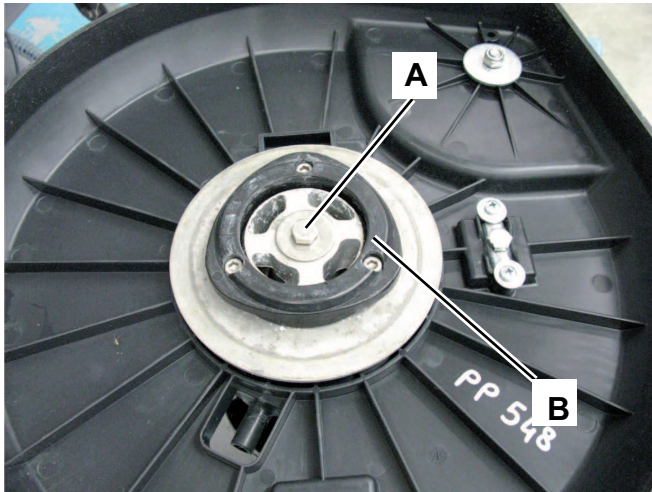




Brush Deck Adjuster Disassembly/Assembly

Disassembly

1. Remove the brush deck (see the procedure in the Brush Deck Disassembly/Assembly paragraph).
2. On the front right side of the machine, remove the screw (A) and the handwheel (B).
3. Remove the nut (C) and, from inside the wall, remove the deck adjuster (D).

Assembly

4. Assemble the components in the reverse order of disassembly.

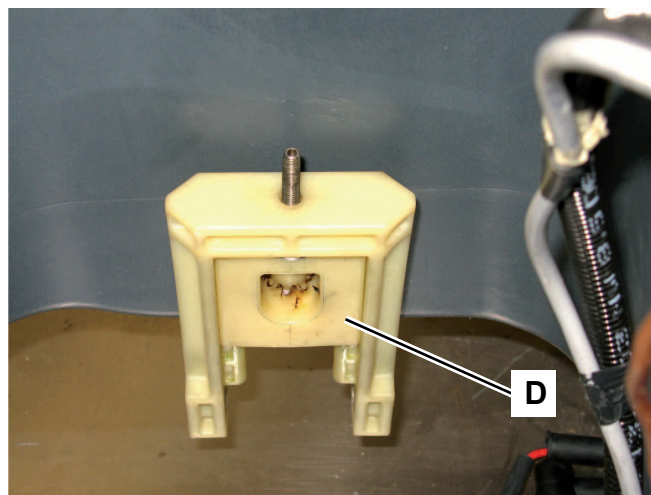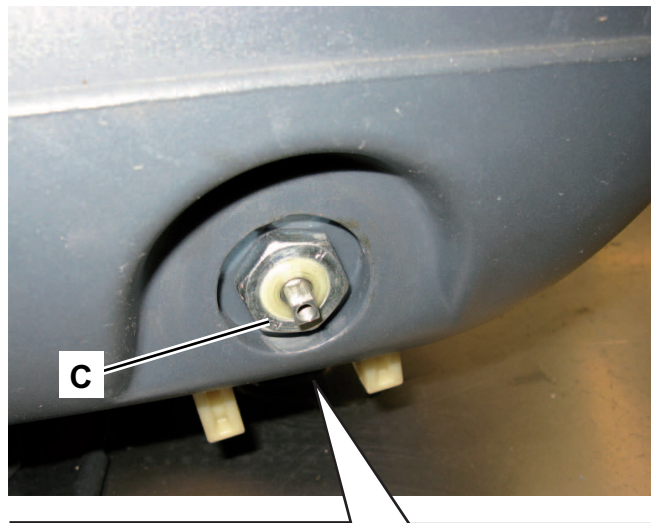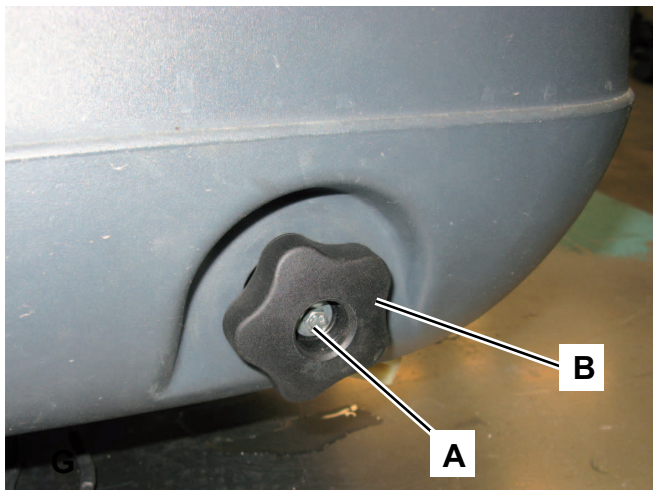

Specifications

Descriptions / Model	Advance SC400 17 E	Nilfisk SC400 43 E
Brush/pad diameter	17 in (430 - 432 mm)	
Brush pressure with full tank and lowered squeegee	83.7 lb (38 kg)	
Brush motor power	0.73 hp (550 W)	1.47 hp (1.100 W)
Brush motor speed	180 rpm	150 rpm
Brush motor amps	5,5 - 6 A, No load	4 - 4,5 A No load

Solution System - Battery Version

Functional Description

The solution system supplies the detergent to the brush when cleaning the floor. The solution tank is also the main machine body. There is a manual valve on the left side of the tank to close the water supply whenever maintenance must be performed on the machine.

The detergent quantity is adjusted by the operator with the push-button (SW3). The solution flows from the tank to the tap, through the filter and solenoid valve (EV1) and then to the brush deck.


The solenoid valve (EV1) is supplied by the function electronic board (EB1) when the rotary switch (SW1) is turned to 1 or 2, the brush activation push-button (SW2) is pressed and the push-button (SW3) setting is different from 0 (3 LEDs off).

The circuit is protected by the fuse (F3) on the function electronic board (EB1).

The solution valve is pulse width modulated to meter the flow rate:


Solution flow push-button setting (SW3)	LED display	Solenoid valve ON time (EV1)	Solenoid valve OFF time (EV1)
0	○ ○ ○	-	Always OFF
1	● ○ ○	1 sec	5 sec
2	● ● ○	3 sec	3 sec
3	● ● ●	Always ON	-

Wiring Diagram

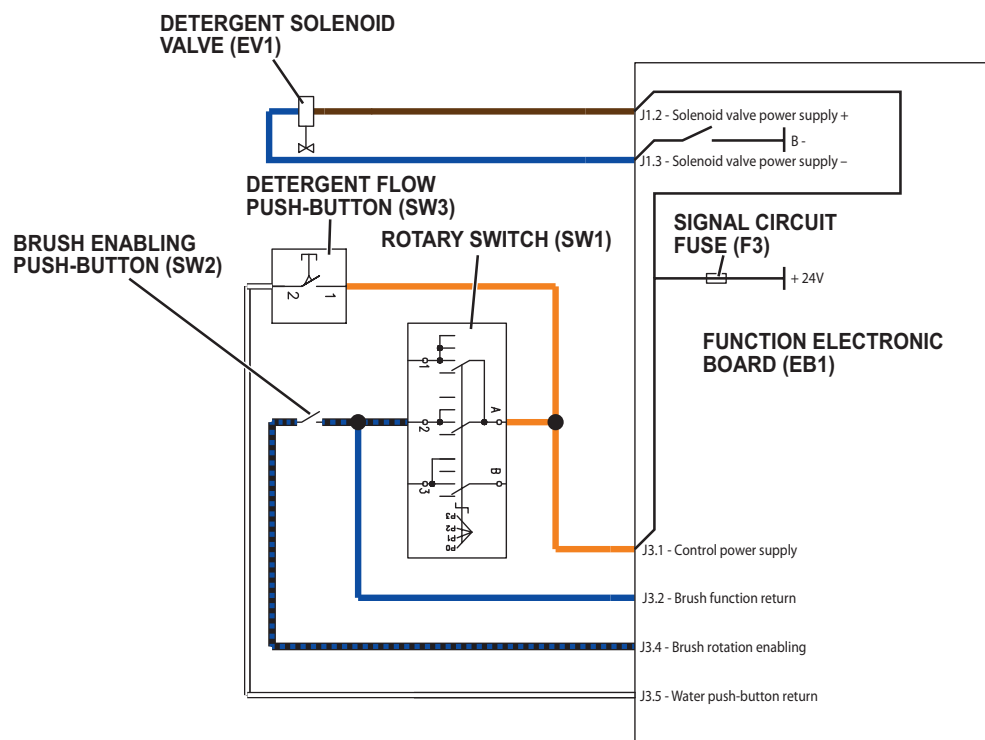

Component Locations

- Solution tank
- Solution opening/closing valve
- Solution filter
- Solenoid valve (EV1)
- Solution drain and level check hose

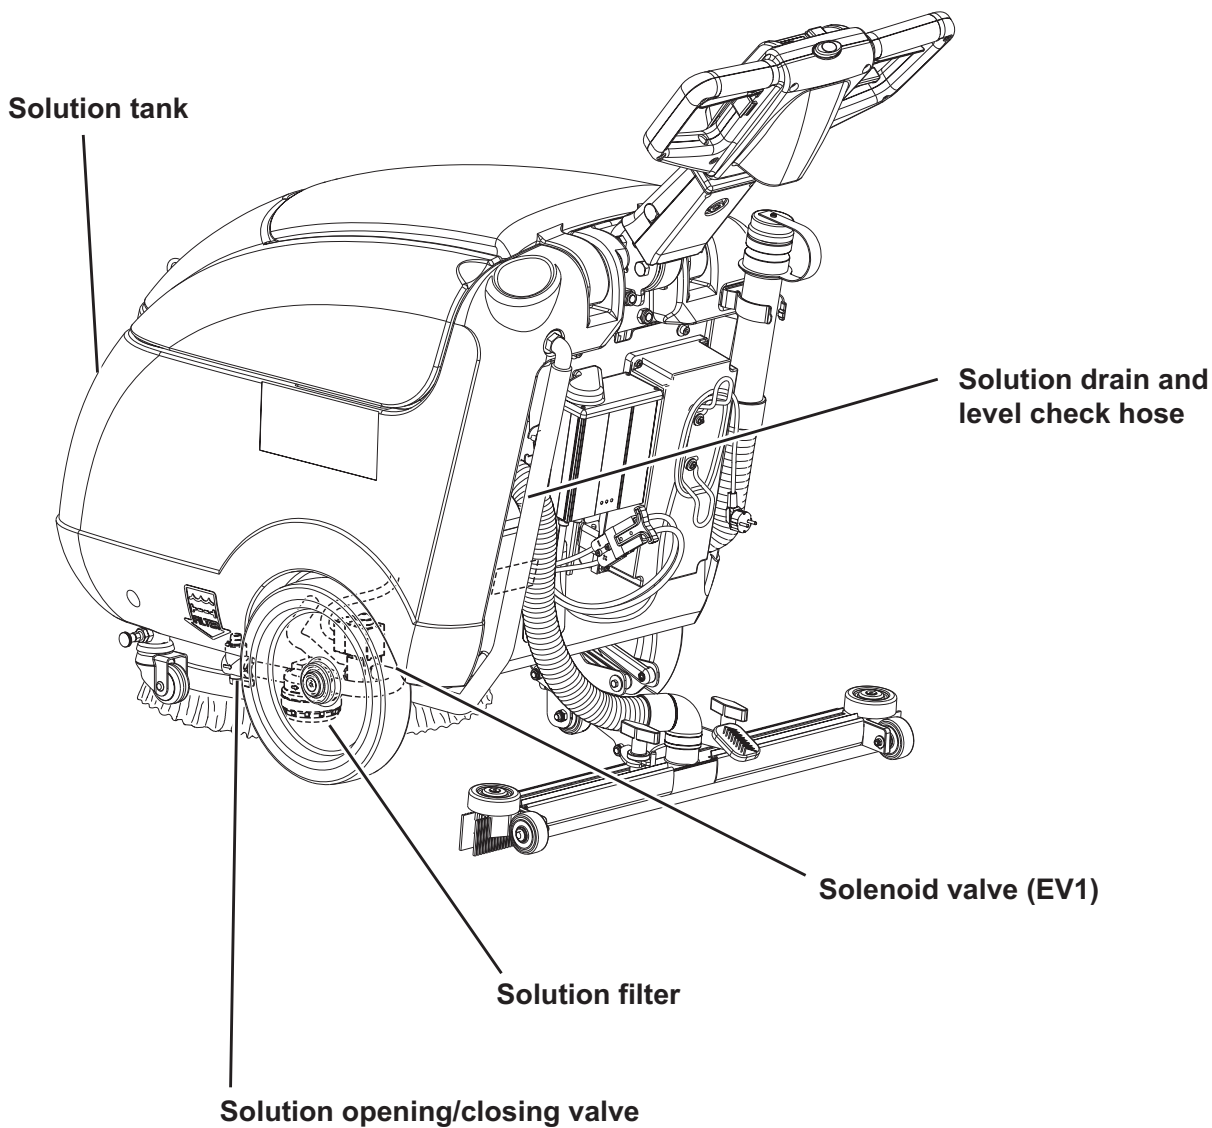


Maintenance and Adjustments

Solution Filter Cleaning

1. Drive the machine on a level floor.
2. Turn the machine program selection knob to “0”.
3. Operating under the machine, in front of the left rear wheel, close the solution valve (A).

The valve (A) is closed when it is in the position (B) and it is open when it is in the position (C).

4. Remove the transparent cover (D) and the gasket (E), then remove the filter strainer (F). Clean and install them on the support (G); install the gasket (E) and the filter strainer (F) properly on the cover (D) and on the support (G).
5. Open the valve (A) by turning it to position (C).

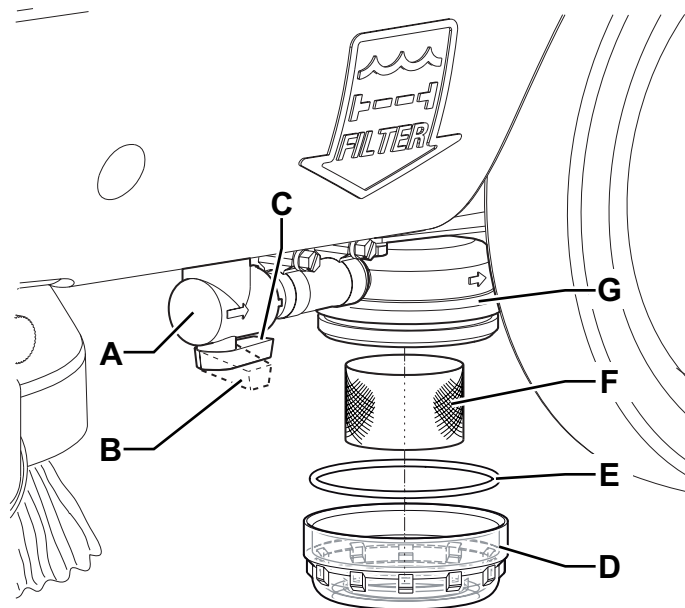

P200068

Troubleshooting

Trouble	Possible Causes	Remedy
Small amount of solution or no solution reaches the brush	The tank filter (optional) is clogged/dirty	Clean
	The solution filter is clogged/dirty	Clean
	The solenoid valve (EV1) is faulty or the electrical connection is open	Replace the solenoid valve or repair the electrical connection
	There is dust/debris in the tank or in the detergent hoses, obstructing the solution flow	Clean the tank/hoses
	There is an open in the solenoid valve fuse/electronic board (F3)	Replace
The solution reaches the brush also when the machine is off	The solenoid valve (EV1) is dirty/broken	Clean/replace

Specifications

Descriptions / Model		Advance SC400 17 B	Nilfisk SC400 43 B FULL PKG	Nilfisk SC400 43 B	
Solution tank capacity		6.0 US gal (23 liters)			
Solution flow	LEDs on	0	1	2	3
	Value	0	0.1 gpm (0.4 lit/min)	0.26 gpm (1.0 lit/min)	0.42 gpm (1.6 lit/min)
Solution valve winding resistance		50 Ω - 24V			

Solution System - Cable Version

Functional Description

The solution system supplies the detergent to the brush when cleaning the floor. The solution tank is also the main machine body. There is a manual valve on the left side of the tank to close the water supply whenever maintenance must be performed on the machine.

The detergent quantity is adjusted by the operator with the push-button (SW3). The solution flows from the tank to the tap, through the filter and solenoid valve (EV1) and then to the brush deck.

The solenoid valve (EV1) is supplied by the function electronic board (EB1) when the rotary switch (SW1)


is turned to 1 or 2, the brush activation push-button (SW2) is pressed and the push-button (SW3) setting is different from 0 (3 LEDs off).

The circuit is protected by the fuse (F1) on the function electronic board (EB1).

The solution valve is pulse width modulated to meter the flow rate:


Solution flow push-button setting (SW3)	LED display	Solenoid valve ON time (EV1)	Solenoid valve OFF time (EV1)	Solution flow
0	○ ○ ○	-	Always OFF	0
1	● ○ ○	1 sec	5 sec	0.1 gpm (0.4 liters/min)
2	● ● ○	3 sec	3 sec	0.26 gpm (1.0 liters/min)
3	● ● ●	Always ON	-	0.42 gpm (1.6 liters/min)

Wiring Diagram

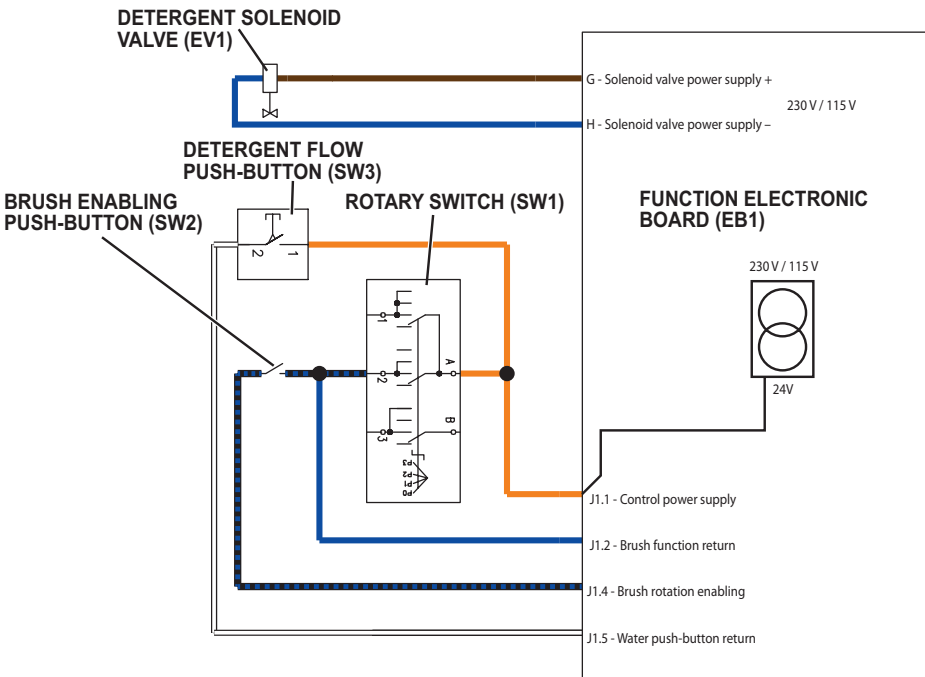

Component Locations

- Solution tank
- Solution opening/closing valve
- Solution filter
- Solenoid valve (EV1)
- Solution drain and level check hose

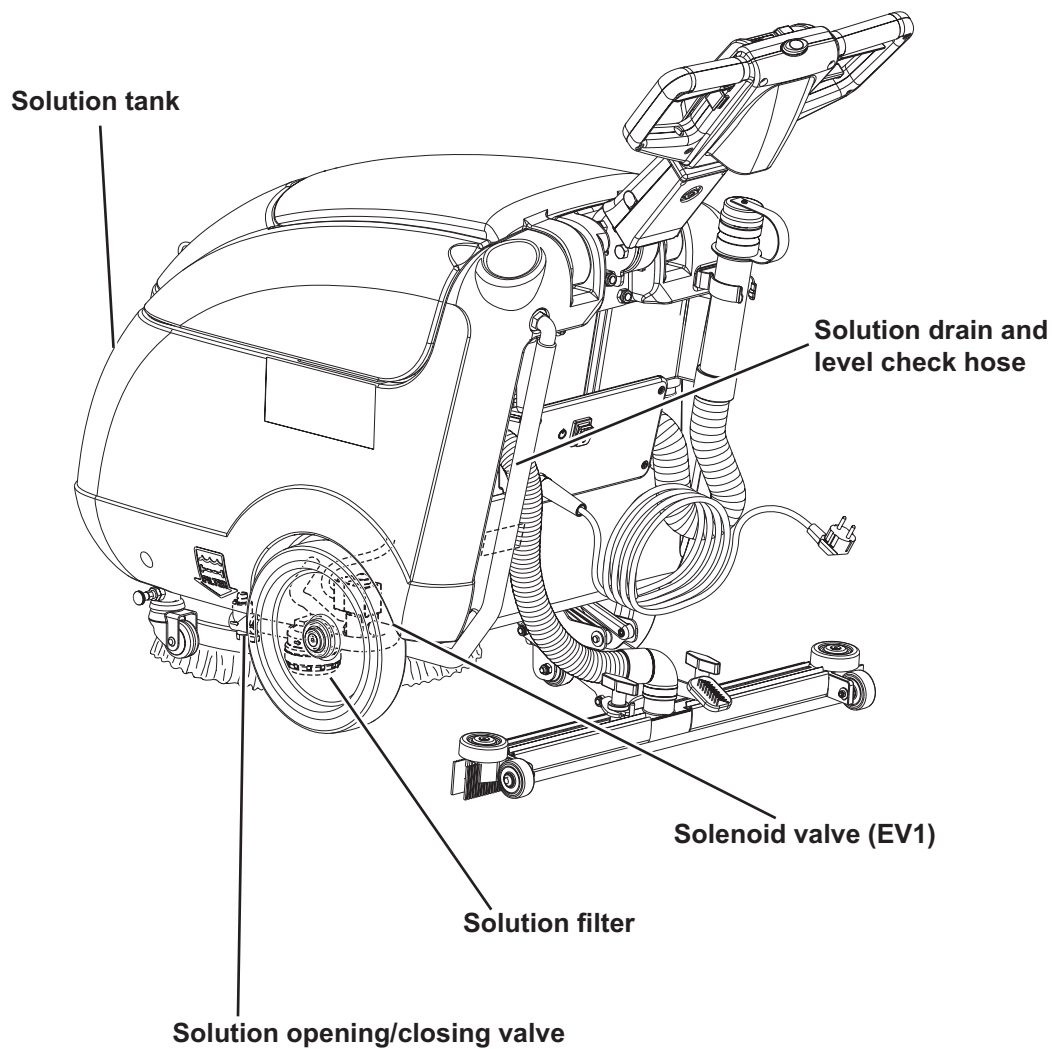


Maintenance and Adjustments

Solution Filter Cleaning

1. Drive the machine on a level floor.
2. Make sure that the power supply cable plug is disconnected from the electrical mains and turn the machine program selection knob to "0".
3. Operating under the machine, in front of the left rear wheel, close the solution valve (A).

The valve (A) is closed when it is in the position (B) and it is open when it is in the position (C).

4. Remove the transparent cover (D) and the gasket (E), then remove the filter strainer (F). Clean and install them on the support (G); install the gasket (E) and the filter strainer (F) properly on the cover (D) and on the support (G).
5. Open the valve (A) by turning it to position (C).

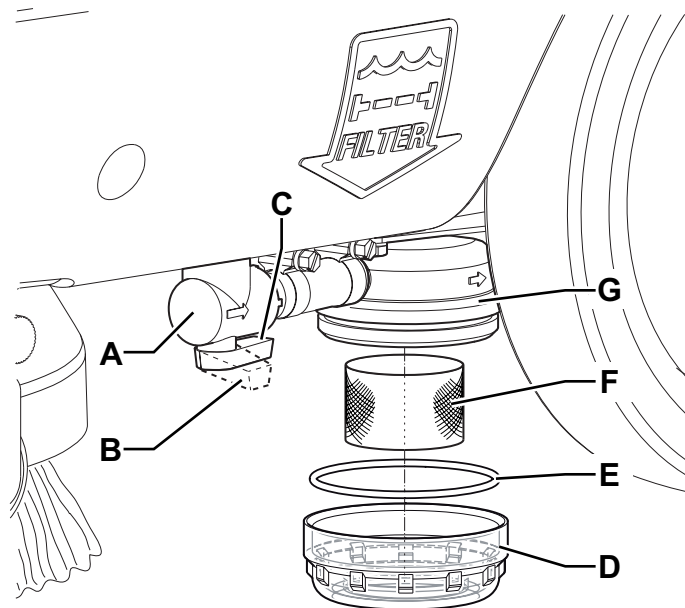

Troubleshooting

Trouble	Possible Causes	Remedy
Small amount of solution or no solution reaches the brush	The tank filter (optional) is clogged/dirty	Clean
	The solution filter is clogged/dirty	Clean
	The solenoid valve (EV1) is faulty or the electrical connection is open	Replace the solenoid valve or repair the electrical connection
	There is dust/debris in the tank or in the detergent hoses, obstructing the solution flow	Clean the tank/hoses
The solution reaches the brush also when the machine is off	The solenoid valve (EV1) is dirty/broken	Clean/replace

Specifications

Descriptions / Model		Advance SC400 17 E		Nilfisk SC400 43 E	
Solution tank capacity		6.0 US gal (23 liters)			
Solution flow	LEDs on	0	1	2	3
	Value	0	0.1 gpm (0.4 lit/min)	0.26 gpm (1.0 lit/min)	0.42 gpm (1.6 lit/min)
Solution valve winding resistance		400 Ω - 115V		900 Ω - 230V	

Squeegee System

Functional Description

The squeegee system cleans the liquid off the floor, which is then collected by the recovery system.

The squeegee is equipped with wheels; the pressure of the blades on the floor depends on a gas spring built in the support, and on the weight of the system.

The squeegee is fastened to the machine by two wing nuts in the squeegee support slots. In case of fixed obstacles, the quick-fit system allows for squeegee to break away from the bracket in order to prevent damage to the squeegee support.

The squeegee support is hinged to the machine which allows the squeegee to turn sideways.

The 2 blades have different hardness and work side:

- Front blade; to be used only on the ruled side forward to convey the water towards the centre of the squeegee.
- Rear blade; to be used only on the smooth side forward to dry and collect water.

Each blade has 2 functional edges that can be used before it needs replacing.


The design and the central duct make it easy for the squeegee to clear the water.

The squeegee system can be lifted and lowered by the pedal.

To lift the squeegee it is also possible to tilt the machine backward until the squeegee is raised.

Component Locations

- Squeegee
- Squeegee blades
- Squeegee holder
- Blade mounting springs
- Squeegee mounting handwheels
- Squeegee lifting/lowering pedal
- Gas spring

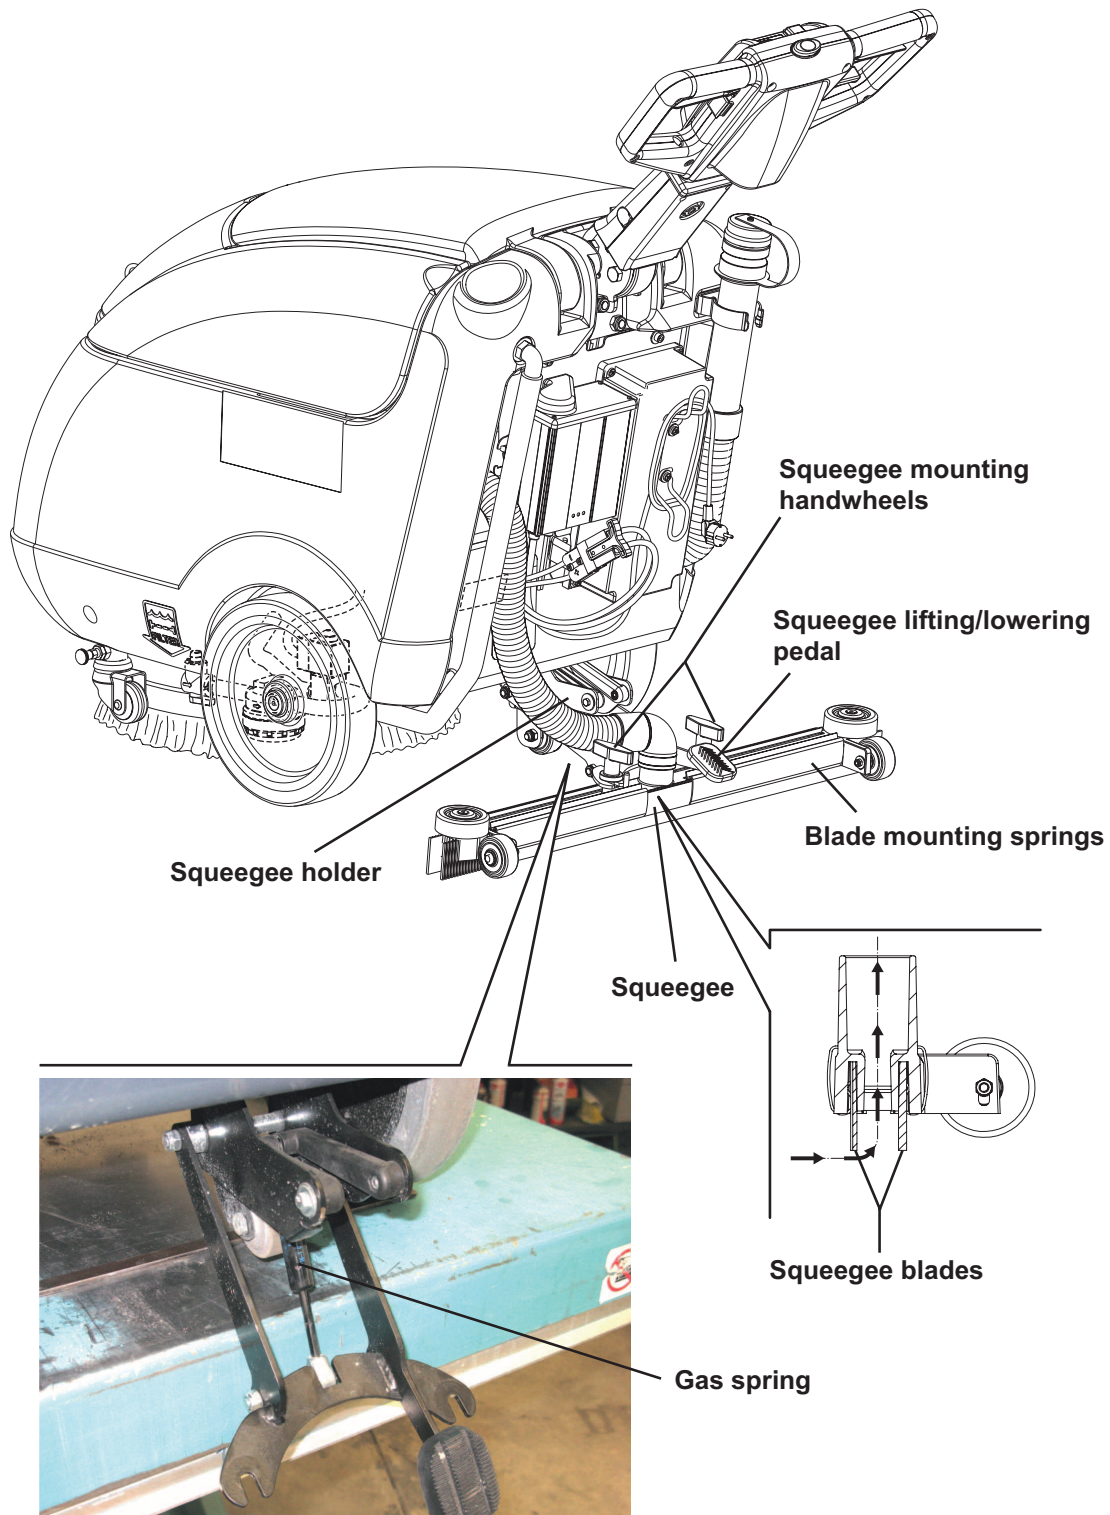


Maintenance and Adjustments

Squeegee Cleaning



Warning! *It is advisable to wear protective gloves when cleaning the squeegee because there may be sharp debris.*

1. Drive the machine on a level floor. Make sure that the machine cannot move independently.
2. Turn the machine program selection knob to “0”.
3. Lower the squeegee with the pedal.
4. Disconnect the vacuum hose (A) from the squeegee (B).
5. Loosen the handwheels (C) and remove the squeegee (B).
6. Wash and clean the squeegee (B). In particular, clean the compartments (D) and the vacuum hole (E) from dirt and debris.
7. Check the front blade (F) and the rear blade (G) for integrity, cuts and tears; if necessary replace them (see the procedure in the following paragraph).
8. Assemble the components in the reverse order of disassembly.

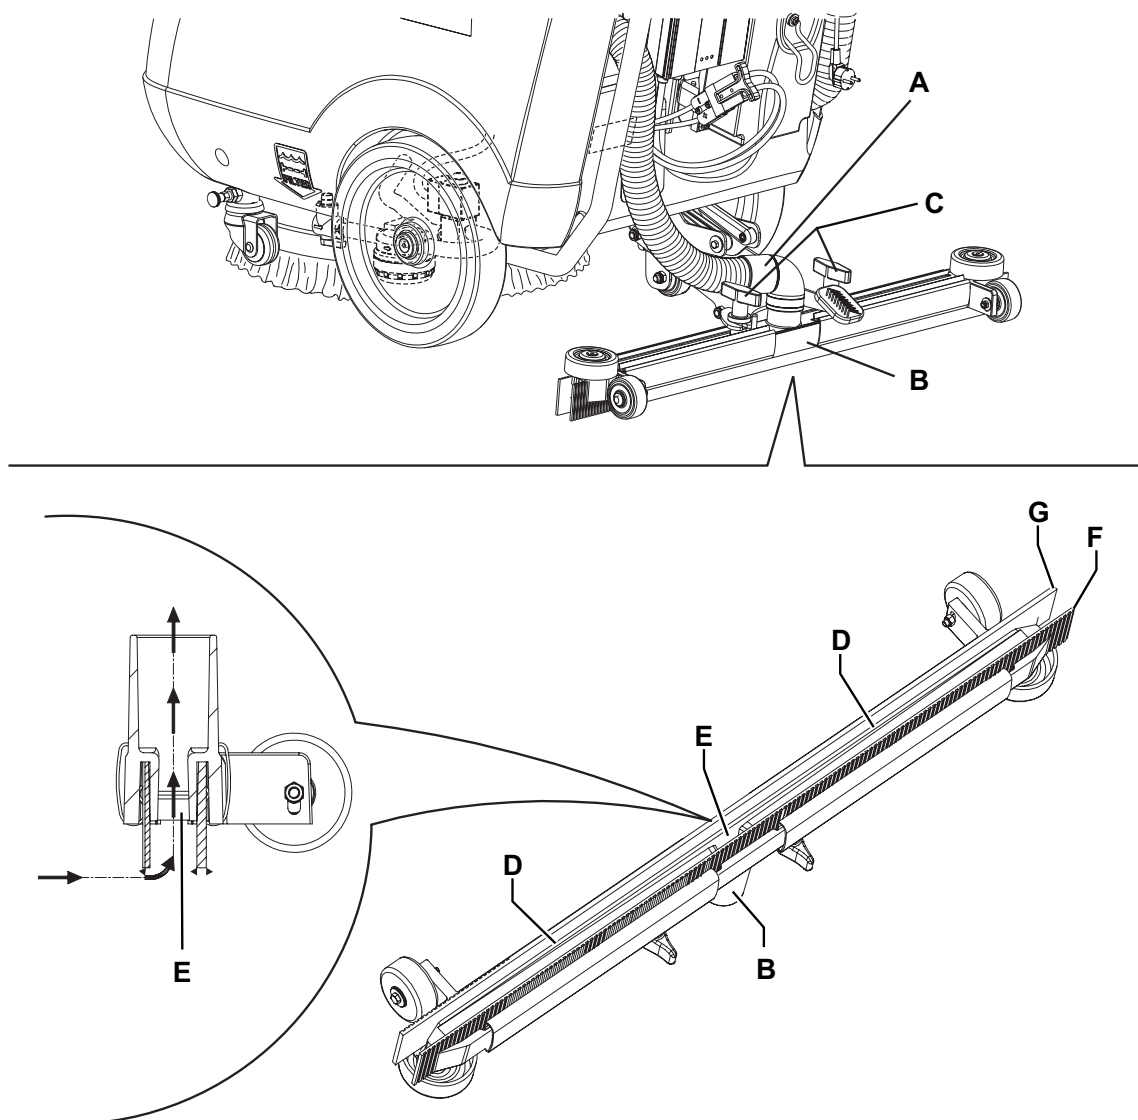


Squeegee Blade Check and Replacement

1. Disassemble and clean the squeegee (see the procedure in the relevant paragraph).
2. Check that the edge (A) of the front blade and the edge (B) of the rear blade lay down on the same level, along their length; otherwise adjust their height according to the following procedure:
 - Remove the mounting springs (C), then adjust the front neutral color brown color blade (D) and the rear neutral color blade (E).
 - Install the mounting springs (C) on the front and rear blades.
3. Check that the front blade (D) and the rear blade (E) are integral and free from cuts and lacerations; if necessary replace them. Also check the front corner (F) of the rear blade (E) for wear; if it is worn, overturn the blade to replace the worn corner with the other one (G), if it is integral. If the other corner is worn too, replace the blade.



Caution! *Mount both front and rear blades with the smooth side (H) toward the internal squeegee side [ruled side outside (I)].*

4. Assemble the squeegee (see the procedure in the relevant paragraph).

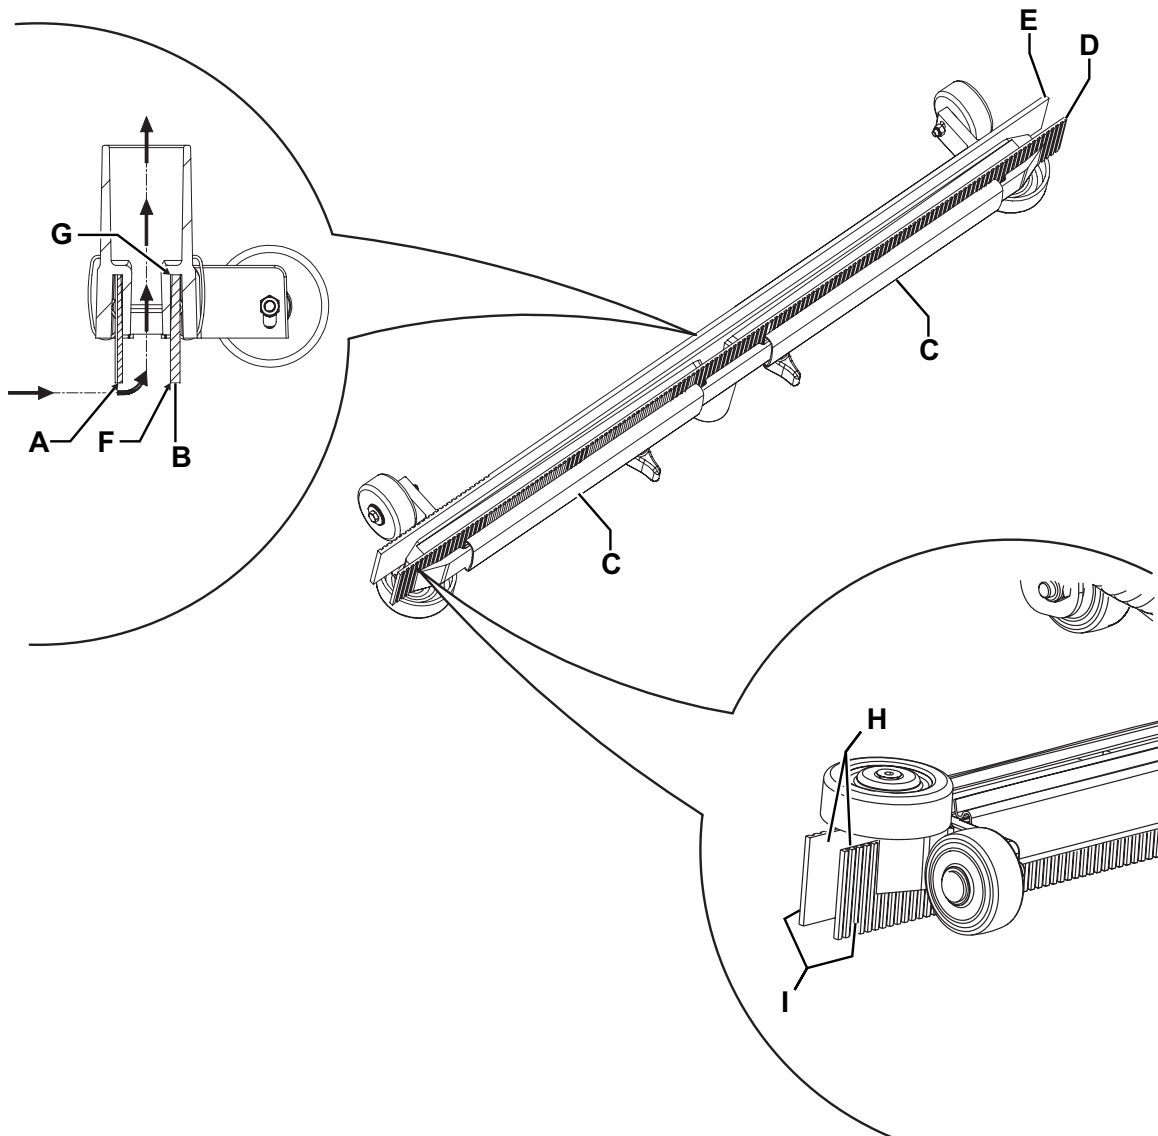

Troubleshooting

Trouble	Possible Causes	Remedy
The recovery water vacuuming is insufficient or there is no vacuuming	The squeegee or the vacuum hose is clogged or damaged	Clean/repair/replace
	There is debris under the blade	Remove
	The squeegee blade edges are torn or worn	Replace
	The gas spring is not efficient	Replace

Removal and Installation

Gas Spring Disassembly/Assembly

Disassembly

1. If possible, place the machine on a hoisting system (or on a floor with a suitable step), in order to fully stretch the gas spring (A) of the squeegee support system (B), beyond the support base of the machine (as shown in the figure).

Make sure that the machine cannot move independently.



2. Turn the machine program selection knob to “0”.
3. Remove the squeegee as shown in Squeegee Cleaning paragraph.
4. Lower the squeegee support system (B) by fully stretching the gas spring (A).
5. Unscrew the nut (C) and remove the relevant screw.

Lower the gas spring (A) and the linkage (D).

6. Unscrew and remove the screw with nut (E).
7. Retrieve the gas spring (F).

Assembly

8. Assemble the components in the reverse order of disassembly.

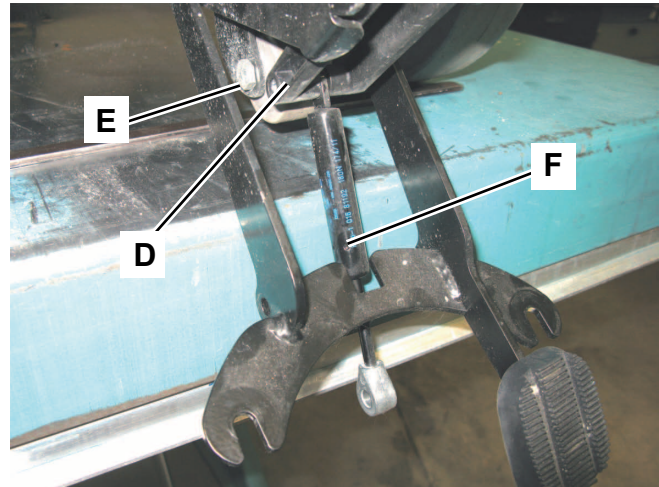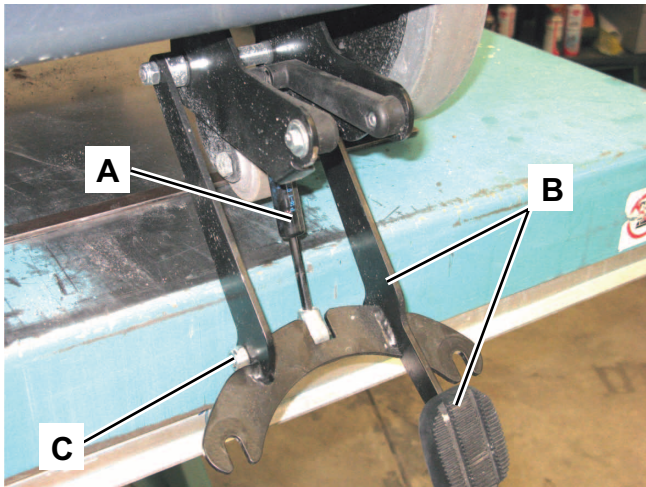

P200072


Specifications

Descriptions / Model	Advance SC400 17 B	Nilfisk SC400 43 B FULL PKG	Nilfisk SC400 43 B
Machine width with squeegee	28.3 in (720 mm)		
Gas spring pressure	40,5 Lb (180 Nm)		

Wheel System, Non-Traction

Component Locations

- Central wheels on fixed axle
- Rear support wheel, when the squeegee is lifted
- Parking wheel
- Parking wheel positioning pin

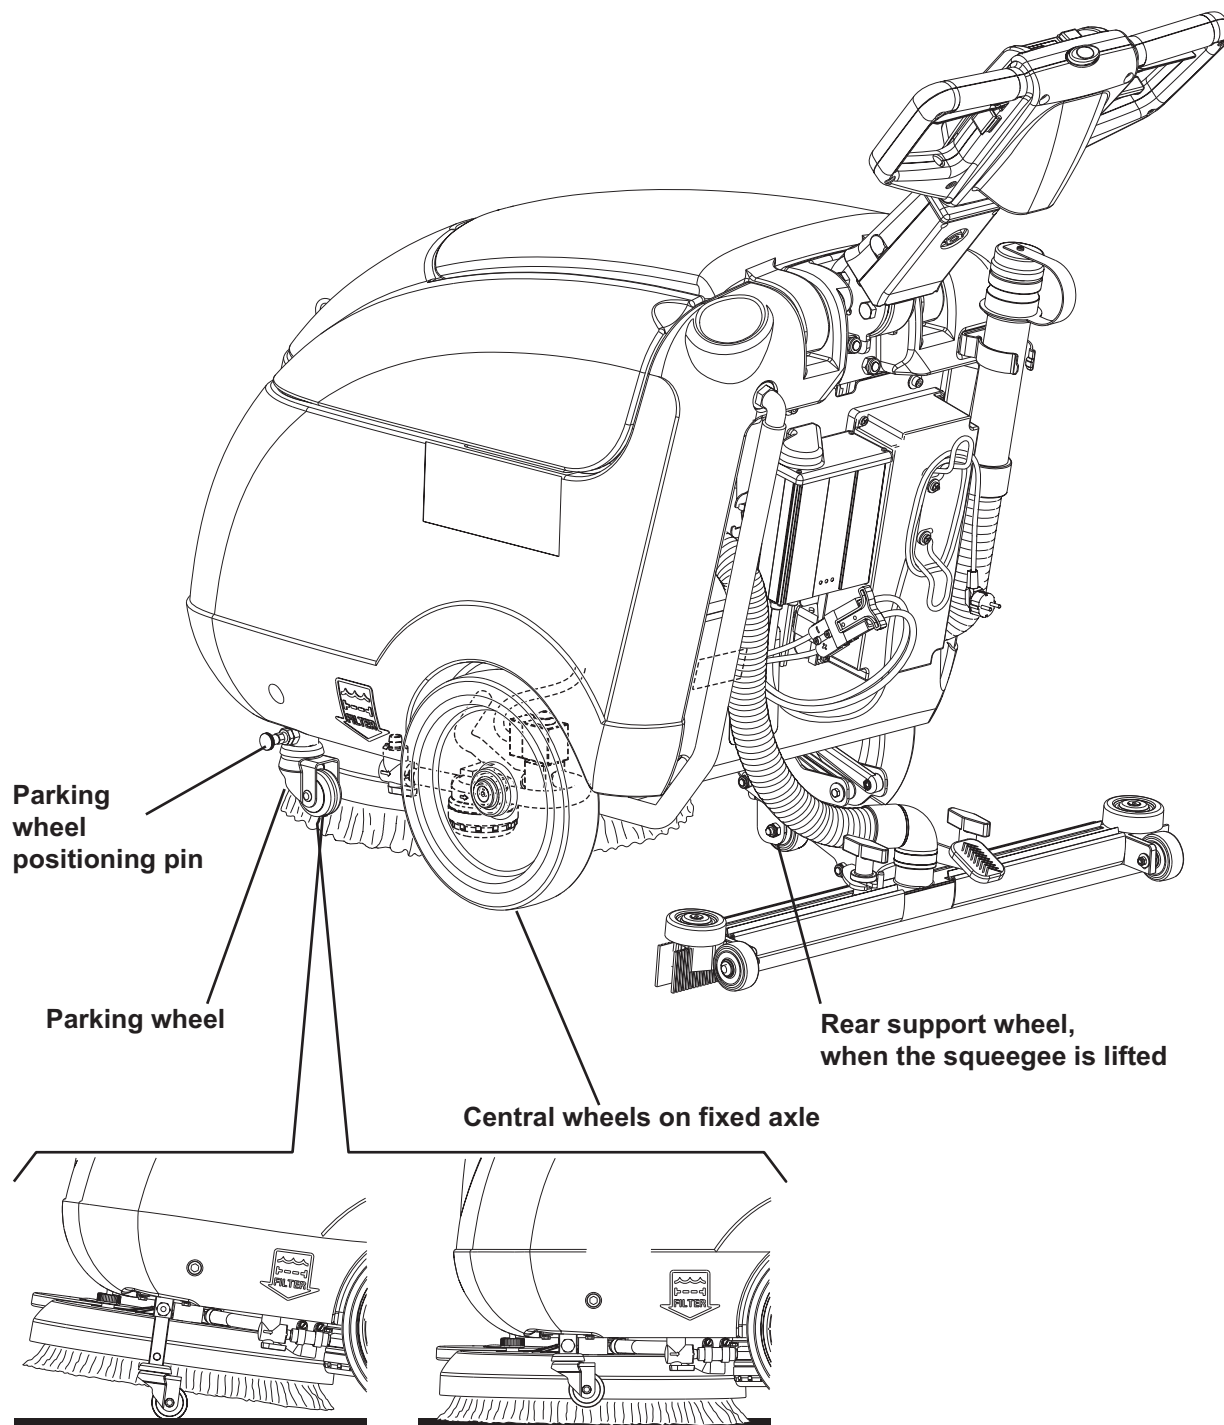

Specifications

Descriptions / Model	Advance SC400 17 B	Nilfisk SC400 43 B FULL PKG	Nilfisk SC400 43 B
Minimum turning radius	29.5 in (750 mm)		
Diameter of wheels on fixed axle	9.8 in (250 mm)		
Wheel pressure on the floor	290 psi (2 N/mm ²)		